



# INSTALLATION INSTRUCTIONS

**PART No.** FB21261, FB21262, FB21246

2020+ Jeep® JT Gladiator  
Chase Rack w/ Window Panel



### REQUIRED TOOLS

- 3mm Allen
- 4mm Allen
- 5mm Allen
- 10mm Wrench
- 13mm Wrench
- 19mm Socket

Thread Locker

Help of a friend

### KIT CONTAINS

- Chase Rack
- MOLLE Window Panel
- M12 Carriage Bolt
- M12 Flat Washer
- M12 Lock Washer
- M12 Hex Bolt
- M8 Button Head Bolt
- M8 Flat Washer
- M8 Lock Washer
- M8 Hex Nut
- M6 Button Head Bolt
- M6 Flat Washer
- M6 Flange Nut
- Aluminum T-Slot Nut
- Foam (Side & Bottom)

### QTY

- 1
- 1
- 4
- 4
- 4
- 4
- 4
- 4
- 4
- 4
- 23
- 23
- 23
- 4
- 2ea

2124600


## INSTALLATION INSTRUCTIONS

**PART No.** FB21261, FB21262, FB21246


**2020+ Jeep® JT Gladiator  
Fishbone Chase Rack w/ Window Panel**

### 1) ASSEMBLE

Each side panel is side specific and can be identified by our Piranha logo pointing towards the front of the vehicle.

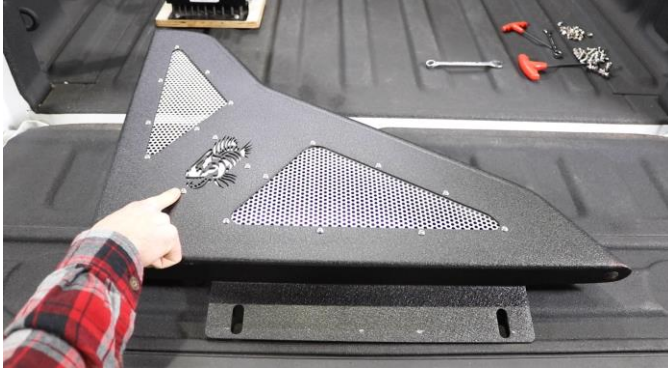

Begin applying the adhesive foam to the panel and panel brackets for both side panels.

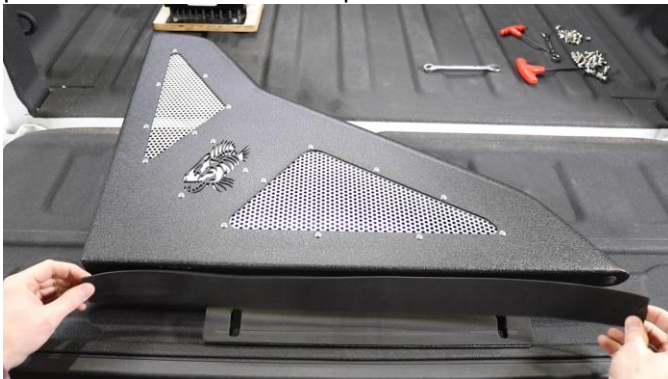

If you wish to paint the accent grates and plates, you may remove them with a 3mm Allen to do so.

Set the cross rail down so that our logo is readable.



Using 4 M8 bolts, 8 flat washers, lock washer, hex nuts, and a 5mm Allen and 13mm wrench, loosely connect the cross rail to the tops of the side panels.



## INSTALLATION INSTRUCTIONS

**PART No.** FB21261, FB21262, FB21246


**2020+ Jeep® JT Gladiator  
Fishbone Chase Rack w/ Window Panel**

- 1) If you DIDN'T purchase the MOLLE panel, you will need to continue to loosely secure the top with 2 M6 bolts, flat washers, and flange nuts with a 4mm Allen and 10mm wrench.




OR

- 2) If you DID purchase the MOLLE panel, begin assembling it by placing the two halves inside the rack wall as shown.

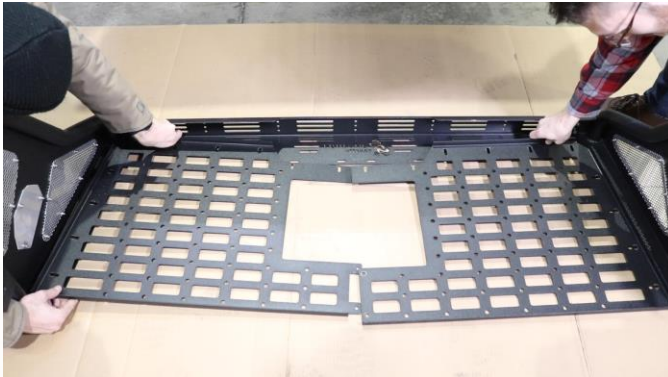

Follow the perimeter and loosely secure every bolt point with M6 bolts, washers, and flange nuts. Including the middle joined plates.

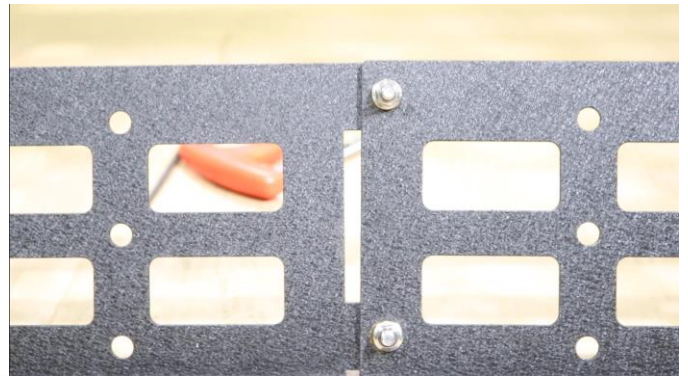

- 2) **INSTALL**

With the help of a friend, lift the rack onto the bed of the vehicle, while ensuring it's flush with the bed wall.



## INSTALLATION INSTRUCTIONS

**PART No.** FB21261, FB21262, FB21246

### 2020+ Jeep® JT Gladiator Fishbone Chase Rack w/ Window Panel


Ensure the rack fits flush against all bed walls, and bring tightening down all bolt locations of the crossrail and MOLLE panel.



Begin securing the rack to the bed. Put 2 of the M12 carriage bolts through the bracket as shown, and rotate it into the side panel bracket, and up into the bed rail. With 2 flat washers, lock washers, and hex nuts, tighten the two brackets down onto the plastic rail with a 19mm socket.



**NOTE:** If your vehicle comes with the Trail Rail, you will need to insert the included (4) T-Nuts, lining them up with each bracket.

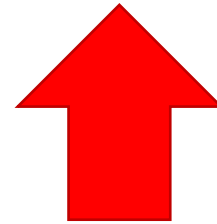

Use the included Hex bolts, lock washers, flat washers, and thread locker and secure the Bed Rack down into the T-Nuts.

**ENJOY YOUR NEW FISHBONE OFFROAD CHASE RACK!**

