



INSTALLATION INSTRUCTIONS

PART No.

FB22136

Jeep® '07-'18 JK Wrangler
D-Ring Frame Mounts



REQUIRED TOOLS

- 21mm Socket
- 22mm Wrench

KIT CONTAINS

- Nut Plate
- M14 Bolt
- M14 Nyloc Nut
- M14 Washer
- 28mm Washer

QTY

- 2
- 4
- 2
- 4
- 2

1) REMOVE YOUR REAR BUMPER

Remove your existing rear bumper according to the manufacturer's instructions.



2) INSERT THE MOUNTS

Place the mounts into the frame rail slots such that the bolt holes visually line up.



3) INSTALL HARDWARE


Starting with the inner most bolt hole, insert one of the included 21mm bolts. On the inside of the frame, under the vehicle, secure the bolt with one of the included washers and nyloc nuts.



Insert another bolt into the remaining hole. In the slot shown below, insert one of the included nut plates such that the tab sticks out. Screw the bolt into the plate.



With a 21mm socket and a 22mm wrench, tighten both bolts, and repeat on the opposite side.

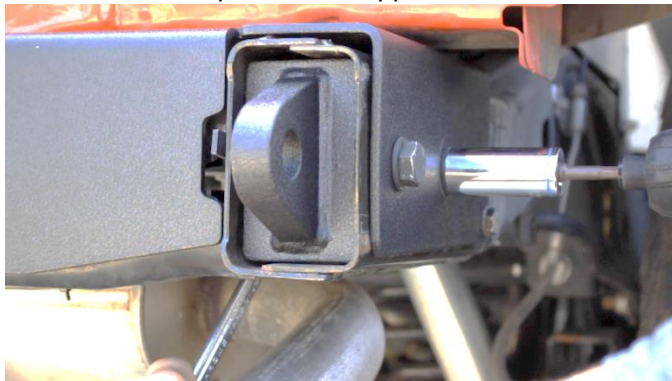

4) **INSTALL D-RINGS**

Secure the included D-Rings into the mounts.



5) **ENJOY YOUR NEW FISHBONE OFFROAD D-RING FRAME MOUNTS**