

## INSTALLATION INSTRUCTIONS


**PART No.**

**FB23029R**

**Jeep® TJ Wrangler 1997-2006**  
**Rear Tube Fenders**



**REQUIRED**

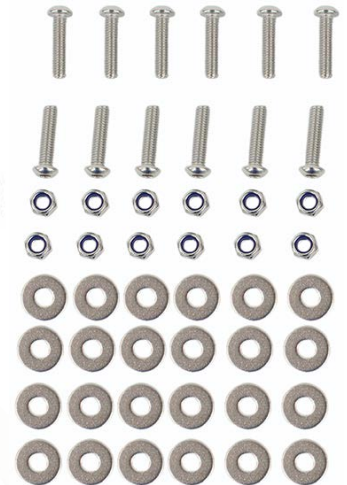

**REQUIRED TOOLS**

- Drill
- ¼" Drill Bit
- 4mm Allen
- 10mm Socket
- 10mm Wrench

**KIT CONTAINS**

- Rear Fenders (Driver and Pass)
- M6 Allen Head Bolts
- M6 Flat Washer
- M6 Nyloc

**QTY**

- 1 EA
- 10
- 20
- 10



## INSTALLATION INSTRUCTIONS

**PART No.**

**FB23029R**

**Jeep® TJ Wrangler 1997-2006  
Rear Tube Fenders**


**1) REMOVE OEM FLARES**

Unbolt and remove your factory fender flares.



**2) ENLARGE FACTORY BOLT HOLES**

Lift your new fender to the Jeep and align the holes with the holes on your Jeep. Using a marker, mark the holes that will need to be drilled out to accommodate the 6mm bolts.

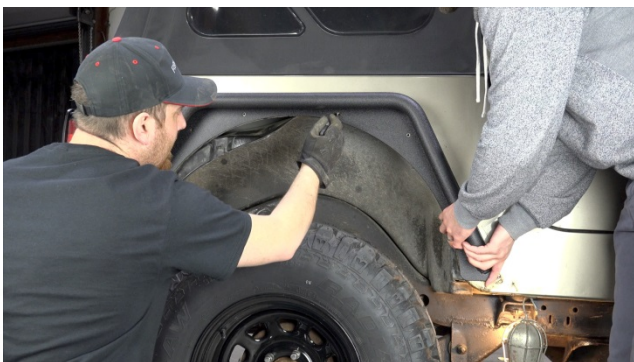

**NOTE**

In the factory hole locations that have nut inserts, you can either drill these out to accommodate the new hardware, or reuse your factory hardware.

Drill out the marked factory holes using a ¼" drill bit.



**3) INSTALL YOUR NEW TUBE FENDERS**

If your inner fender liner is not already pulled down from removing your factory flares, you will need to do this to gain access to tighten the hardware.

Position your new fender on the body. Insert your OEM or supplied bolts and washers through your new fenders and the body tub.



Align your new fenders with your Jeep's body and tighten with the supplied washers and nyloc nuts.

**4) REINSTALL YOUR INNER FENDER**

**5) REPEAT ALL STEPS FOR OPPOSITE SIDE**

**6) HIT THE TRAILS AND ENJOY YOUR NEW TUBE FENDERS!**