


INSTALLATION INSTRUCTIONS

PART No.

FB25033 & FB25034

Jeep® JK Wrangler JK Grab Handles

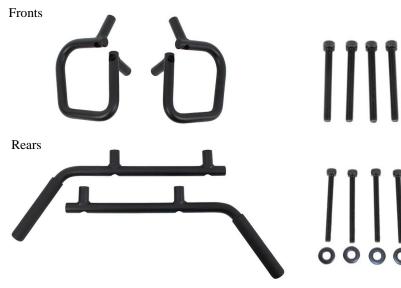



FB25033: Front Grab Handles Only FB25034: Front and Rear Grab Handles

REQUIRED TOOLS	KIT CONTAINS	QTY
6mm Allen Key	Front Grab Handle	2
13mm Socket	M8 Bolt	4
*5mm Allen Key	*Rear Grab Handle	2
*10mm Socket	*M6 Bolt	4
	*M6 Flat Washer	4

^{*} For FB25034 only

1) INSTALL FRONT GRAB HANDLES (FB25033 & FB25034)

CAUTION:

These grab handles require using tools very close to your windshield. Use extreme caution when installing to ensure you do not damage your windshield while installing. If needed, a piece of cardboard can be used to help protect your windshield from an accidental slip of the wrench.

On the passenger side, begin by removing the Apillar bolt and roof bolt shown:



NOTE:

The factory uses a thread sealant on these bolts. It is best to run the supplied hardware in and out of the holes a few times to clear the threads and make the install easier.

2503300



INSTALLATION INSTRUCTIONS

PART No.

FB25033 & FB25034

Jeep® JK Wrangler
JK Grab Handles

Insert the grab handle into the A-pillar hole first, then swing the top of the handle up and into position.

Loosely insert the roof bolt first. Only install a few threads to keep the handle loose when installing the second bolt. Again, note the factory thread sealant may make tightening this bolt by hand difficult. Ensure you do not cross-thread the bolt.

Install the second bolt. Moving the handle around slightly will help align this second bolt and get it started.



Once both bolts have been loosely installed, tighten each one a few turns at a time until they are fully tightened.

Repeat these steps on the driver side.

2) INSTALL REAR GRAB HANDLES (FB25034 ONLY)
Remove the two bolts located in the picture below using a 10mm socket:



Using the supplied washer and M6 bolt, install your grab handle as shown. Tighten both bolts.



Repeat steps on opposite side.

3) ENJOY YOUR NEW FISHBONE OFFROAD GRAB HANDLES!