

# FISHBONE OFFROAD



## INSTALLATION INSTRUCTIONS

**PART No.**

**FB25137**

Jeep® '07-'18 JK Wrangler  
**Tailgate Table**



### REQUIRED TOOLS

½" Drill Bit  
Drill  
3mm Allen  
6mm Allen  
8mm Socket  
13mm Socket  
M10 Nutsert Tool  
Marker  
Spirit Level  
Friend

### KIT CONTAINS

M10 Button Head Bolt  
M3 Button Head Bolt  
M10 Nutsert  
M3 Nyloc Nut  
M10 Washer

### QTY

4  
4  
4  
4  
4

Note: There are two different methods of installation: On the **inner tailgate panel**, and on the **outer tailgate panel**. Please read the instructions carefully before beginning to help you decide where you want to install the table and what tools you will need for the process.

#### 1) ASSEMBLY

Assemble the table's cup holders. On the bottom tray, and with a 3mm Allen and 8mm socket, install the two cup holder brackets with 2 bolts and 2 washers each. We recommend installing the bolts such that the head faces the user, if the table were open and being used.



#### 2) [OUTER] REMOVE YOUR TIRE CARRIER

Remove your vehicles tire carrier while retaining the (8) 13mm retaining bolts, as they will be reused in the following step.



#### 3) [OUTER] INSTALL THE TABLE

Hold the table up to the tailgate and align it with the 8 carrier bolt holes. Loosely secure it by reinstalling the 8 carrier bolt. Tighten them down with a 13mm socket. Be careful to not overtighten as it may bend and warp the tailgate panel.




#### 4) [INNER] REMOVE WIRE PANEL

Open your tailgate and remove the plastic wire retaining panel by gently and evenly pulling at the body clips.



**5) [INNER] MARK THE PILOT HOLES**

Open the table and hold it up against the tailgate. Using a spirit level and a marker, mark the (4) hole locations of where you'd like the nutserts to be installed. We recommend it be as centered and level on the tailgate as possible.

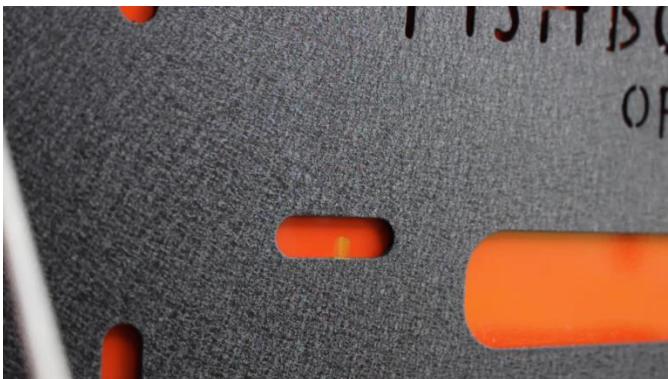


**6) [INNER] DRILL**

Begin drilling starting with pilot holes and stepping up to a 1/2" bit.



**7) [INNER] INSTALL NUTSERTS**

With an M10 Nutsert Tool, install the included nutserts into the drilled holes.

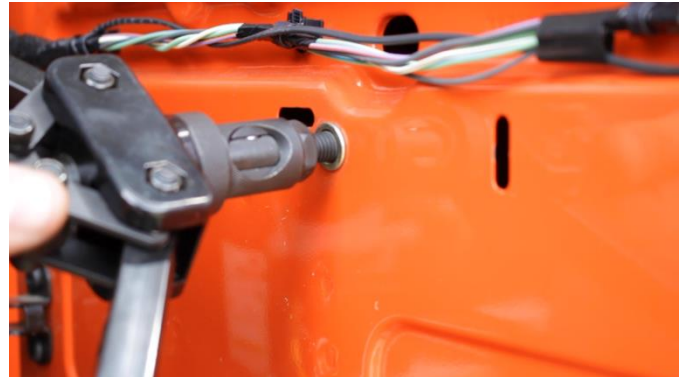

**8) [INNER] INSTALL TABLE**

Begin securing the table with the included M10 bolts and washers with a 6mm Allen.



**9) ENJOY YOUR NEW FISHBONE OFFROAD JK TAILGATE TABLE!**

