



INSTALLATION INSTRUCTIONS


PART No.

FB25478

**2018+ Jeep® JL Wrangler &
2020+ Jeep® JT Gladiator
Front Door Molle Pocket Panels**



VIDEO AVAILABLE

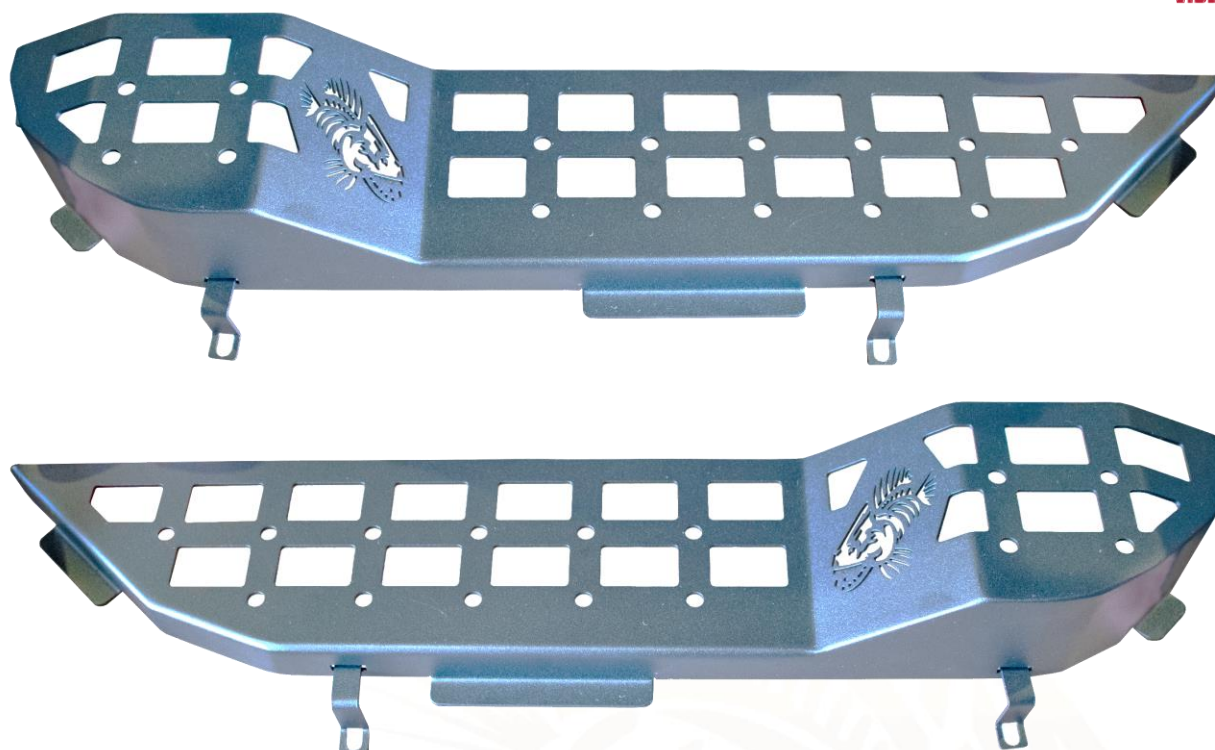

REQUIRED TOOLS

Pliers
Something to pry with
T20 Torx Bit
Clippers

KIT CONTAINS

Drivers Side Molle Pocket Panel
Passengers Side Molle Pocket Panel
Hold Down Bracket

QTY

1
1
4

2018+ Jeep® JL Wrangler & 2020+ Jeep® JT Gladiator Front Door Molle Pocket Panels

1) PREPARING FOR YOUR INSTALL

With a T20 torx bit, remove the two screws located under your doors net. Set your screws aside.

After removing the screws, you have the option to either remove or keep your doors netting. If you decide to remove your netting, there are two different ways you can do this:

Option 1: For non-destructive removal of your netting, pry out the panel and release the elastic band from the slot retaining it. We used a screwdriver with tape on the end.



Option 2: If you do not plan to keep your netting, you can use clippers to remove the netting around your doors trim. This option allows you to leave the elastic band.



Then, take a pair of pliers or something to pry with and gently remove the net from around the trim on your door.

2) INSTALL YOUR MOLLE POCKET PANELS

Take your molle pocket panel and slide it behind the trim on your door.





INSTALLATION INSTRUCTIONS

PART No.

FB25478

**2018+ Jeep® JL Wrangler &
2020+ Jeep® JT Gladiator
Front Door Molle Pocket Panels**

Once in place, take your two hold down brackets and hook them into the slots on the bottom of your molle pocket panel. The holes on your brackets should line up with where the factory screws installed.



Once you have your brackets aligned, take the two factory screws and screw them back into place using a T20 torx bit.



3) ENJOY YOUR NEW FRONT DOOR MOLLE POCKET PANELS!

