



INSTALLATION INSTRUCTIONS

PART No.

FB25479

**2018+ Jeep® JL Wrangler &
2020+ Jeep® JT Gladiator
Rear Door Molle Pocket Panels**



REQUIRED TOOLS

Pliers
Something to pry with
T20 Torx Bit
Clippers

KIT CONTAINS

Drivers Side Molle Pocket Panel
Passengers Side Molle Pocket Panel
Hold Down Bracket

QTY

1
1
2

2018+ Jeep® JL Wrangler & 2020+ Jeep® JT Gladiator Rear Door Molle Pocket Panels

1) PREPARING FOR YOUR INSTALL

With a T20 torx bit, remove the screw located under your doors net. Set your screws aside.



After removing the screws, you have the option to either remove or keep your doors netting. If you decide to remove your netting, there are two different ways you can do this:

Option 1: For non-destructive removal of your netting, pry out the panel and release the elastic band from the slot retaining it. We used a screwdriver with tape on the end.



Then, take a pair of pliers or something to pry with and gently remove the net from around trim on your door.





INSTALLATION INSTRUCTIONS

PART No.

FB25479


2018+ Jeep® JL Wrangler & 2020+ Jeep® JT Gladiator Rear Door Molle Pocket Panels

Option 2: If you do not plan to keep your netting, you can use clippers to remove the netting around your doors trim. This allows you to leave the elastic band.


Once you have your brackets aligned, take the factory screw and screw it back into place using a T20 torx bit.

2) **INSTALL YOUR MOLLE POCKET PANELS**

Take your molle pocket panel and slide it behind the trim on your door.

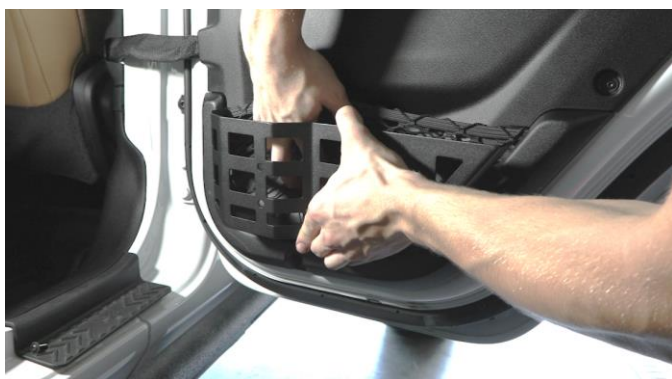

Once in place, take your hold down bracket and hook them into the slots on the bottom of your molle pocket panel. The hole on your bracket should line up with where the factory screw installs.

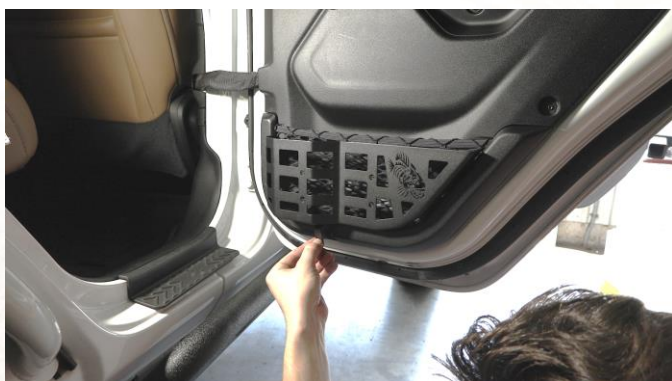

3) **ENJOY YOUR NEW REAR DOOR MOLLE POCKET PANELS!**

