





INSTALLATION INSTRUCTIONS

PART No.

FB25480

**2018+ Jeep® JL Wrangler &
2020+ Jeep® JT Gladiator
Center Console Molle Panels**

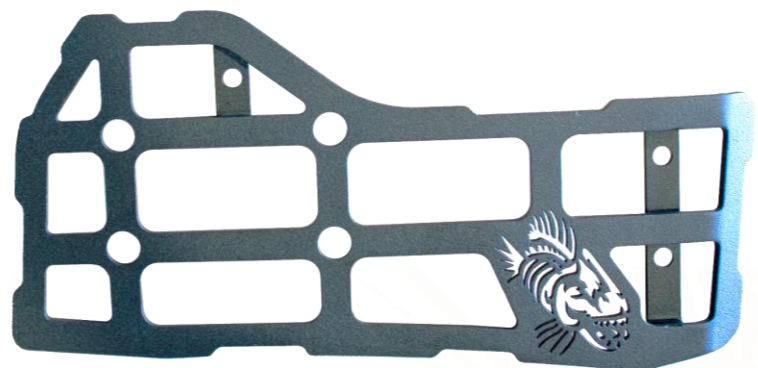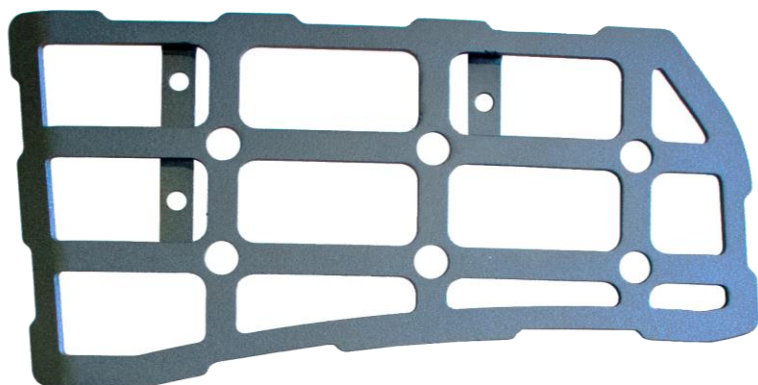

REQUIRED TOOLS

Ratchet
Punch or Marker
10mm & 11mm Wrench
5/32" Hex Bit
11/32" Drill Bit or a
Step Drill Bit

KIT CONTAINS

Drivers Side Molle Panel
Passengers Side Molle Panel
M6 Washer
M6 Button Head Hex Drive Screw
M6 Flange Nut
M6 Rivet Nut

QTY

1
1
6
6
6
2

2018+ Jeep® JL Wrangler & 2020+ Jeep® JT Gladiator Center Console Molle Panels

1) PREPARING FOR YOUR INSTALL

Hold your molle panel up to your center console and line up the top of your molle panel with the seam on the plastic panel.




Once you have your molle panel in place, take a punch or marker and mark where the molle panels holes will be on the plastic panel.



2) DRILL OUT YOUR HOLES

Once you have made your markings, take your 11/32" drill bit and drill a hole in each of your marked locations.

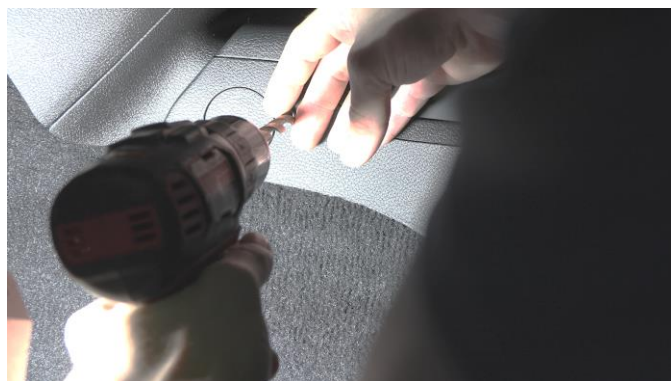

3) INSTALL YOUR HARDWARE

After drilling your holes, align your molle panel with the holes on your center console.

For ease of install, we provide a rivet nut for the upper-most rear hole. If you prefer not to use the rivet nut, a normal nut is provided for this location also.





INSTALLATION INSTRUCTIONS

PART No.

FB25480

**2018+ Jeep® JL Wrangler &
2020+ Jeep® JT Gladiator
Center Console Molle Panels**

After the rivet nut is secured into the center console plastic, you can move to the front hole where you will take one of your included nuts and slide it under your plastic panel where your screws will install.

Once you have your nut in place, take one of your included washers and screws and insert it into the hole with the nut. Tighten it with a 10mm wrench and 5/32" hex bit. Repeat steps 1-3 for the passenger side.



4) ENJOY YOUR NEW CENTER CONSOLE MOLLE PANELS!