



## INSTALLATION INSTRUCTIONS

**PART No.**

**FB25481**

**2018+ Jeep® JL Wrangler &  
2020+ Jeep® JT Gladiator  
Adjustable Dead Pedal**



### REQUIRED TOOLS

19mm Wrench  
18mm Socket  
13mm Deep-well Socket  
Ratchet

### KIT CONTAINS

Dead Pedal Mount  
Dead Pedal  
M12 Washer  
M12 Hex Head Screw  
M12 Hex Nut

### QTY

1  
1  
8  
4  
4

## 2018+ Jeep® JL Wrangler & 2020+ Jeep® JT Gladiator Adjustable Dead Pedal

### 1) ASSEMBLE YOUR DEAD PEDAL

Begin by assembling the pedal to your mount. To do this, take your pedal and line up the holes.





Once you have your holes aligned, screw on the included hardware. On the right side of the pedal, leave the nuts on the first few threads of the bolt. Tighten the left-side bolts to the point where the pedal does not move freely, but can be adjusted by hand. You can proceed to tighten the right-side bolts. Once again, make the bolts tight enough to where the pedal does not move freely, but can be adjusted by hand.



### 2) INSTALL YOUR DEAD PEDAL

After assembling your pedal, we will need to remove the nuts and washers off the two bolts located on the driver's side floorboard using a 13mm socket.

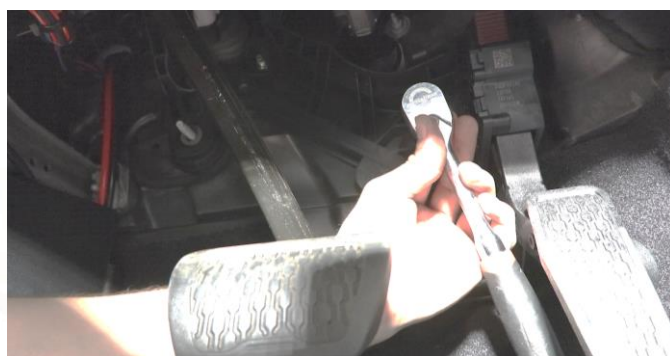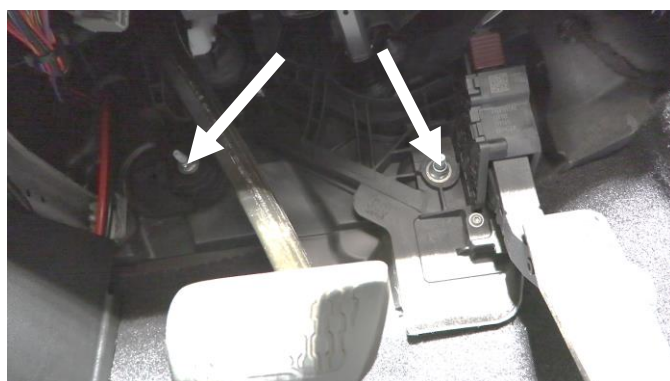

After removing the washers and nuts, take your assembled pedal and slide it onto the floorboard's bolts.







## INSTALLATION INSTRUCTIONS

**PART No.**

**FB25481**

**2018+ Jeep® JL Wrangler &  
2020+ Jeep® JT Gladiator  
Adjustable Dead Pedal**

Reinstall the hardware with a 13mm socket, securing your mount to the floorboard.



**3) ENJOY YOUR NEW ADJUSTABLE DEAD PEDAL!**



Then, adjust your pedals placement to your liking. Once you have your pedal sitting where you like it, tighten the bolts on the right side of your pedal with an 18mm socket and 19mm wrench. Due to favoring the left side of the mount in the assembly step, tightening the right-side bolts should be enough to secure the pedal.

