



#### REQUIRED TOOLS

3mm Allen  
10mm Socket  
(2) 8mm Wrench  
Drill  
9/32" Bit

#### RECOMMENDED TOOLS

M5 Nutsert Tool

#### KIT CONTAINS

Rear Inner Fender Set (Driver/Passenger)  
Front Inner Fender Set (Driver/Passenger)

M5 Flange Nut	20
M5 Threaded Nutsert	4
M5 Hex Nut	2
M5 10mm Button Head Bolt	14
M5 16mm Button Head Bolt	20
M5 25mm Hex Bolt	2
M5 10mm Washer	34
M5 15mm Washer	4

#### QTY

#### 1) PREPARE YOUR VEHICLE

Remove your vehicle's existing inner and outer fenders. Please visit Fishbone Offroad on YouTube for instructions on how to remove your OEM parts.



Within the driver side **rear** well, and with a 10mm socket, remove your fuel filler neck bracket bolt. Gently pull the neck loose and push it down below the stud. The passenger side doesn't need to be changed.



Within the driver and passenger **front** wells, and with a 9/32" drill bit, expand the two frame holes that are shown below.




With either an M5 Nutsert Tool **OR** (1) 25mm bolt, M5 hex nut, 10mm washer, and (2) 8mm wrenches, install an included nutsert into each hole.




#### 2) ASSEMBLE YOUR FENDERS

Loosely assemble your rear fender top and bottom using (7) 10mm button head bolts, washers, and flange nuts. With a 3mm Allen key, ensure the grate and plate hardware is secured before continuing.

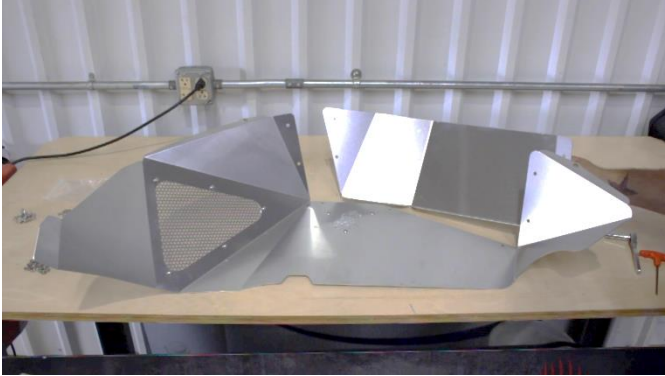

**OPTIONAL 1:** The accent grates and plates can be removed with a 3mm Allen key to be painted separately.

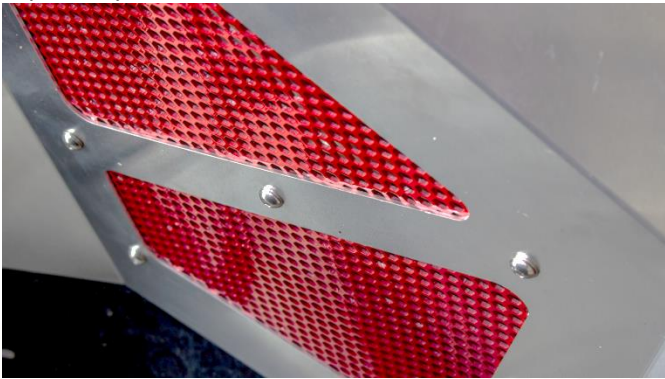

most nutsert will need to be drilled out with a 3/8" drill bit.



#### 3) INSTALL YOUR REAR FENDERS

Slide your inner fenders into the well and align the holes behind the body. With a 3mm Allen key and (3) 16mm bolts and washers, secure your fenders to the body.



**OPTIONAL 2:** If your vehicle has Fishbone Offroad Tube Fenders (sold separately) installed, the rear


Tighten all visible bolts with a 3mm Allen key.



Repeat on the opposite side.

Secure the top with a 16mm bolt, washer, and nut.

Secure the bottom with (2) 16mm bolts and 15mm washers into the frame nutserts previously installed.

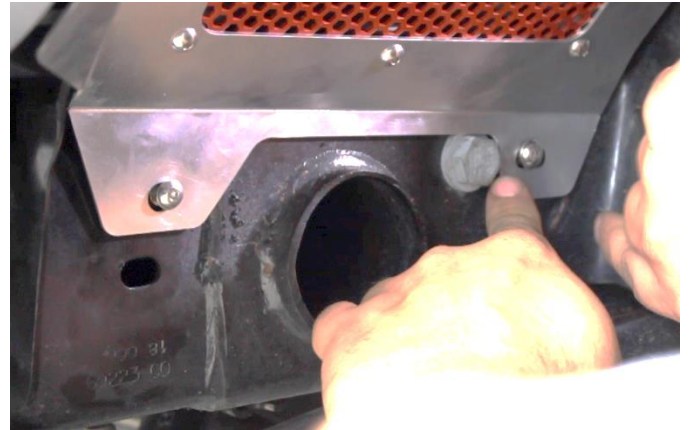

Tighten all visible bolts with a 3mm Allen key.

Repeat on the opposite side.

#### 4) **INSTALL YOUR FRONT FENDERS**

Starting with the rear, logo-less section, begin securing the fender to the body with (2) 16mm bolts and washers.



With (2) 16mm bolts and washers, secure the front section to the rear section rivets.



#### 5) **REINSTALL YOUR OUTER FENDERS**

Reinstall your outer fenders according to the manufacturer's instructions.

**OPTIONAL:** If your vehicle has Fishbone Offroad Tube Fenders, the rear inners and outers will share the rear most bolt hole. Using an M8 bolt and washer, secure the two to the body.



Repeat on the opposite side.

6) **ENJOY YOUR NEW FISHBONE OFFROAD  
ALUMINUM INNER FENDERS!**

