


Jeep® JK Wrangler Front Fullwidth Winch Bumper - Factory Fogs*

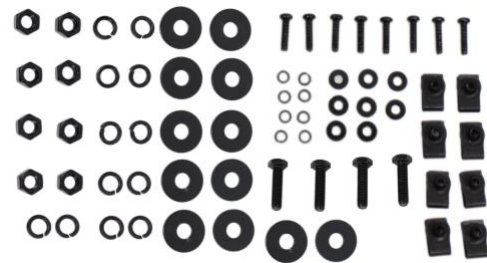

REQUIRED TOOLS

16mm Wrench/Socket
Screw Driver – Philips

KIT CONTAINS

M10 Lock Washer
M10 Flat Washer
M10 Nut
M4 Card Holder Nut
M4 Screw
M4 Lock Washer
M4 Flat Washer
D-Rings

QTY

8
8
8
8
8
8
8
2



*factory fog lights not included

Jeep® JK Wrangler Front Fullwidth Winch Bumper - Factory Fogs*

1) REMOVE YOUR FACTORY BUMPER

Begin by removing your factory bumper. Ensure you disconnect your factory fog lights before you pull your bumper away.

Remove your factory fog lights carefully to be reused in the new bumper.

2) PREP YOUR NEW BUMPER FOR INSTALL

INSTALL YOUR FAIRLEAD AND WINCH

We recommend installing the fairlead first as you'll have access to the bolts at this time. Follow the instructions that came with your winch to install the fairlead and winch body to the pre-drilled holes on your new bumper.



INSTALL FACTORY FOG LIGHTS

If you wish to run your factory fog lights in your new bumper, install them using the M4 card holder nuts. These will be installed on the bumper's brackets. Use the M4 pan head screws and washers to secure each fog light in place.



3) INSTALL YOUR BUMPER

2 PERSON LIFT



WITH THE WEIGHT OF THE WINCH AND BUMPER, IT IS HIGHLY ADVISED TO HAVE HELP WHEN INSTALLING THE BUMPER!



With the help from a second pair of hands, lift the bumper up to the frame of the Jeep and insert the bumper studs into the frame. Using one (1) M10 nut, lock washer, and flat washer per stud, secure the bumper to the Jeep.





INSTALLATION INSTRUCTIONS

PART No.

FB22068

**Jeep® JK Wrangler
Front Fullwidth Winch Bumper - Factory Fogs***

4) MOUNT THE SUPPLIED D-RINGS.



5) RUN YOUR WIRING

Reconnect your factory fog lights and wire your winch following the manufacturer's instructions.

6) ENJOY YOUR NEW FISHBONE OFFROAD BUMPER!

*factory fog lights not included