

Installation Instructions:

Kit#: **1-1209**

FRONT TRACK BAR BUSHING KIT

JEEP JK WRANGLER 07-11



1-888-PROTHANE
3560 Cadillac Ave., Costa Mesa, CA 92626

PARTS LIST:

PART#:	DESCRIPTION	QTY:
19-1750-001	TEFLON LUBE 5 GRM TUBE, PRINTED	2
SLV-61058	.875 X .563 X 1.600" GOLD ZINC	2
SLV-61059	1.563" X .120 X 1.00" GOLD ZINC	1
SLV-61060	1.450" X .120 X 1.00" GOLD ZINC	1
U-72001	JEEP JK 07-11 TRCKBAR BUSH-FRAME-	1
U-72002	JEEPJK TRACK BAR BUSH AXLE SD	1



Please refer to a factory service manual before any disassembly or reassembling of your vehicle for proper instructions. Check service manual to ensure proper torque specs during installation.

NOTE:

- Prothane bushings generally do **NOT** meet in the center. The "crush" or amount the bolt can be tightened is determined by the length of the sleeve.
- For all articulating bushings, make sure to apply SUPER GREASE (supplied) to **ALL SURFACES** of bushings that contact metal.
- For all stationary bushings, we recommend applying a light coat of lithium or teflon grease (not supplied) to OD and ID of bushings to aid installation.
- **REUSE** all factory hardware unless replacement pieces are supplied.

****Prothane Motion Control highly recommends this and all our polyurethane suspension kits be installed by a qualified technician.****

INSTALLATION:

****NOTE:** All factory bushings, inner sleeves, and outer shells **MUST BE REMOVED** before installing new PROTHANE bushings.**

REMOVAL:

- SUPPORT vehicle on jack stands or lift.
- UNINSTALL front track bar from vehicle (refer to factory service manual for proper procedure).


PREPARATION:

- PRESS OUT all old bushings, including inner sleeves and outer shells from track bar using hydraulic press.
- NOTE: Be sure all bores are clean and free of burs and rubber material before installing urethane bushings.

INSTALL:

- PRESS IN supplied shells into track arm with approximately equal stick out on both sides (SEE ASSEMBLY VIEW).
- INSTALL Prothane polyurethane bushings after applying supplied grease to all surfaces contacting metal. INSTALL steel inner sleeves after applying grease to OD of sleeves and flanged faces of bushings (SEE ASSEMBLY VIEW).
- REINSTALL track arm onto vehicle (refer to factory service manual for proper procedure).
- TORQUE all fasteners to factory specifications.

Assembly View:

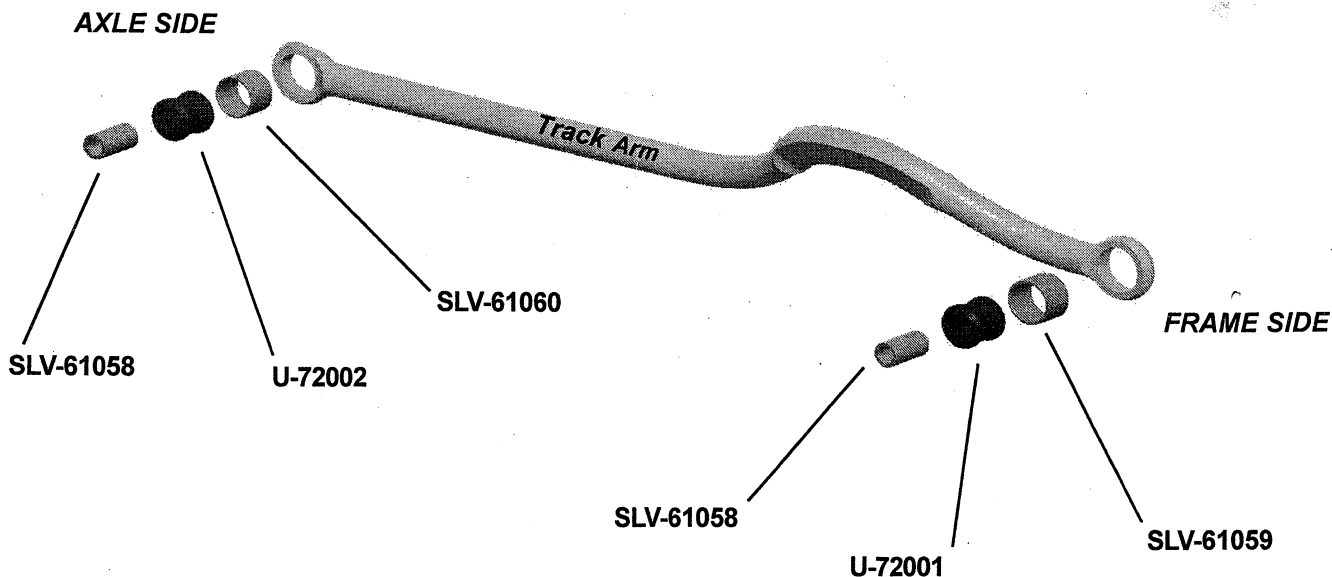

****After installation of Prothane polyurethane bushings, it is recommended to have the wheels re-aligned at a qualified service center. DO NOT HESITATE TO GET THIS DONE, AS PREMATURE TIRE WEAR CAN RESULT.****