

INSTALLATION INSTRUCTIONS

PART No.

FB22088

**Jeep® JL Wrangler
Front Mid-Width Winch Bumper**




BUMPER INSTALLATION HARDWARE



FOG LIGHT INSTALLATION HARDWARE



FOG LIGHT HARDWARE USAGE

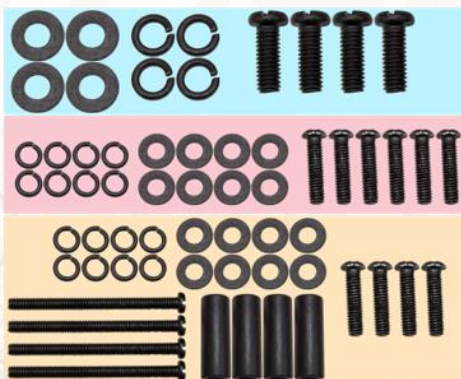

JL LED FOG LIGHT HARDWARE

JL HALOGEN FOG LIGHT HARDWARE

DO NOT USE FOR JL

(Diagram 1)

*factory fog lights not included

2208800



INSTALLATION INSTRUCTIONS

PART No. FB22088

**Jeep® JL Wrangler
Front Mid-Width Winch Bumper**

REQUIRED TOOLS

17mm Wrench/Socket
Screw Driver – Philips

KIT CONTAINS

	QTY
M10 Hex Nut	8
M10 Flat Washer	8
M10 Lock Washer	8
M6 Screw	4
M6 Flat Washer	4
M6 Lock Washer	4
M4 Screw	6
M4 Flat Washer	8
M4 Lock Washer	8
M4 Screw - Long	4
Spacer	4
D-Rings	2

*factory fog lights not included

2208800

INSTALLATION INSTRUCTIONS

PART No.

FB22088

**Jeep® JL Wrangler
Front Mid-Width Winch Bumper**

1) REMOVE YOUR FACTORY BUMPER

Begin by removing your factory bumper. Ensure you disconnect your factory fog lights before you pull your bumper away.

Remove your factory fog lights carefully to be reused in the new bumper.

2) PREP YOUR NEW BUMPER FOR INSTALL

INSTALL YOUR FAIRLEAD AND WINCH

We recommend installing the fairlead first as you'll have access to the bolts at this time. Follow the instructions that came with your winch to install the fairlead and winch body to the pre-drilled holes on your new bumper.

INSTALL FOG LIGHTS

Install either your factory LED or Halogen fog lights using both the factory hardware and the hardware as shown in (Diagram 1) Fog Light Hardware.



2 PERSON LIFT



WITH THE WEIGHT OF THE WINCH AND BUMPER, IT IS HIGHLY ADVISED TO HAVE HELP WHEN INSTALLING THE BUMPER!

With the help from a second pair of hands, lift the bumper up to the frame of the Jeep and insert the bumper studs into the frame. Using one (1) M10 nut, lock washer, and flat washer per stud, secure the bumper to the Jeep.



3) INSTALL YOUR BUMPER

1

*factory fog lights not included

2208800



INSTALLATION INSTRUCTIONS

PART No.

FB22088

**Jeep® JL Wrangler
Front Mid-Width Winch Bumper**

4) MOUNT THE SUPPLIED D-RINGS.



5) RUN YOUR WIRING

Reconnect your factory fog lights and wire your winch following the manufacturer's instructions.

6) ENJOY YOUR NEW FISHBONE OFFROAD BUMPER!