



INSTALLATION INSTRUCTIONS

PART No. FB24022 & FB24023

**Jeep® JK Wrangler
Tube Doors – 4DR and 2DR**



**FB24022 – 4DR (SHOWN)
FB24023 – 2DR (FRONTS ONLY)**

REQUIRED TOOLS

13mm Socket/wrench
4mm Allen wrench

KIT CONTAINS

Stainless nyloc nut (2DR)
Stainless nyloc nut (4DR)

QTY

4
8

1) REMOVE DOORS

Begin by removing your OEM or existing doors. Take care not to scratch the doors when removing and place them on a soft surface to protect the paint.

2) INSTALL TUBE DOORS

Insert the tube doors into the Jeep's body hinges and secure with supplied nyloc nuts using a 13mm wrench or socket. Do not overtighten as this may make the door hard to open.



2402200


INSTALLATION INSTRUCTIONS

PART No. FB24022 & FB24023

**Jeep® JK Wrangler
Tube Doors – 4DR and 2DR**

3) ATTACH DOOR CATCH STRAP

Install the attached door catch strap to the hook inside the Jeep.

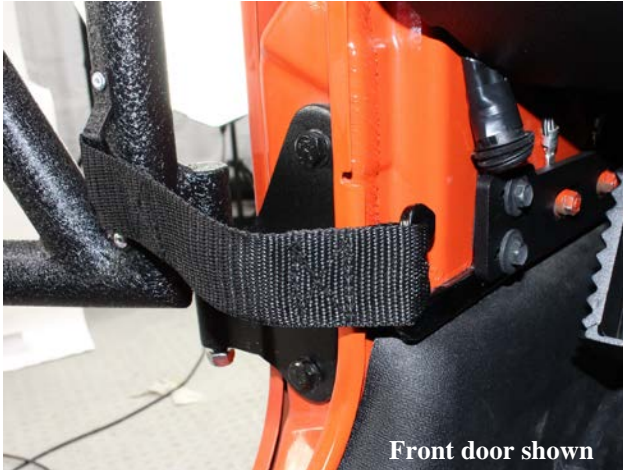

4) ADJUST LATCH MECHANISM

Using a 4mm allen wrench, adjust the latch mechanism until the door closes smoothly.



5) ENJOY YOUR FISHBONE OFFROAD TUBE DOORS!

