



# Installation Instructions

## Weatherproof Full Door Cab Covers 2020-Current Ford Bronco 4Dr Vehicles

Item #81110109 & 81120109

*Vinyl Weatherproof Full Door Cab Cover for 4 Door Bronco with all top hardware removed shown below.*



### Part List:

Weatherproof Full Door Cab Cover QTY 1  
Lock and Cable System with Keys QTY 1

### Required Tools:

Safety Glasses

#### NOTICE

The images used in this instruction sheet are for the Cab Cover application that requires you to remove your Hard or Soft Top. The images shown in this instruction sheet are for a Vinyl Cab Cover. The 5 layer Cab Cover install is the same

#### NOTICE

This product is designed to protect the interior of your vehicle from sun and light showers. Please be aware that this product is not completely waterproof and some seam leakage may occur during prolonged exposure to rain and melting snow. Also, this product will not protect the vehicle from damage due to falling objects nor will it protect your possessions from theft or damage including but not limited to water damage.

#### WARNING

Never operate your vehicle with this product installed. Never install this product while the engine is running. Before installing this product, put the vehicle in park and set the emergency brake. This product should never be used to cover your vehicle while it is in tow.

#### CAUTION

**RISK OF EYE INJURY.** Safety glasses should be worn at all times while installing or maintaining this product.



### Important Safety information

Your MasterTop® Weatherproof Full Door Cab Cover is intended to sun and light shower protection of your off-road capable vehicle. Before installation, please take a moment to review the following safety information and installation instructions. Important safety information is generally preceded by one of three signal words indicating the relative risk of injury. The signal words mean:

- WARNING** a hazardous situation which, if not avoided, could result in death or serious injury. You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.
- CAUTION** a hazardous situation which, if not avoided, could result in minor or moderate injury. You **CAN** be moderately **HURT** and also may suffer property damage if you don't follow instructions.
- NOTICE** Careful attention is required to this instruction or operation but does generally not relate to personal injury. Damage to your MasterTop® product or other property may result if you don't follow instructions.

### Before you begin Installation:

We are excited that you have chosen the MasterTop Weatherproof Full Door Cab Cover! This high quality Cab Cover is designed to provide sun and light shower protection. Please note that it is important that you become familiar with the installation process of this top by reading the following instruction sheet and warnings thoroughly. Though we have used only the finest materials in creating this cover, any product that is exposed to the elements requires some general maintenance to keep it looking like new. Please see page 5 for these important maintenance tips. Please also note that it is normal for fabric to contract and wrinkle when stored in the shipping carton. In a few days the fabric will relax and wrinkles will disappear.


When unpacking, check to make sure all parts are included.

If any part is missing or broken, please call MasterTop customer service at 720-575-5440.

### NOTICE

This cover when pulled out of the package or storage bag will have wrinkles throughout the cover. When the cover is placed in the sun these wrinkles will relax and the cover will be smooth.

### Pre-Installation of Full Door Cab Covers

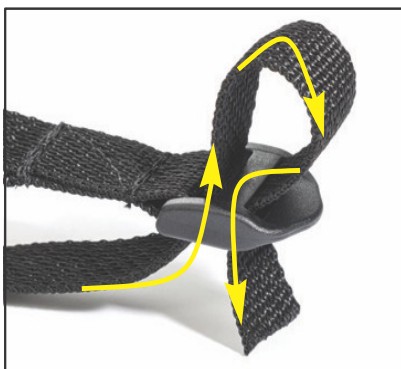

#### Threading Straps through Buckles:

Throughout the installation, you will need to thread webbing straps through buckles several times. Please review the picture for correct strap routing through the buckles. As a rule of thumb, run the strap below and through the sewn side of the buckle first and then back down through the end of the buckle. Tighten the strap by simply pulling the exposed webbing after threading the strap through the buckle.


#### Step 1: Drape Cab Cover over vehicle

Put on safety glasses.

Place the Cab Cover material on the vehicle. Orient the Cab cover on the vehicle with the door side panels facing down on the side of the vehicle (adjustable straps/buckle are on the side of the cover) and MasterTop Badge facing the rear of the vehicle.



## Installation steps for 2020-Current Bronco Vehicles:

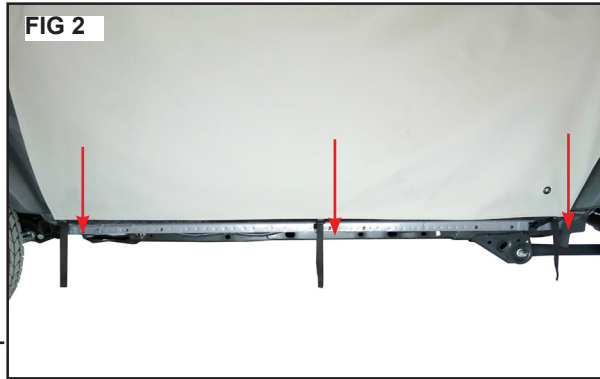

### Step 2: Locate and Hook Side Straps

Once the cover is placed on the vehicle, locate the side straps below the door(s). Pull the straps down and hook each strap to the bottom of the vehicle and tighten slightly to keep them hooked (FIGS 1 & 2).

Repeat this procedure on the other side of the vehicle.

#### NOTICE

On models with factory plastic side steps, the side straps should fit over the steps and not between the vehicle body and the side steps.


Once all of the straps are secure, tighten each strap to secure the cover on the vehicle.

### Step 3: Secure the Rear/Side Corner straps

Locate the rear side/corner straps of the cover, see fig 3.


Pull the strap down under the rear fender flare and attach it on the hole located behind the tire as shown in figs 4 & 4a and slightly tighten to keep it hooked.

Repeat this procedure on the other side of the vehicle.

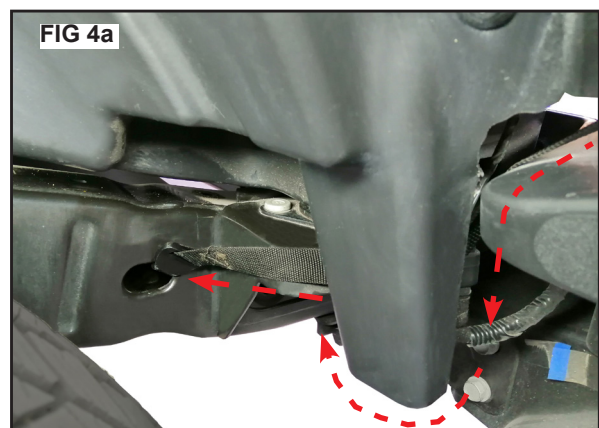



### Installation steps for 2020-Current Bronco Vehicles:

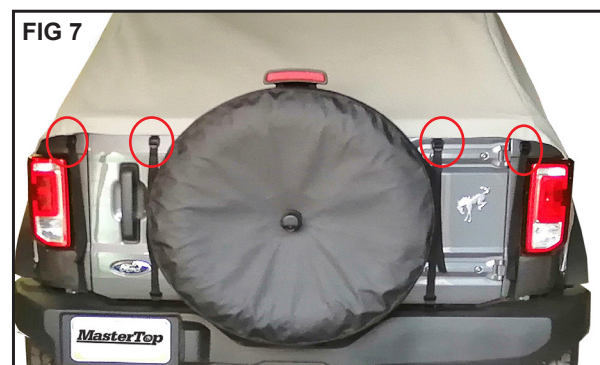

#### Step 4: Secure Rear Straps



Locate the four straps on the rear of the cover. Pull the straps down and attach to the bottom portion of the tailgate as shown in fig 5 & 6.



Tighten the four straps securing the rear of the cab cover. This will pull the cab cover tight to avoid water "pooling" on the cover.

#### Step 5: Reposition Wipers

Once all straps are secure, tuck the cover under your front windshield wipers as shown in Fig 8.

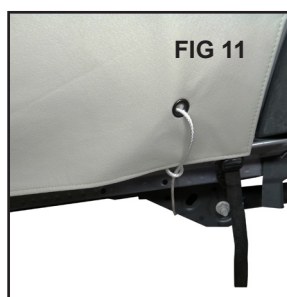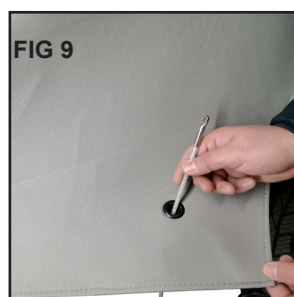

#### Step 6: Secure Cab Cover to lock and Cable System

Once the cover is placed on the vehicle, locate the lock and cable system with keys. Loop the small eyelet end of the cable through the large loop end of the cable and pass it to the reinforced grommet at the bottom of your cover, pass the cable to the opposite side of your vehicle, pass the cable through the grommet hole on the opposite side of the cover and lock it as shown in Fig's 9, 10, 11 & 12. Notice in Fig 12 that the lock must be sandwiched between the outside of the cover and the inside Flap. This is VERY important!



### Care and Maintenance of your MasterTop Cab Cover:

Your MasterTop Weatherproof Full Door Cab Cover is made of the finest materials available but to keep it looking new and for the maximum possible wear, it will need periodic cleaning and basic maintenance. The main threat to your cab cover is pollutants, dirt and grime. By keeping your soft top clean you will prolong the life of your product.

We recommend the following to keep your cab cover like new:

#### Washing:

The cover fabric should be washed often using a mild soap, warm water and a soft bristle brush. You can also use special soft top cleaners available on our Distributors websites. Make sure that after cleaning you rinse with clear water to remove all traces of soap to avoid residue. Air dry. Do not put in a dryer.

#### Water/Fabric:

In the event of seeping through the seams, 3M Scotchgard® may be applied on the inside of the seams to stop the seeping. Rips in the fabric may be repaired with Bondex® iron on patches (Vinyl version only). Iron the patches to the inside of the cover, carefully following the Bondex® instructions.

#### For more information on MasterTop:

This and other helpful product information is available on [www.mastertop.com](http://www.mastertop.com)  
Please visit our website frequently for product updates and exciting news.

### Other Great Products From MasterTop: Custom Tire Cover for Ford Bronco



Custom fit Tire covers secure over the spare tire while allowing full use of your rear back-up camera.  
Available in Two sizes for clean, custom fit:

Part #84631135 Fits 32 inch, 245/75R17 and 255/70R18  
Part #84633135 Fits 33 inch, 285/70R17





# Limited 3 Year Warranty

Your MasterTop® accessory is covered by the following Limited Warranty provided exclusively by MasterTop, Inc., 420 J Corporate Circle, Golden, CO 80401.

This Limited Warranty is the only warranty made in connection with your purchase. MasterTop neither assumes nor authorizes any vendor, retailer or other person or entity to assume for it any other obligation or liability in connection with this product or Limited Warranty. This Limited Warranty does not apply and is not cumulative to any accessory or part distributed by any MasterTop distributor for which the Manufacturer provides a separate written warranty.

**What is Covered:** Subject to the terms, exclusions and limitations herein and with respect only to MasterTop branded accessories first sold in the United States, MasterTop warrants to the initial retail purchaser only that your MasterTop accessory shall be free of defects in material and workmanship; **for a period of 3 years from date of initial retail sale.**

All other warranties are hereby disclaimed, except to the extent prohibited by applicable law in which case any implied warranty of merchantability or fitness for a particular purpose on this product is **limited to 3 years from date of initial retail sale.** MasterTop reserves the rights to: (a.) require invoice or other proof your product is within the terms of this Limited Warranty as a condition of warranty service and, (b.) make future revisions to this product and Limited Warranty without prior notice or obligation to upgrade your product.

**What is Not Covered:** Your MasterTop Limited Warranty does not cover products or parts MasterTop determines to have been damaged by or subjected to: (a.) installation damage, alteration, modification, failure to maintain or attempted repair or service by anyone not authorized by MasterTop, (b.) normal wear and tear, cosmetic damage or damage from water immersion, (c.) Acts of God, accidents, misuse, negligence, inadequate mounting or impact with vehicle(s), obstacles or other aspects of the environment, (d.) theft, vandalism or other intentional damage, (e.) fleet, rental or commercial use, (f.) use in competition or racing.

**Remedy Limited to Repair/Replacement:** The exclusive remedy provided hereunder shall, upon MasterTop inspection and at MasterTop's option, be either repair or replacement of product or parts (new or refurbished) covered under this Limited Warranty. Customers requesting warranty consideration on MasterTop Products should first contact MasterTop to obtain a RGA number (720-575-5440). All labor, removal, shipping and installation costs are customer's responsibility.

## Other Limitations - Exclusion of Damages

### - Your Rights Under State Law:

In consideration of the purchase price paid, neither MasterTop nor any independent MasterTop distributor /licensee are responsible for any time loss, rental costs, or for any incidental, consequential, punitive or other damages you may have or incur in connection with any part or product purchased. Your exclusive remedy hereunder for covered parts is repair/replacement as described above.

This Limited Warranty gives you specific rights. You may also have other rights that vary from state to state. For example, some states do not allow limitations of how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations and exclusions herein may not apply to you.

© MasterTop, Inc. 2022. All Rights Reserved. The terms MasterTop® and MasterTwill® are Registered Trademarks of MasterTop Incorporated, Registered in U.S. Patent and Trademark Office.

[www.MasterTop.com](http://www.MasterTop.com)

Part # 941075.01 Version 02.24.22 LTR

