

Jeep JL Spare Tire Relocator

Hardware List:

8 – 8mm x 25mm bolts

8 – flat washers

8 – lock washers

1. Take off your spare tire and remove 8 factory bolts holding spare tire mount on. Fig 1
2. Mount your Iron Cross relocater bracket to the factory location using the 8mm hardware provided. Fig 2
3. Attach the factory spare tire mount to the Iron Cross bracket using the factory hardware removed in step 1. Fig 3
4. Reinstall your spare tire and torque to spec.

Fig 2

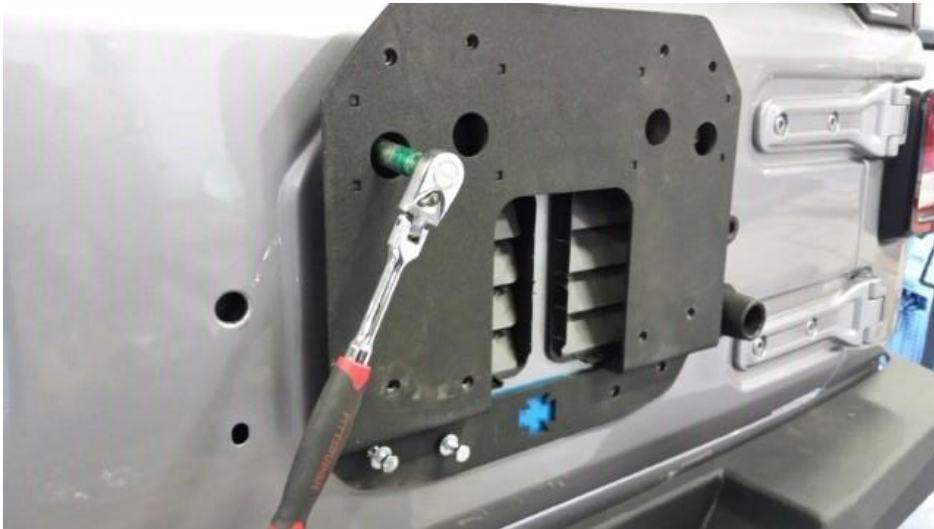


Fig 3

