

Quick-Change™ Plug

This adapter is designed to work with 6-Pole center pin electric brake or center pin auxiliary wired trailers. Our Quick-Change™ allows you to easily match the way your trailer is wired.

To determine your trailer wiring code, plug the adapter into your tow vehicle's 7 RV Blade socket and plug in your trailer's 6-Pole Round connector into the adapter. Tow your trailer a few inches. If your trailer brakes are locked, reverse the direction of the Quick-Change™ plug. Verify that your trailer brakes are not locked before towing.

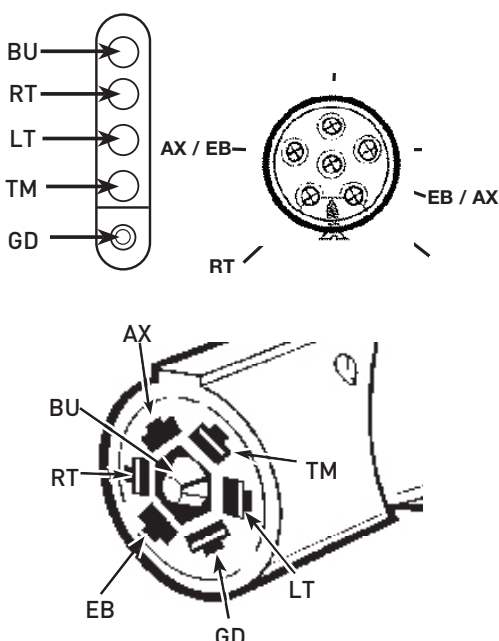
The brake and auxiliary quick-change plug can be switched by pulling up, twisting and reinserting back into the adapter.

NOTE:

Locate wires on vehicle by function only. Color coding is not standard with all manufacturers.

TIPS:

For enhanced weatherproofing, apply a small amount of grease (included) to all terminals, both front and rear of adapter as well as within the Quick-Change™ plug area.

**WIRE IDENTIFICATION / IDENTIFICACIÓN DE LOS CABLES**

(GD)	=	Ground / Tierra
(LT)	=	Left Turn / Direccional Izquierda
(TM)	=	Taillight / Luces Traseras
(RT)	=	Right Turn / Direccional Derecha
(AX)	=	Auxiliary / Auxiliari
(EB)	=	Brake / Freno
(BU)	=	Reverse / Reversa

Este adaptador está diseñado para trabajar con tráileres o remolques alambrados con frenos eléctricos de 6 polos con pin central o auxiliar en el pin central. Nuestro Quick-Change™ (cambio rápido) permite fácilmente ajustarse al tipo de alambrado del tráiler.

Para determinar el tipo de alambrado del tráiler, conecte el adaptador al conector "7 RV Blade" del vehículo de arrastre, enchufe el conector de 6-polos del tráiler al adaptador. Remolque el tráiler por unas cuantas pulgadas. Si los frenos están activados, cambie la dirección del conector Quick-Change™. Verifique que los frenos del tráiler no estén activados antes de iniciar el remolcar el tráiler.

El conector de cambio rapido para freno y auxiliar puede ser cambiado al jalarlo hacia arriba, girandolo y re-insertandolo en el adaptador.

NOTA:

Localice los cables en el vehiculo solamente por funcion. El codigo de colores no es estandar entre todos los fabricantes.

CONSEJOS:

Para una proteccion extra contra el clima, aplique una pequena cantidad de grasa (incluida) a todas las terminales, en ambos lados (frontal y trasero) del adaptador asi como tambien en el area del conector de cambio rapido.

Need Help? (English Only)

1 800 835-0129

techsupport@hopkinsmfg.com

www.hopkinstowingsolutions.com