

IA6-M4 Installation Instructions

Step 1: Remove Top

If using Turn Offroad hardtop remove Targa and Main shell.

If using OEM hardtop remove front three section.

If using OEM soft-top fold back to access factory landing plates.

Step 2: Remove OEM landing plates from both sides by removing OEM hardware.



Step 3: Place Turn Offroad Bronco Cage Brace on the vehicle and align with mounting holes.




Step 4: Install hardware. Insert the M8 hardware provided, starting all 6 fasteners before tightening. To avoid the possibility of fasteners losing, ensure that all fasteners have lock washers and flat washers as shown.



Step 5: With a 5mm hex key tighten all hardware.



Step 6: If using the Turn Offroad Hardtop ensure nut clips are installed on your new cage brace.

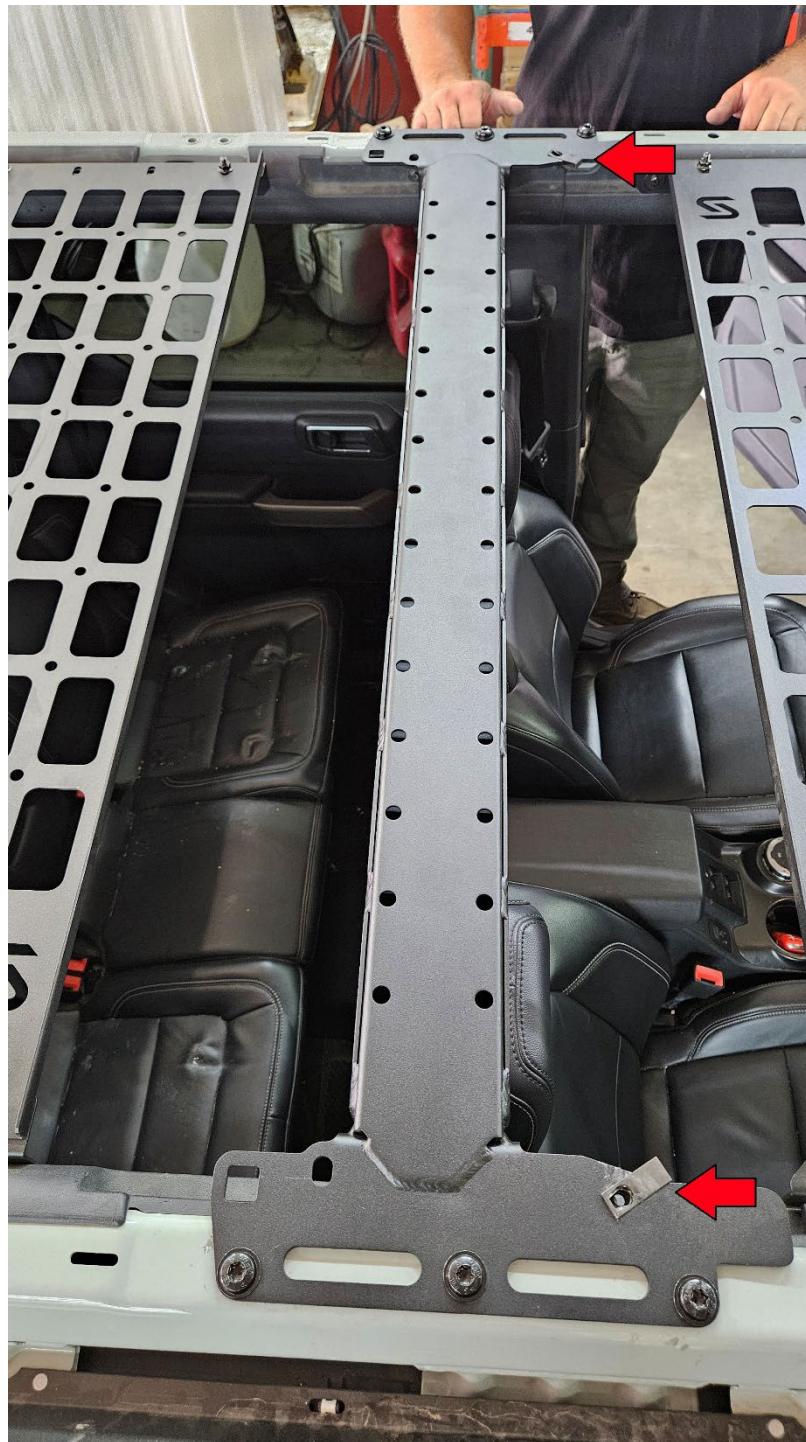

Step 7: Reinstall top.