




VERIFY YOU HAVE ALL THE COMPONENTS BEFORE STARTING THE INSTALLATION. REFER TO THE ENGINEERING DRAWINGS AT THE END OF THIS DOCUMENT FOR A COMPLETE PARTS LIST

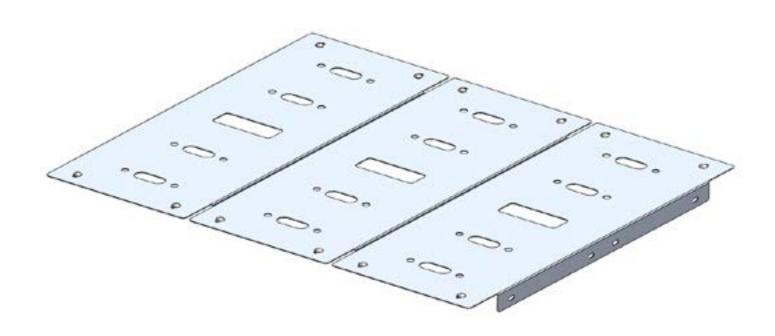

Install the Floor Kit as shown in the image below. Align the slots on the Span Member with the mounting holes on the floor kit. Install using the \emptyset 3/8 Carriage Bolts, Nuts and Washers Provided. There are 3 positions along the Span Member for mounting the Floor Kit.

The Span Members will need to be installed in the outer most positions on the Cross Member as shown below.

