



Rev 2025  
Mag Safe

## CFE PRODUCTS

MODEL # JK-PMM 0710

Jeep JK Wrangler Magnetic Grab Handle Phone Mount  
2007 to 2010 JK

# Part # 14133-1202




**WARNING:**

This product can expose you to chemicals including vinyl chloride and lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**New and Improved, Now with Mag Safe Mount!**

1. Using a pry stick or small flat edge screw driver, carefully pry off the plastic trim cap of the left side grab handle as shown in picture #2. The cap will slide off to the left.
2. Clean out the inside of the hole of the grab handle to allow the supplied Rubber Insert to fit securely. Insert the Rubber Insert as shown in picture #3.
3. Ensure that the Rubber Insert is pushed in flush with the grab handle as shown in picture #4.
4. Install the Magnet Phone Mount using the Black Flat Washer and Black Plastic Acorn Nut (pic #6) or Metal Hex Nut (your choice) as shown in picture #5. The Metal Hex Nut is stronger.
5. Install one of the metal ring either between your phone & phone case, or on the outside of the phone case [outside the case for the strongest hold]

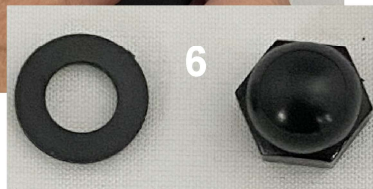

Questions or Comments ? call CFE PRODUCTS  
@ 610 358 1886 / ASK FOR BOB