



WARNING:

This product can expose you to chemicals including vinyl chloride and lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

CFE PRODUCTS

MODEL # JK-RCK 2025 / rev 2025





Jeep Wrangler Heavy Duty Camera

Mount 2007 & up

INSTALLATION INSTRUCTIONS

Page 1

1. The Camera comes mounted to the Mounting Plate shown in pictures #1 & 2. Identify whether your wheel opening is centered or off-set. Picture #4 shows centered, picture #5b shows off-set.
2. If you have stock tires (pic 4) remove the Extension Arm picture 1a. the Extension Arm will not be needed.
2. If your wheel opening is off-set, adjust the Extension Arm shown in picture #1a as shown in pictures # 5 & 5b.
3. Mount the Bracket to the Spare Tire Carrier using the Nut Washers shown in pic #6.. This will hold the Mount in Place.
4. The Camera position can be adjusted forward and back in the tire opening as needed by adjusting the position of the Nuts shown in picture #3.
5. Locate the two panels on the tale gate that will need to be removed shown by the Yellow Arrows in picture 7.

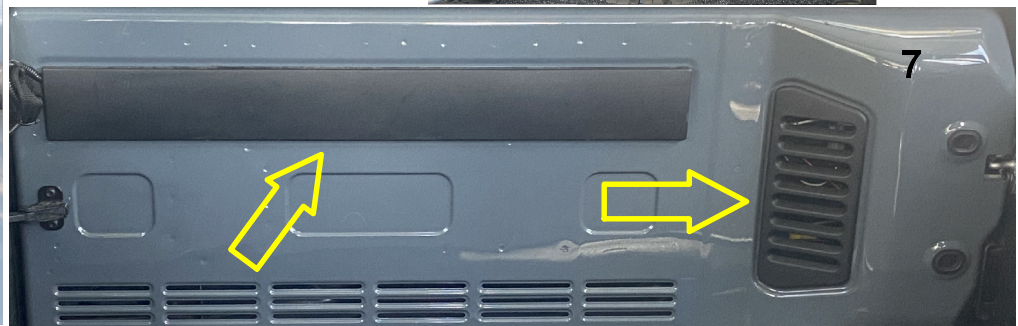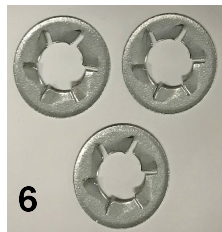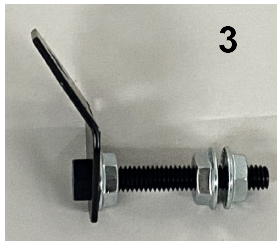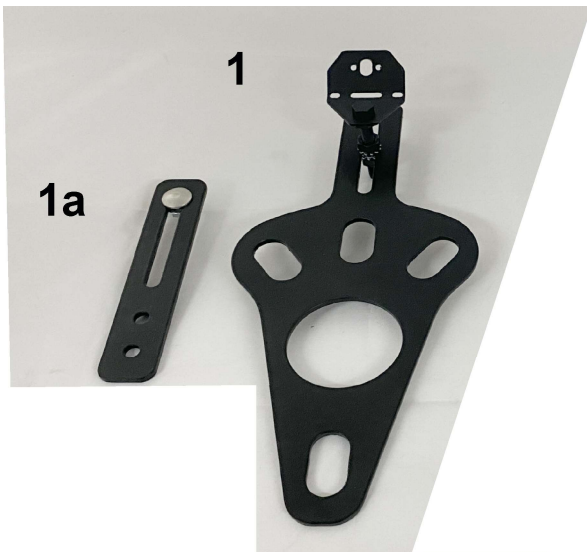

Questions or Comments ? call CFE PRODUCTS

@ 610 358 1886 / ASK FOR BOB