

JKS[®]

INSTALLATION INSTRUCTIONS

Product: Tailgate Vent
Part Number: JKS8200

Applications: Wrangler JK, 2007-2014

517-278-1226 • tech@jksmfg.com • www.jksmfg.com
491 W. Garfield Avenue, Coldwater, MI 49036



Welcome

CONGRATULATIONS on purchasing the Tailgate Vent from JKS Manufacturing. We are committed to providing you with the best products available and your satisfaction is our first priority.

PLEASE READ these Installation Instructions carefully, and save them for future reference, as they contain important installation and maintenance information.

Tools Required

- 13mm Socket wrench
- 5mm Allen head socket*
- T20 Torx bit driver/socket
- Flat head screwdriver

Notes

- System will remove the 3rd brake light from the vehicle unless installed in conjunction with the factory spare tire mount.
- Will fit horizontal and vertical tailgate vent openings.


Parts

	Description	QTY
A	Louvered Plate	1
B	Bolt Pack J102	1
C	Incl: 8mm-1.25 x 25mm button head bolt	8
D	Large hole plug	1
E	Small hole plug	2


Installation

□ 1. SPARE TIRE MOUNT DISSASSEMBLY

- Remove the spare tire.
- Open the tailgate to access the 4 screws mounting the 3rd brake light to the bracket. Remove the 4 screws (T20) and unplug the light.

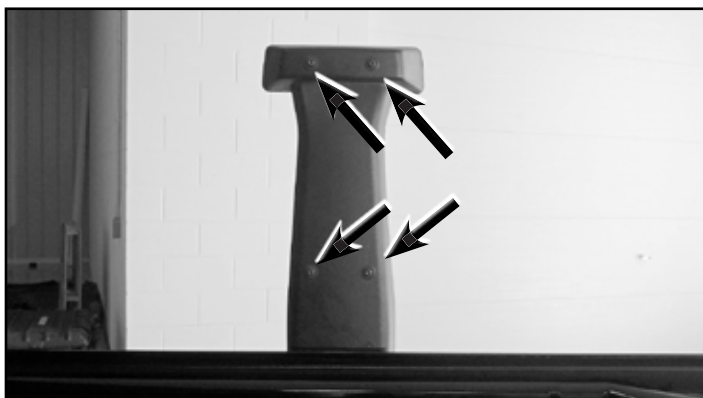


- Remove the spare tire mounting bracket from the tailgate by removing the 8 bolts using a 13mm socket.

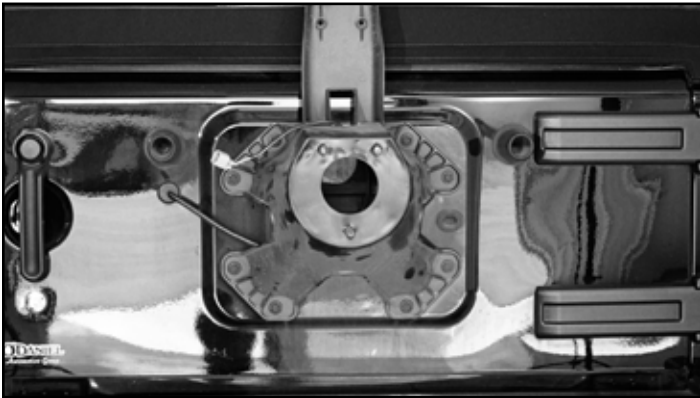

❑ 2. TAILGATE VENT REMOVAL

- There are 3 tabs on top of the vent holding it into the tailgate. Gently pull out the vent until a screwdriver can be used to push down on each tab and push them past the tailgate opening.

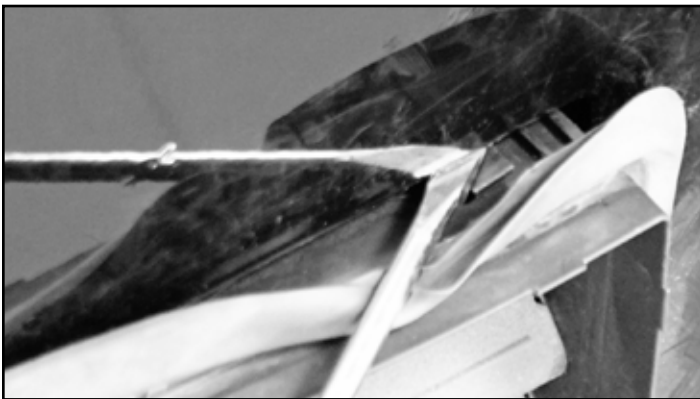

- Once all 3 tabs are free, remove the vent from the tailgate. Also remove the plug to the right of the vent opening.



❑ 3. LOUVERED PLATE INSTALLATION

- It is normal for the plate to be slightly warped from the manufacturing process. Once the plate is tightened to the tailgate it will flatten.
- Using the provided button head bolts, thread all of the bolts into the holes to get them started.
- With all of the bolts started, tighten the bolts to 20 ft-lbs.



❑ 4. FINAL INSTALLATION STEPS

- Pull out the factory tire bumpers from the tailgate and replace with the 2 small hole plugs provided in the bolt pack.
- Pull out the wire grommet for the 3rd brake light harness and then push it back through the hole. Feed the wire into the tailgate.
- Install the large plug into the hole.



©2014 JKS Manufacturing, Inc & Aftermarketing, LLC
Revision Date 7/21/2014