

MAXIMUS-3



JL RUBICON (STEEL BUMPER)

AFTERMARKET FOG LIGHT BRACKETS

(Fits JW Speaker 6145, Morimoto XB Fog Lights, & Most Aftermarket JK Fog Lights)

INSTALLATION GUIDES

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED TO DISASSEMBLE YOUR BUMPER.

Component List:

Maximus-3 JL Fog Light Brackets	2
M4 Stainless Steel Screws	8
M6 Washers	8



Tools Required:

7mm Socket/Wrench
10mm Socket


INSTALLATION STEPS:

(A)- REMOVE THE FACTORY FOG LIGHTS

Using 10mm socket, remove the two factory mounting bolts on each side. Keep these bolts as they will be used in reassembly. Be sure to disconnect electrical connections and maintain connectors for reassembly.


(B)- ASSEMBLE YOUR AFTERMARKET FOG LIGHTS TO MAXIMUS-3 BRACKETS

Using a 7mm socket, Mount your fog lights to your Maximus-3 Bracket using the M4 Stainless Steel Screws & Washers supplied.

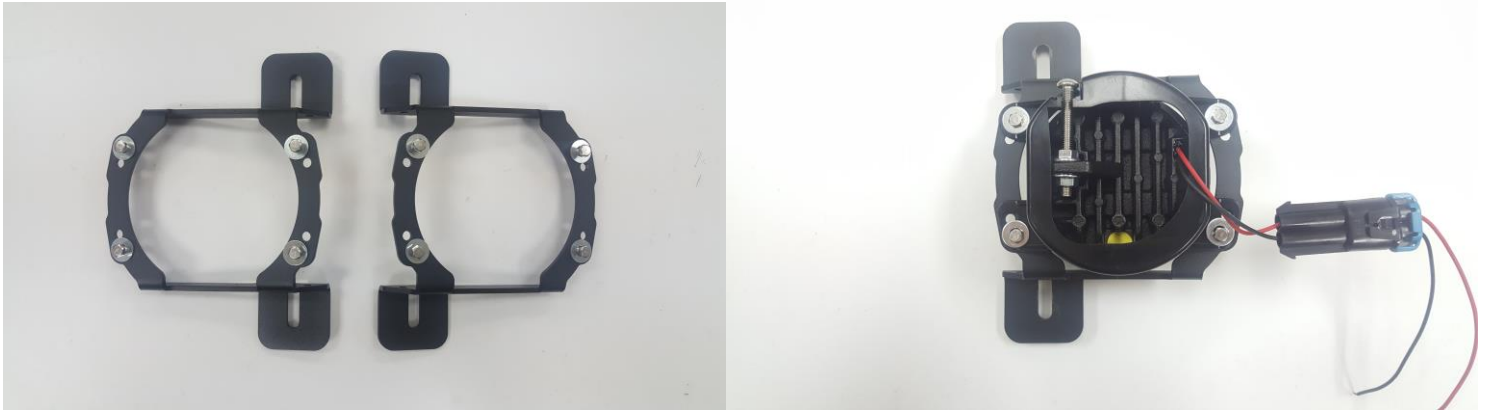

(C)- INSTALL YOUR MAXIMUS-3 JW SPEAKER FOG LIGHT ASSEMBLY

Using the factory 10mm bolts you removed in step (A), position the fog light assembly behind the bumper in the fog light location. Do not tighten the bolts, only snug them in for now as you will have to adjust the final location of the fog light to be centered in the fog light hole in the bumper. Once both lights are snugged in, look at the fog lights from the front and center them in the factory hole locations, then tighten the bolts. DO NOT OVERTIGHTEN.

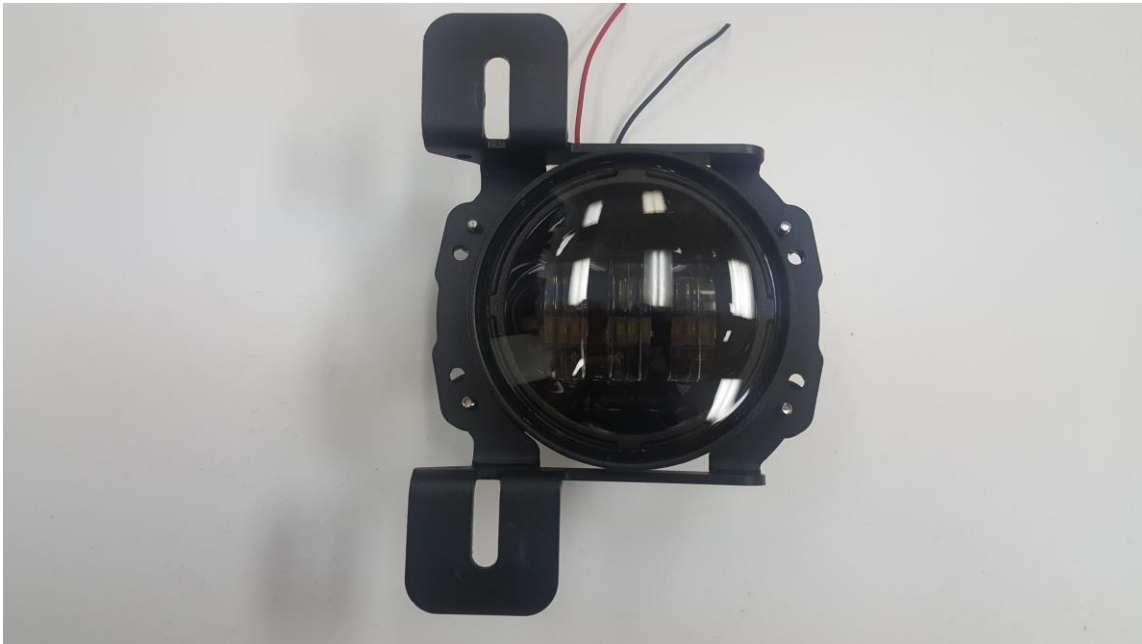

(D)- REWIRE YOUR FOG LIGHTS TO THE VEHICLE

Wire according to the instructions that were included with your fog lights.

Your installation is complete. If you have questions regarding this installation please contact us at info@maximus-3.com or call 248 821 6654.