

MAXIMUS-3



JL RUBICON (STEEL BUMPER)

FILLER TRIM PLATES

COMPATIBLE FOR ZEON WINCH ONLY

INSTALLATION GUIDES

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED TO DISASSEMBLE YOUR BUMPER.

Component List:

Qty

Filler Trim Plate LHS	1
Filler Trim Plate RHS	1
Isolating Rubbers	2
3/8" Black Button Socket	2
3/8" Thread Cutting Bolt	1

Tools Required:

Allen Keys
9/16" Socket




INSTALLATION STEPS

The Filler Trim Plates are to be mounted in the factory mounting holes in the chassis frame between the bumper and the grille, where the factory plastic trim was mounted. To do this you first need to set a thread into the hole in the chassis frame using a thread-cutting bolt provided to the one shown in step **(A)** below.



(A)- CUT THREADS IN THE FACTORY MOUNT LOCATION ON THE CHASSIS FRAME:

Using the thread-cutting bolt supplied, a 9/16" socket, and extension; Cut threads in the factory holes in the frame as shown below. Do this for both sides.

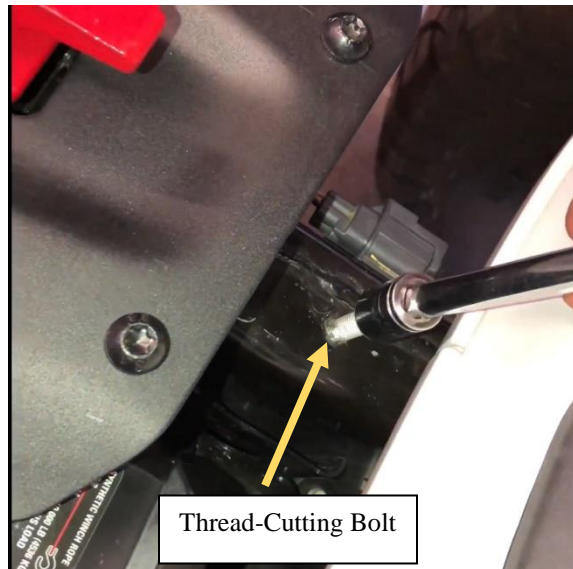

(B)- INSTALL YOUR FILLER TRIM PLATES:

Place the isolator rubber washers supplied in between the chassis and the trim plate. Bolt down using the 3/8" bolts supplied. Make sure to secure your winch cable as shown below on the left.



Your installation is complete. If you have questions regarding this installation please contact us at info@maximus-3.com or call 248 821 6654.