




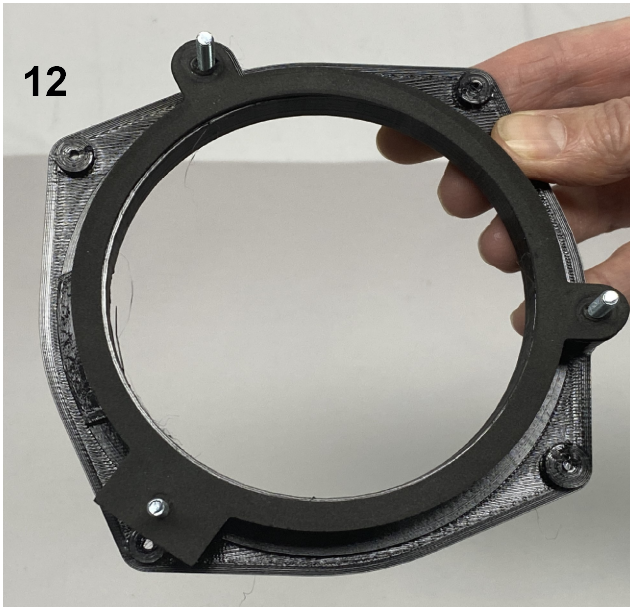

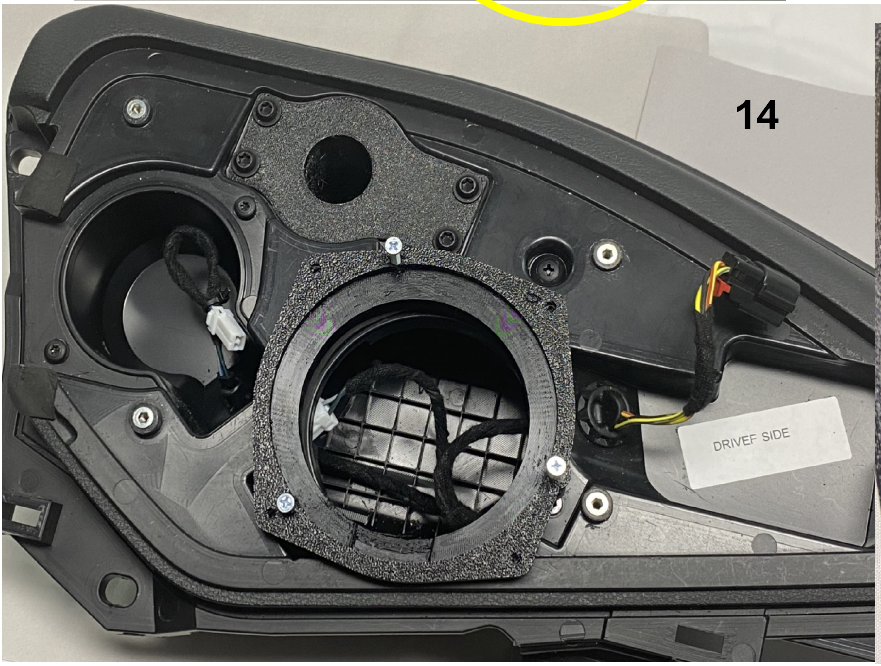

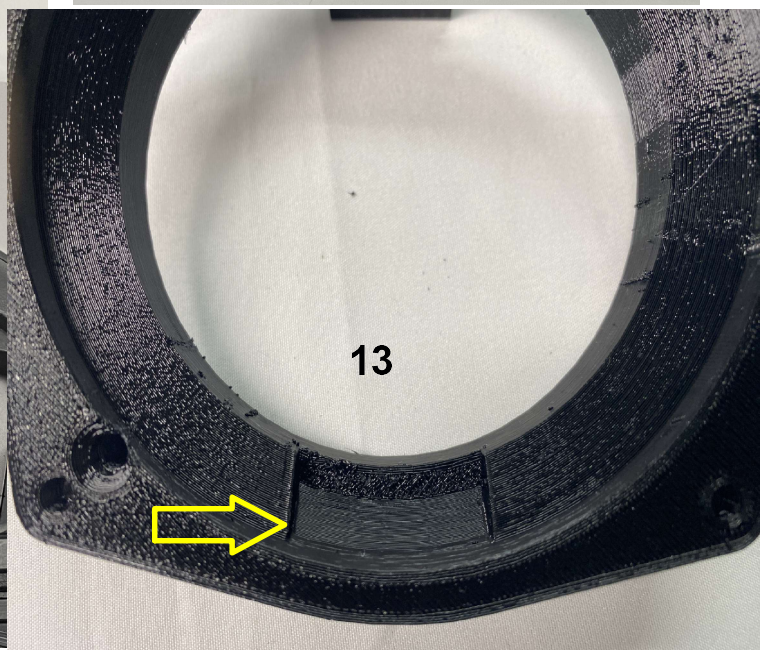

14. Install the 3 Tab Gasket on the Speaker Adapter. Align the Square Tab. Insert the 3 M5 x 45mm Flat Head Screws to hold the Gasket in place as shown in pictures #11 & 12

15. Align the Terminal Pocket to match picture #14 for the Driver Side. (Pocket faces the Windshield) Picture #13 shows the Pocket.



*Passenger Side is shown on page 4.
(Pocket will face Passenger Side Door)

16. Place the 4 Tab Gasket on the Speaker as shown in picture #15