

JP54-057

# HEAVY-DUTY TAILGATE HINGES



## INSTALLATION INSTRUCTIONS

### ATTENTION:

Start with the **UPPER** hinge first and only do **ONE** hinge at a time for easy adjustment.

### Tools Needed

- T40 Torx Socket
- ½" Socket
- 13mm Wrench
- ½" Wrench
- 10mm Socket



### STEP 1

Uninstall the spare tire.



(View of the access hole after the plastic cover has been removed.)



### STEP 2

Uninstall the rear, passenger-side, plastic trim.



### STEP 4

Close the tailgate with the rear glass open.



### STEP 3

Remove the plastic cover over the hinge access hole.



### STEP 5

Remove the torx bolts connecting the stock tailgate hinge to the tailgate.

**MORryde**

**HEAVY. DUTY. ADVENTURE.**


www.MORryde.com • 574.293.1581

JP54-057

# HEAVY-DUTY TAILGATE HINGES



## INSTALLATION INSTRUCTIONS

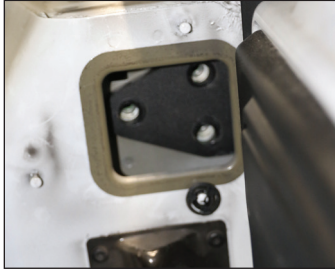

### STEP 6

Remove the bolts connecting the stock hinge to the tub of the Jeep through the interior access panel.



### STEP 9

Fasten the hinge to the tub by reusing the stock hardware.



### STEP 7

Line up the holes of the new MORryde Heavy-Duty Tailgate Hinge with the holes in the tailgate and tub.

### STEP 10

Repeat steps 4–8 for the bottom hinge.

### STEP 11

Reinstall the spare tire once both hinges are installed.



### STEP 8

Fasten the hinge to the tailgate with the supplied M8 bolts.



**MORryde**

**HEAVY. DUTY. ADVENTURE.**

www.MORryde.com • 574.293.1581