


## **INSTALLATION INSTRUCTIONS**

## 2019-2020 Jeep Wrangler JL Rear Fender Liners PART #JL-6101

## PARTS LIST:

ARTO LIGIT.			
1	Driver/Left Upper Liner	12	6mm x 18mm OD x 1.6mm Flat Washers
1	Passenger/Right Upper Liner	20	6mm x 12mm OD x 1.6mm Flat Washers
1	Driver/Left Lower Liner	12	6mm Lock Washers
1	Passenger/Right Lower Liner	10	6mm Nylon Lock Nuts
2	6-1.0mm x 30mm Button Head Bolts	6	6mm Clip Nuts
10	6-1.0mm x 25mm Button Head Bolts	2	Spacers
10	6-1.0mm x 15mm Button Head Bolts	1	4mm Hex Wrench

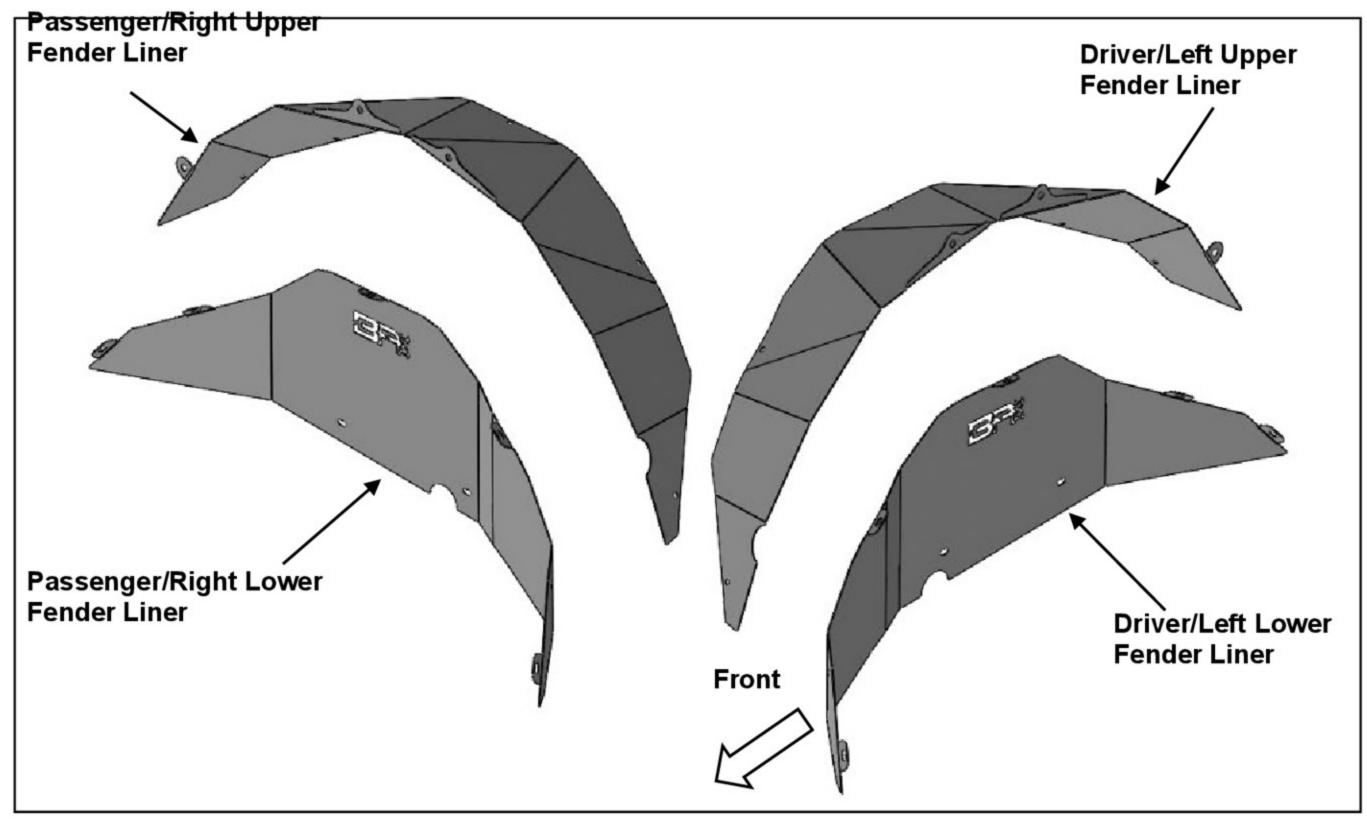

## PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS RECOMMENDED.

- 1. Start installation on the Passenger/Right side of the vehicle. Locate the tabs along the bottom of the body above the frame, (Figure 1). NOTE: The plastic fender liner attached to these tabs.
- 2. Select (3) 6mm Clip Nuts. Slide the Clip Nuts onto the (3) forward mounting tabs, (Figures 2 & 4).
- 3. Select the Passenger/Right Upper Liner and Lower.
  - a. Attach the Lower Liner to the Upper Liner with (5) 6mm x 15mm Button Head Bolts, (10) 6mm x 12mm Flat Washers and (5) 6mm Nylon Lock Nuts, (Figure 5).
  - b. Insert the Fender Liner into position up to the back of the inner body panel.
  - c. Attach the Upper Fender Liner to the top of the wheel well with (3) 6mm x 25mm Button Head Bolts, (3) 6mm Lock Washers and (3) 6mm x 18mm Flat Washers, (Figures 3, 6 & 8). NOTE: It may be easier to install the Fender Liner with the vehicle raised up and/or rear tire removed. Line up the mounting holes in the Fender Liner with the back of the body panel.

