



This product can expose you to chemicals including vinyl chloride and lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

WARNING:

CFE PRODUCTS

TJ CUSTOM CB MOUNT

MODEL # JW-CBM 24

Jeep Wrangler 1997 to 2006






rev 26p

P65

Part # 96080-200

This Product Is 3D Printed from High Quality Resin

1. Using one hand to slightly lift up the Console, slide the Mounting Bracket onto the Console Lip as shown in picture #1.
2. Adjust the position of the Mounting Bracket so there is a 1" space between the back of the Console and the back edge of the Mounting Bracket. Mark a spot as shown in picture #2. Make sure the bottom of the bracket is pushed up as far as it will go.
3. Using a 3/16" drill bit, drill a hole in the Console where you marked.
4. Install your CB's bracket using the supplied hardware as shown in picture #3. (your CB bracket comes with your CB)
5. Install the Nylon Shim and the Long Pan Head Screw between the Bracket and the Console as shown in picture #4 and attach to the Console.
6. Install the Wing Nut by reaching behind the Console and tighten.
7. Picture #5 shows a finished install. We recommend installing your CB so that the speaker faces out.

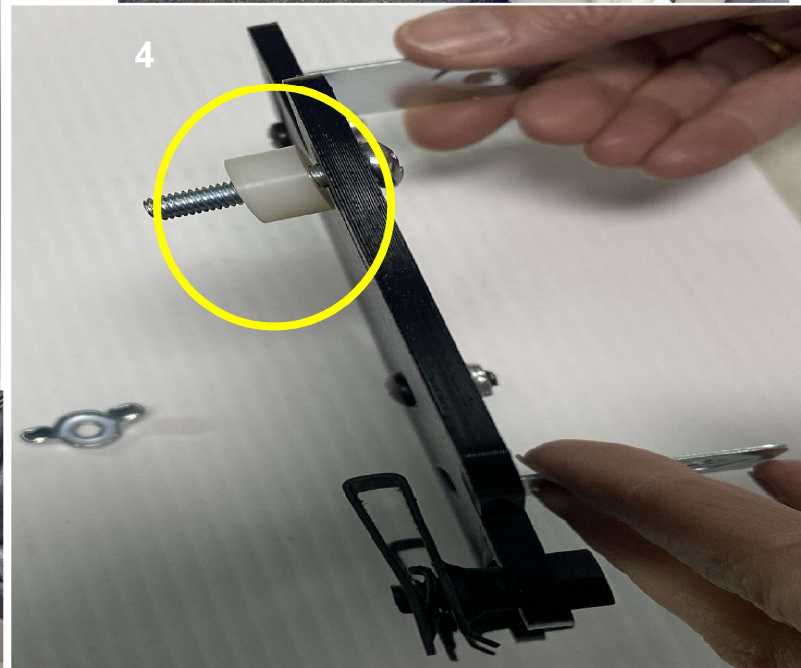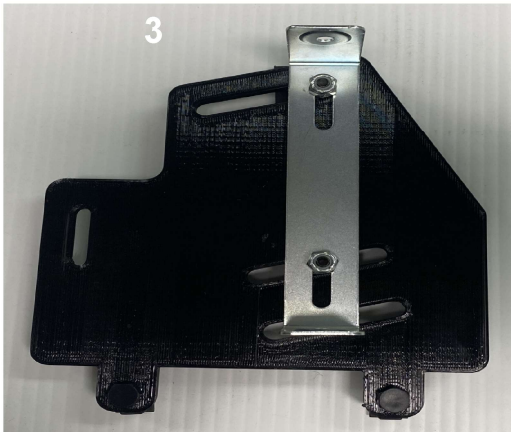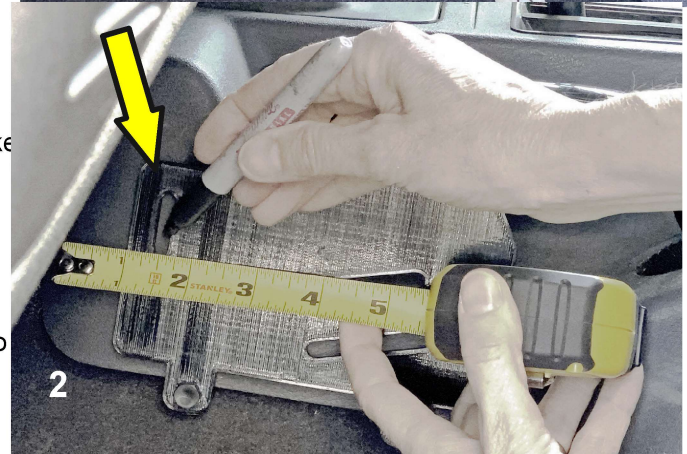

Questions or Comments ? call CFE PRODUCTS @ 610 358 1886
ASK FOR BOB