


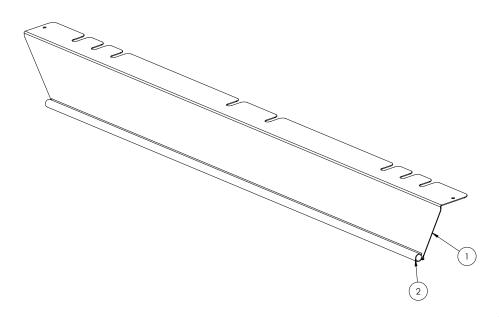

PLEASE READ THROUGH THE INSTRUCTIONS BEFORE BEGINNING ANY PART OF THE INSTALLATION PROCESS

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	2JWD0790-01	JK WIND DEFLECTOR	1
2	TR1002	RUBBER EDGE TRIM BULB SEAL	48"



NOTES:

1. JWD0790 = BARE STEEL OPTION

2. JWD0791 = BLACK POWDER COAT OPTION

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	100110			
DIMENSIONS ARE IN INCHES	DRAWN	MCH	9/3/2019	LOD LLC	•		
TOLERANCES: ±0.010 ANGULAR: MACH±1*	CHECKED			DESCRIPTION:			
TWO PLACE DECIMAL ±0.015 THREE PLACE DECIMAL •0.005	ENG APPR.			JK WIND	DEFLECTOR		
	MFG APPR.						
PROPRIETARY AND CONFIDENTIAL	MATERIAL: N/A FINISH: BLACK POWDER COAT						
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF LOD LLC. ANY				JWD0790		REV	
REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF LOD LLC IS	ECO:		JWD0791			$^{\prime}$	
PROHIBITED.				SCALE: 1:4	SHEET SIZE: B	SHEET	1 OF 1

Your Wind Deflector is installed between the Base Rack Windshield Hoop and the Slide Beam of the Sliding Rack Option.

Adjust the position of the Wind Deflector so that the Rubber Edge Trim is compressed against the windshield.

You can install the Wind Deflector at anytime simply by removing the 6 Button Head Screws. Carefully lift up on the Slide Beam and insert the Wind Deflector as shown below.

