



This product can expose you to chemicals including vinyl chloride and lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to

www.P65Warnings.ca.gov

WARNING:

JWSUBK10 SUBWOOFER KIT

1987 to 2006

CAUTION !!!

BEFORE STARTING THE INSTALLATION ALWAYS DISCONNECT THE NEGATIVE BATTERY TERMINAL

FOLD THE BACK SEAT FORWARD, TO GIVE YOU MORE WORKING ROOM.

ATTACH CABLES

1. REMOVE THE FUSE FROM THE FUSE HOLDER ON THE POWER CABLE AND DO NOT REINSTALL IT UNTIL THE INSTALLATION IS COMPLETE.
2. ATTACH THE FUSED END OF THE RED POWER CABLE TO THE POSITIVE BATTERY TERMINAL. CONNECT THE OTHER END TO THE SCREW MARKED 12 V ON THE AMP.
3. ATTACH THE BLUE WIRE TO REMOTE TURN ON LEAD ON YOUR HEAD UNIT [CAN BE CALLED AMP TURN ON LEAD OR ANTENNA REMOTE] AND THE OTHER END TO THE REMOTE SCREW ON AMP.
4. THE TWO RCA CABLES FROM THE RCA OUTS ON THE HEAD UNIT TO THE LEFT & RIGHT INPUTS ON AMP.
5. THE CABLE, FROM REMOTE LEVEL CONTROL TO REMOTE SUBWOOFER LEVEL CONTROL ON AMP
6. INSTALL BLACK GROUND WIRE TO A GROUND ON THE JEEP. CAN BE CONNECTED TO THE HOLD DOWN BOLTS OR THE BACK SEAT LATCH BOLT.
7. AFTER ALL THE WIRES HAVE BEEN CONNECTED, FOLD THE BACK SEAT DOWN. MOVE THE SUB BOX FORWARD, SO THAT THE TOP BOX IS AS CLOSE TO THE SEAT AS POSSIBLE, WITHOUT TOUCHING. CLOSE THE TAILGATE, MAKE SURE THE SUB IS POSITIONED CORRECTLY AND IS NOT HITTING THE TAILGATE, OPEN THE TAILGATE AND MARK THE FLOOR WHERE YOU NEED TO DRILL THE HOLES [USE BOLTS AN DRILL BIT INCLUDED WITH THE SUB] TO MOUNT THE SUB.
8. INSTALL THE FUSE IN THE FUSE HOLDER AT THE BATTERY. YOU ARE NOW READY TO TURN ON THE SYSTEM, AS SOON AS YOU CHECK THE FOLLOWING TURN ON TIPS.

1. SET REMOTE LEVEL CONTROL AT MID POSITION.
2. THE CROSSOVER CONTROL AND THE AMP LEVEL CONTROL ARE ALREADY SET. DO NOT CHANGE THESE SETTINGS UNTIL YOU LISTEN TO THE SYSTEM, THEN ADJUST TO YOUR LIKING.
3. SET THE BASS, BALANCE AND FADER CONTROL ON YOUR RADIO TO THE MID POSITION.
4. TURN ON THE RADIO TO A LOW VOLUME AT FIRST, THEN ADJUST REMOTE LEVEL CONTROL FOR PROPER BASS.



Important

The Mounting Brackets on the Box are attached facing toward the center of the Box. This is done for shipping purposes only.

Before installing, remove the two screws from each Bracket and rotate 180 degrees and reinstall the screws.

The Brackets should end up being positioned as shown the picture.

If your Jeep does not have the 2 Bolts in the Floor to Mount the Sub, use the Self-Threading Bolts and Drill Bit Supplied. You will have to mark the holes first, remove the Sub and then Drill the holes.

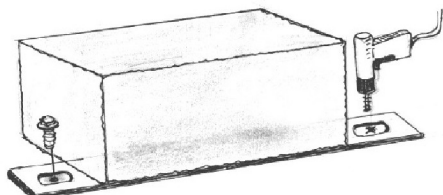

YOU ARE READY TO ROCK OUT!



Questions or Comments call
CFE Products 610-358-1886 ask for Bob