




HARDWARE ITEM NO. PART NUMBER DESCRIPTION QTY. FW4318ZP FLAT WASHER Ø7/16 X 1.25" ZINC PLATED 4 BHSCS311812ZP BHSCS 5/16-18 X .75 ZINC PLATE 4 BHSCS 3/8-16 X 1.50 ZINC PLATE BHSCS381624ZP 2 4 FW3112ZP FLAT WASHER Ø5/16" X .75" ZINC PLATED 4 6 2JSP1800-03 CROSS MEMBER 1 2 HN3816ZPGR5 HEX NUT 3/8-16 ZINC PLATE GR5 JL DESTROYER FRONT BUMPER SKID PLATE 8 JL18FBSPDSINS 1



First remove the crash bar, there are two bolts holding it on.

After the bolts are removed, you will shift the crash bar slightly up, then pull towards you to remove the tabs out of the opening.

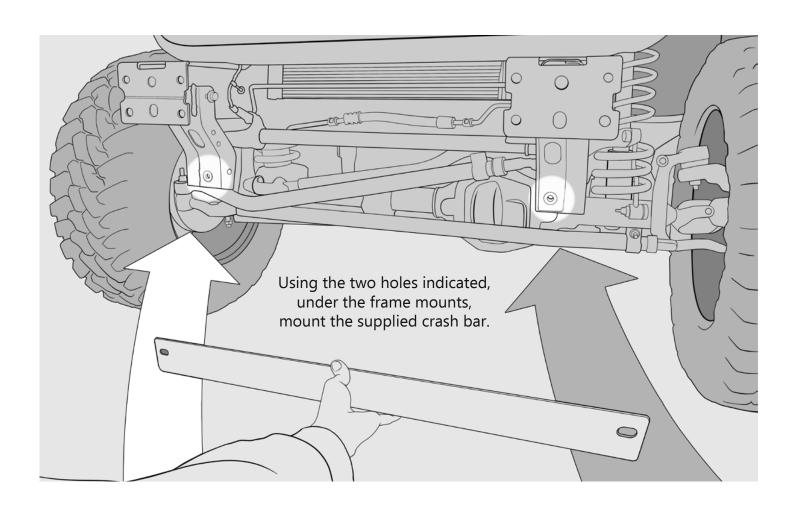






STEP 1:

- USING THE FOUR (5/16") BUTTON HEAD BOLTS, LINE UP THE HOLES AND ATTACH THE CORNERS, THEN THE MIDDLE OF THE SKIDPLATE, FOR A TOTAL OF FOUR BOLTS.



STEP 2:

- ON THE BOTTOM, ATTACH THE TWO 3/8" BOLTS THE CRASH BAR IN ORDER TO FULLY SECURE THE SKIDPLATE.

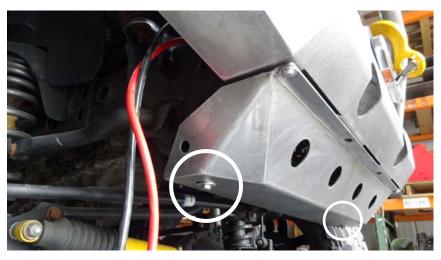


STEP 3:

- ONCE THE TWO BOTTOM (3/8") BOLTS WITH (7/16") WASHERS ARE ATTACHED, THE SKIDPLATE SHOULD BE FULLY SECURED.



STEP 4:

- THE SKIDPLATE IS NOW SECURED AND READY TO PROTECT YOUR JEEP!

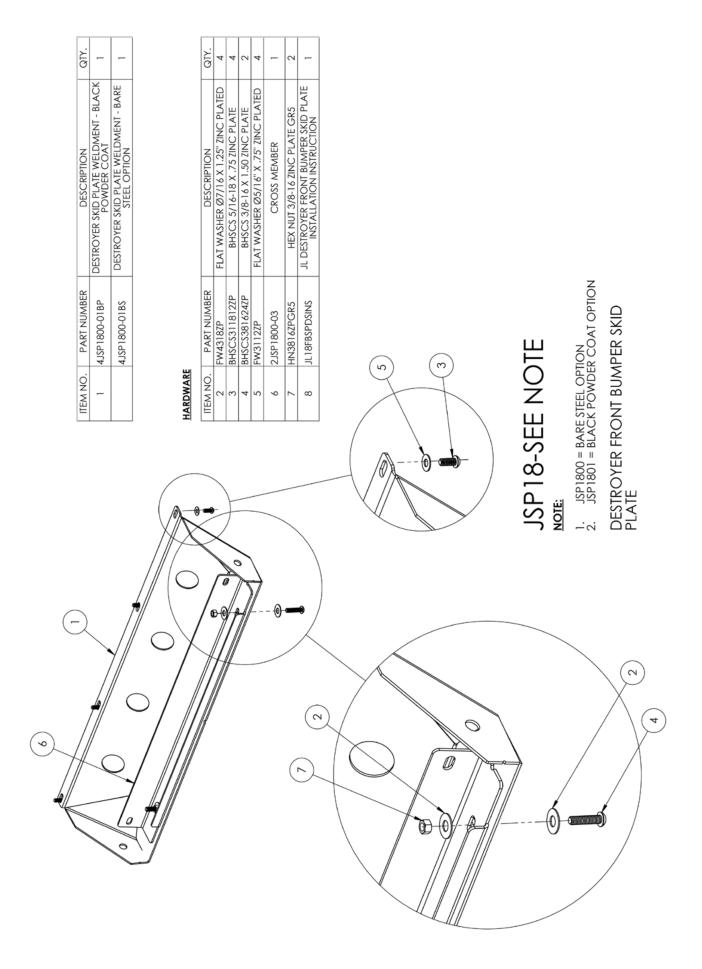

Destroyer Front Skidplate Shipping Slip

*please check contents when opening/assembling package

3/8"x1.5" Buttonhead 7/16" Washers 3/8" Nuts 5/16"x0.75 Buttonhead Assembled By: Date : _____ 5/16" Washers