


**MB1070 - Assembly Instructions Front Inner Fenders for JK/JKU**


**MB1070 - FRONT INNER  
FENDERS FOR JK/JKU**

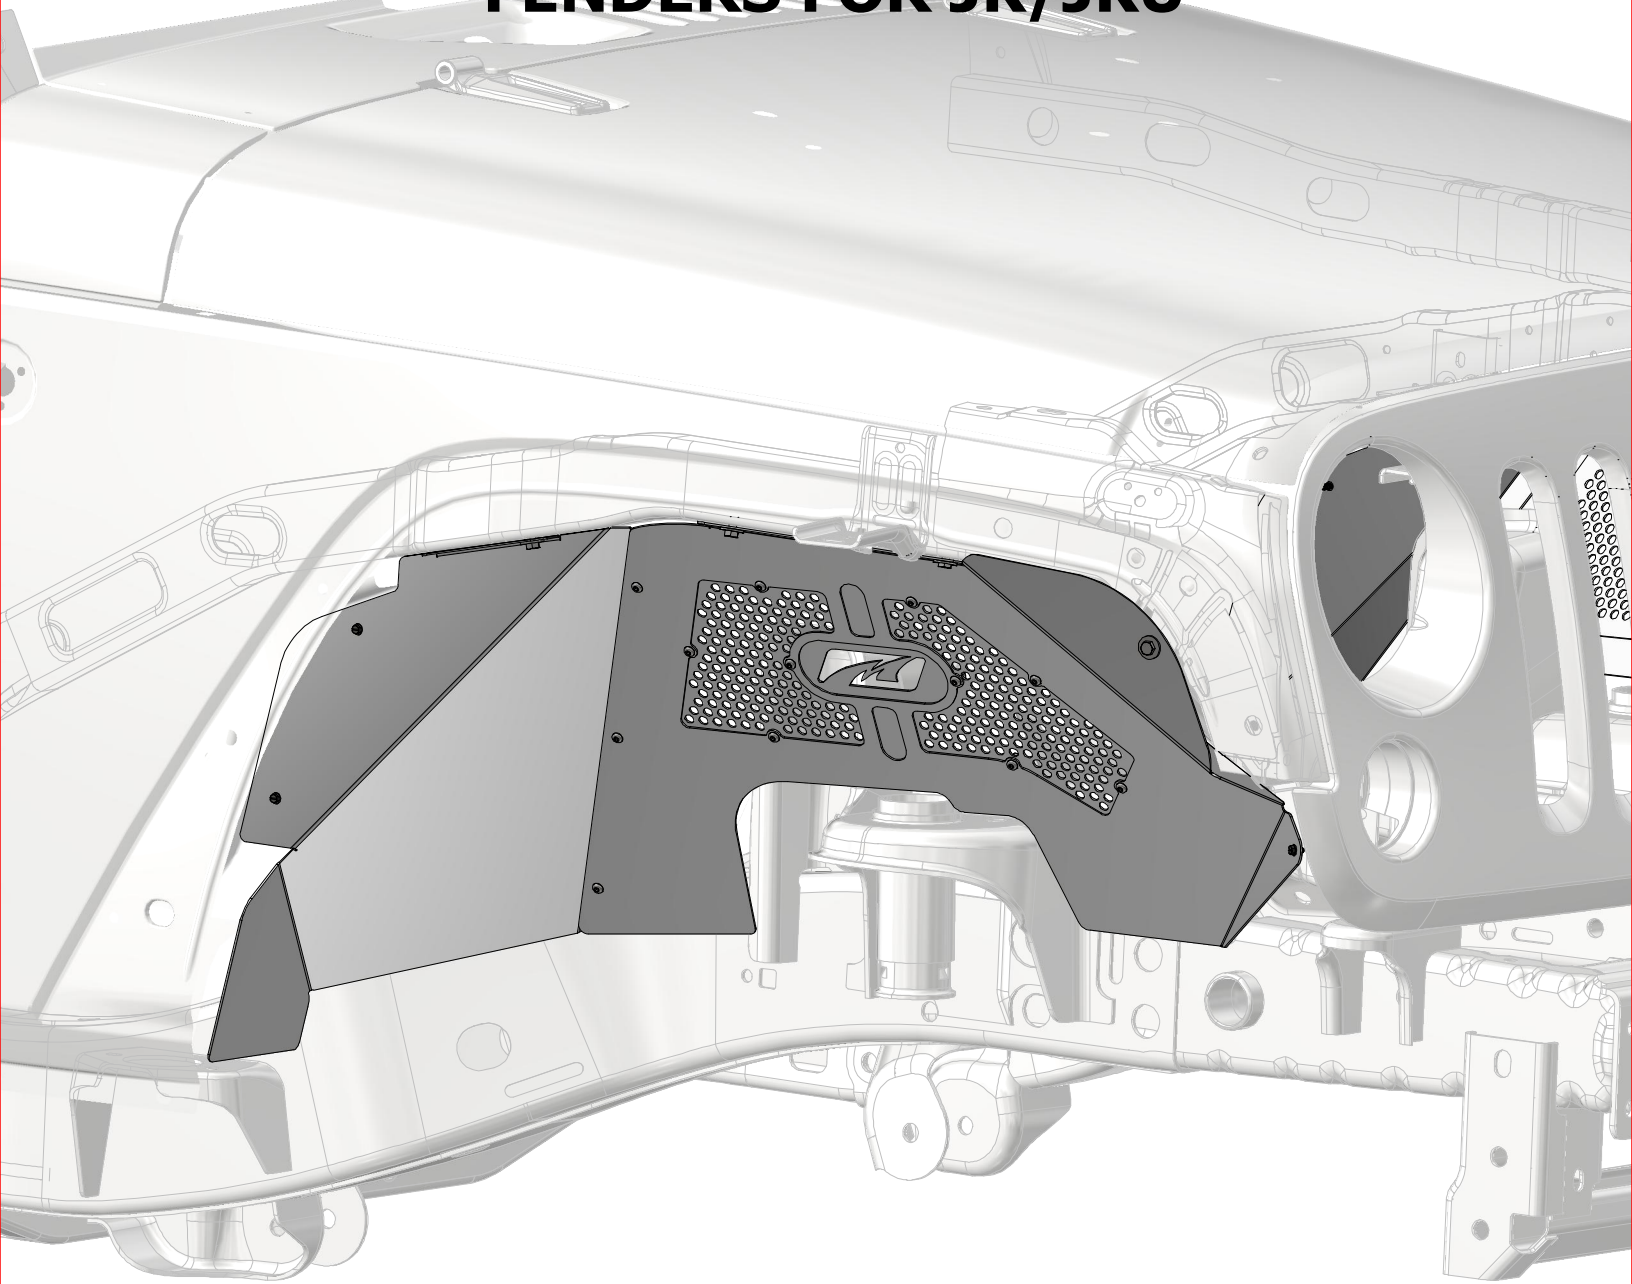


**ASSEMBLY INSTRUCTIONS**

**MB1070 - Shipping Front Inner Fenders for JK/JKU**


**CONTENTS**

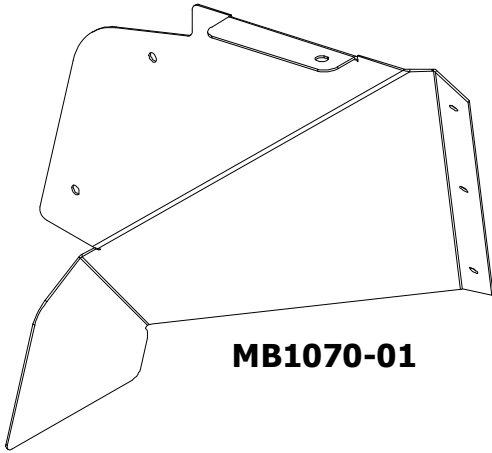


**MB1070-01**

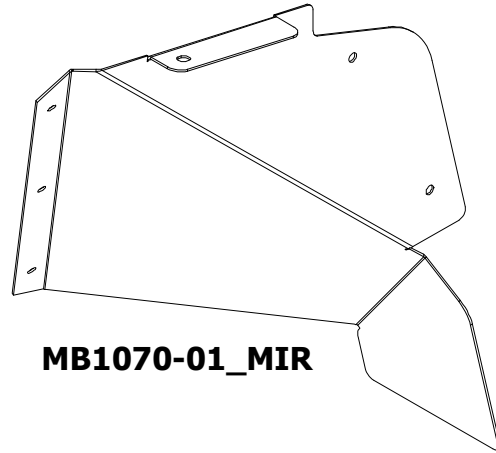


**MB1070-01\_MIR**

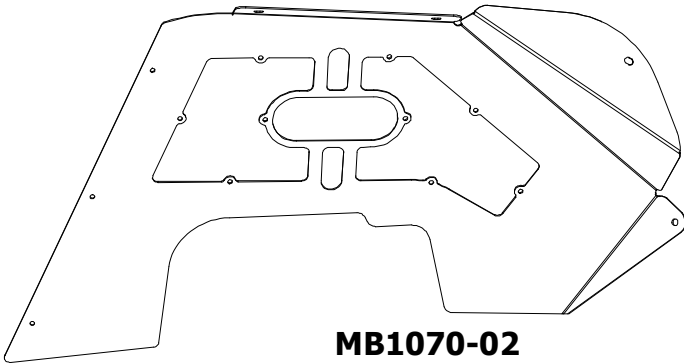


**MB1070-02**

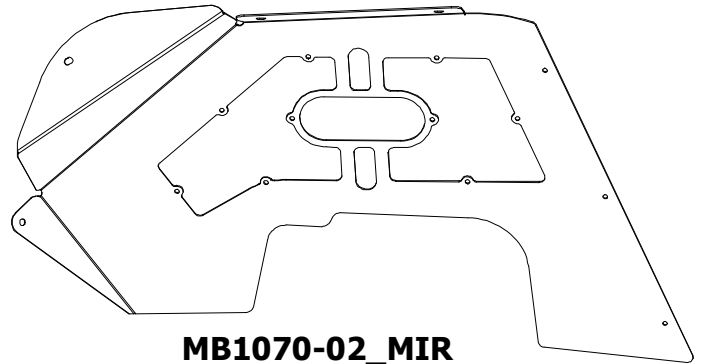


**MB1070-02\_MIR**

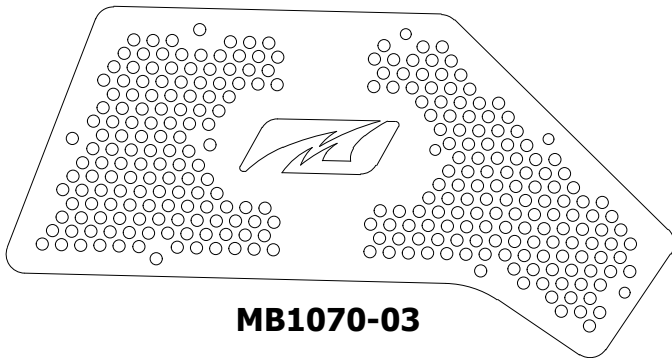


**MB1070-03**

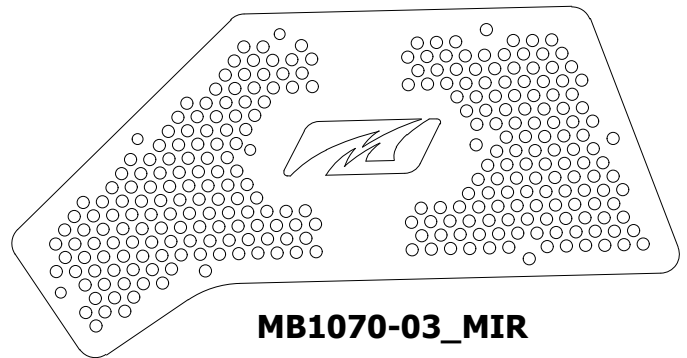

**MB1070-03\_MIR**




**#10-24 x 1/2"**  
**BUTTON HEAD CAP SCREW**  
Qty: 24




**#10-24**  
**NYLOCK HEX NUT ZINC**  
Qty: 18



**M6 FLAT WASHER STAINLESS**  
Qty: 8




**1/2" LG #8**  
**WASHERHEAD**  
**SELF-TAPPING SCREW**  
Qty: 6

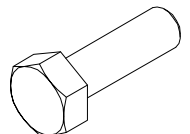

**M6 x 20mm**  
**HEX BOLT STAINLESS**  
Qty: 8


**MB1070 - Assembly Instructions Front Inner Fenders for JK/JKU**

**ASSEMBLY STEP 1**

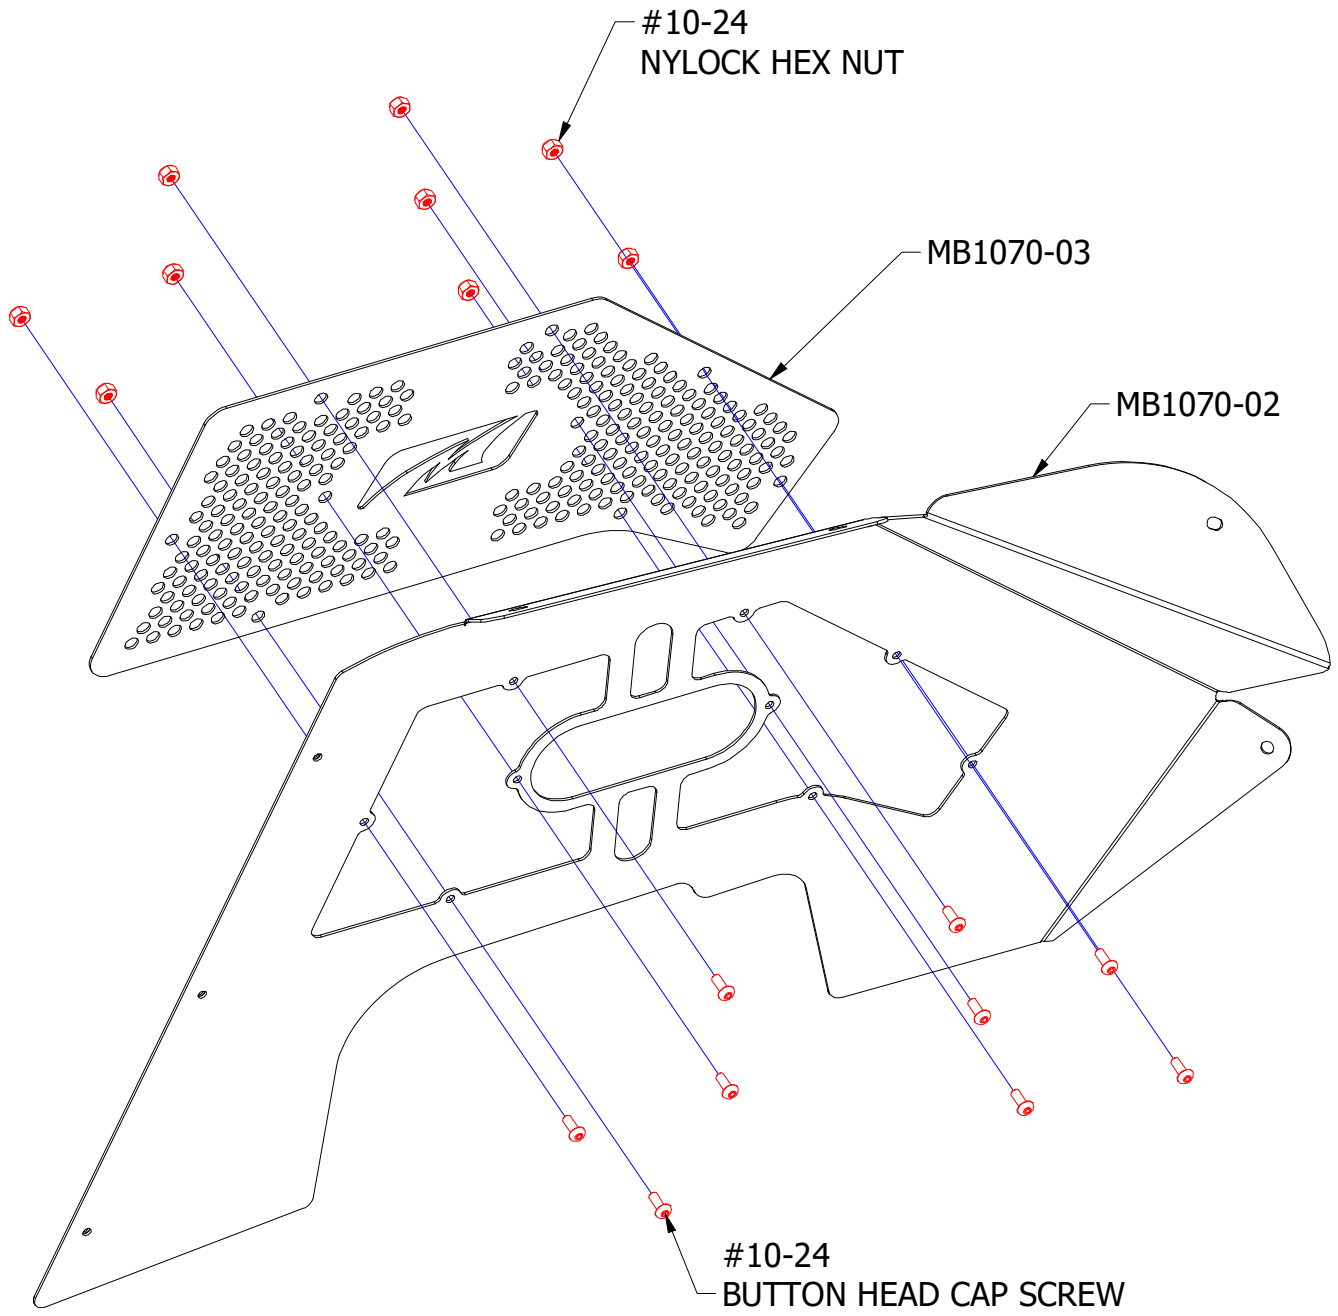

**MB1070 - Assembly Instructions Front Inner Fenders for JK/JKU**

**ASSEMBLY STEP 2**

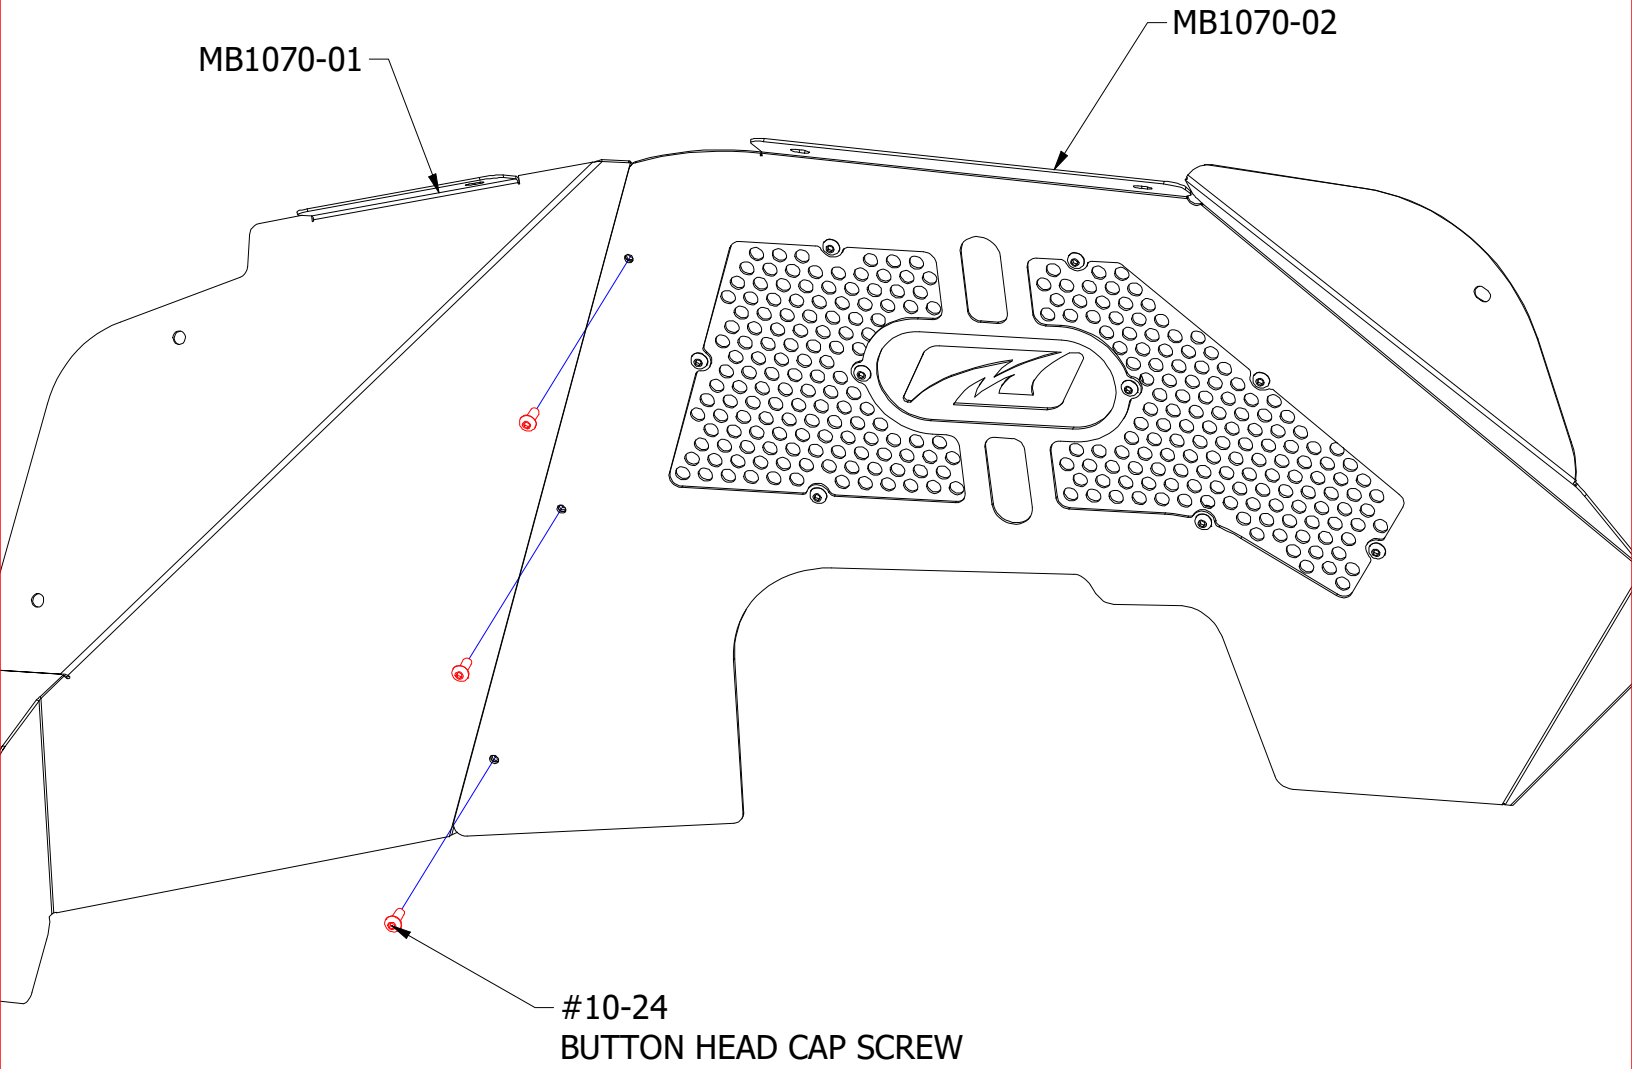

**MB1070 - Assembly Instructions Front Inner Fenders for JK/JKU**

**ASSEMBLY STEP 3**

