


MB1101 - Assembly Instructions Front Fenders - JL/JLU/JT



FRONT FENDER FLARES - JL/JLU/JT

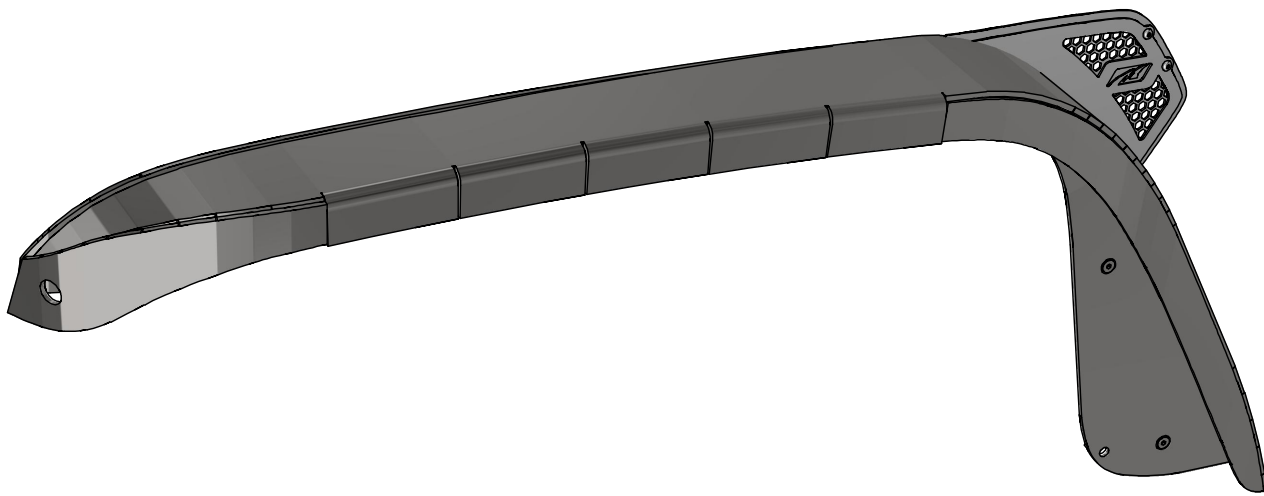


ASSEMBLY INSTRUCTIONS

MB1101 - Assembly Instructions Front Fenders - JL/JLU/JT


KIT COMPONENTS

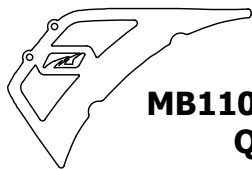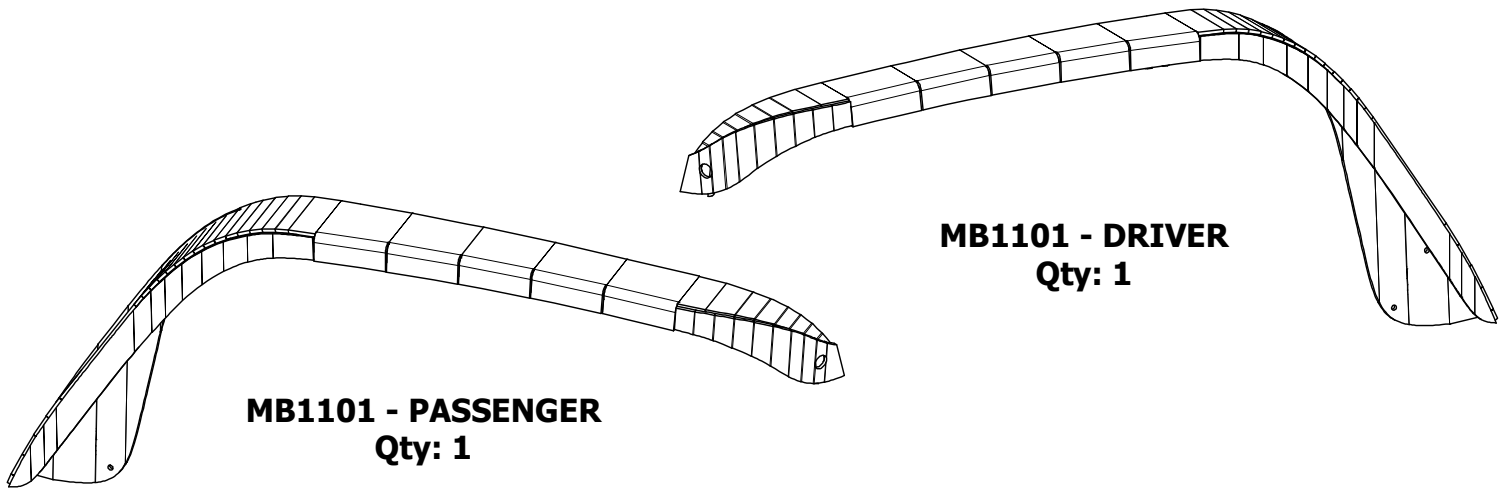


MB1101-09_MIR
Qty: 1

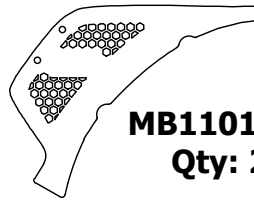


MB1101-08
Qty: 2

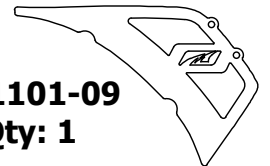


MB1101-09
Qty: 1

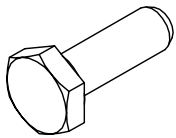


HEX BOLT
1/4"-20 x 3/4"
Qty: 6

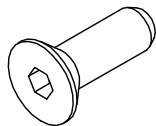

COUNTER SUNK BOLT
1/4"-20 x 3/4"
Qty: 4

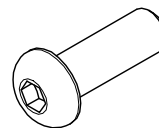


BUTTON HEAD SCREW
1/4"-20 x 3/4"
Qty: 4




BUTTON HEAD SCREW
#10-24 x 3/4"
Qty: 4

3/4" CLEAR LENS LED
FENDER/SIDE
MARKER LIGHT
2 PACK


MB6500
Qty: 1




FLAT WASHER
1/4"
Qty: 16



NYLOCK NUT
1/4"-20
Qty: 10

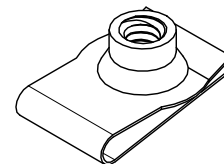


BARREL NUT
1/4"-20
Qty: 4



RIVNUT
#10-24
Qty: 4


MB1101 - Assembly Instructions Front Fenders - JL/JLU/JT

FENDER STRUCTURE MODIFICATION

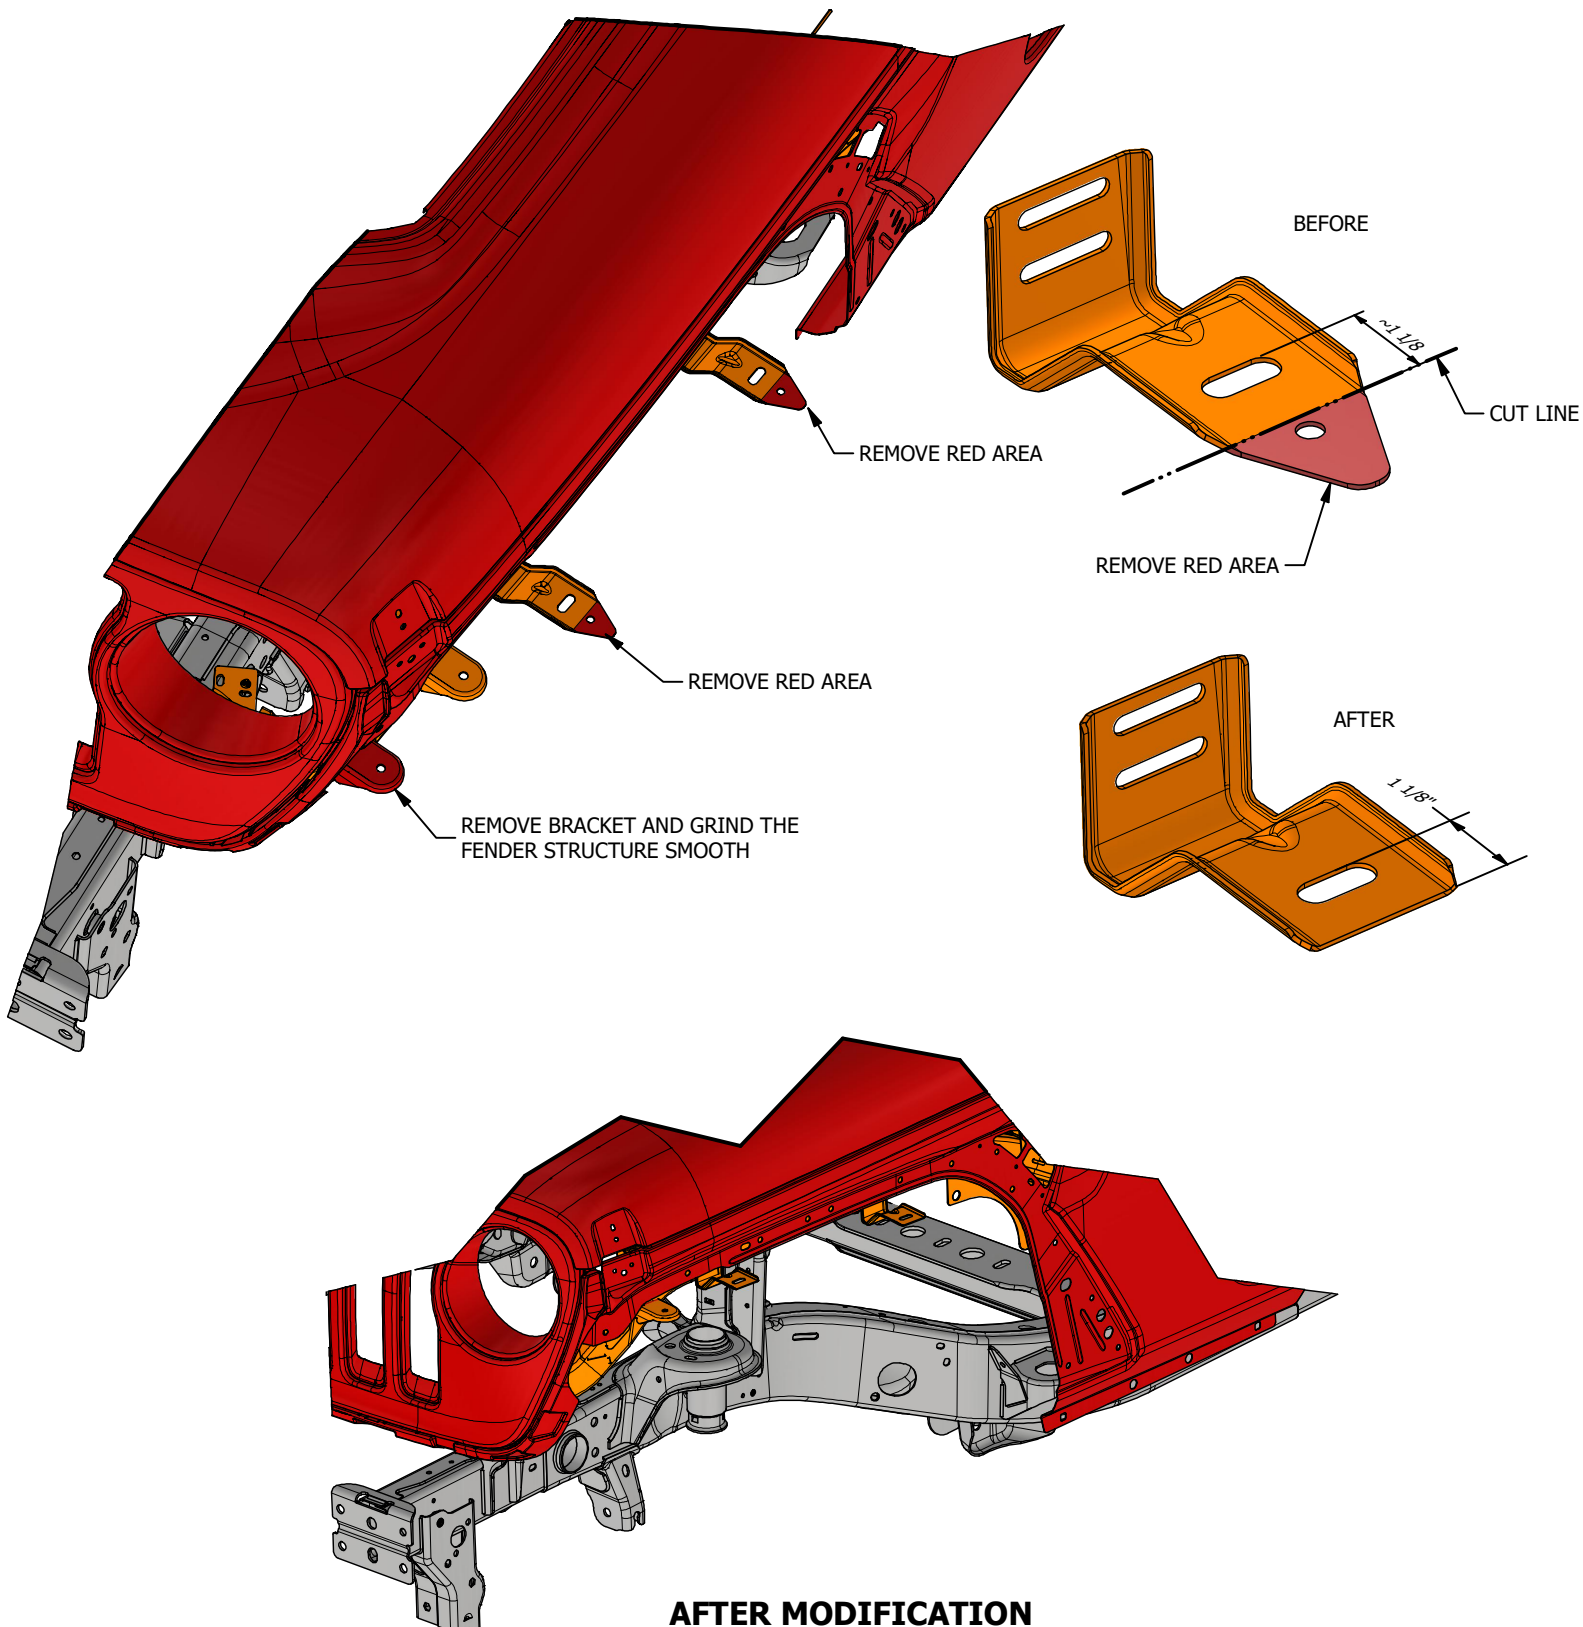


MB1101 - Assembly Instructions Front Fenders - JL/JLU/JT

VENT PLATE INSTALLATION

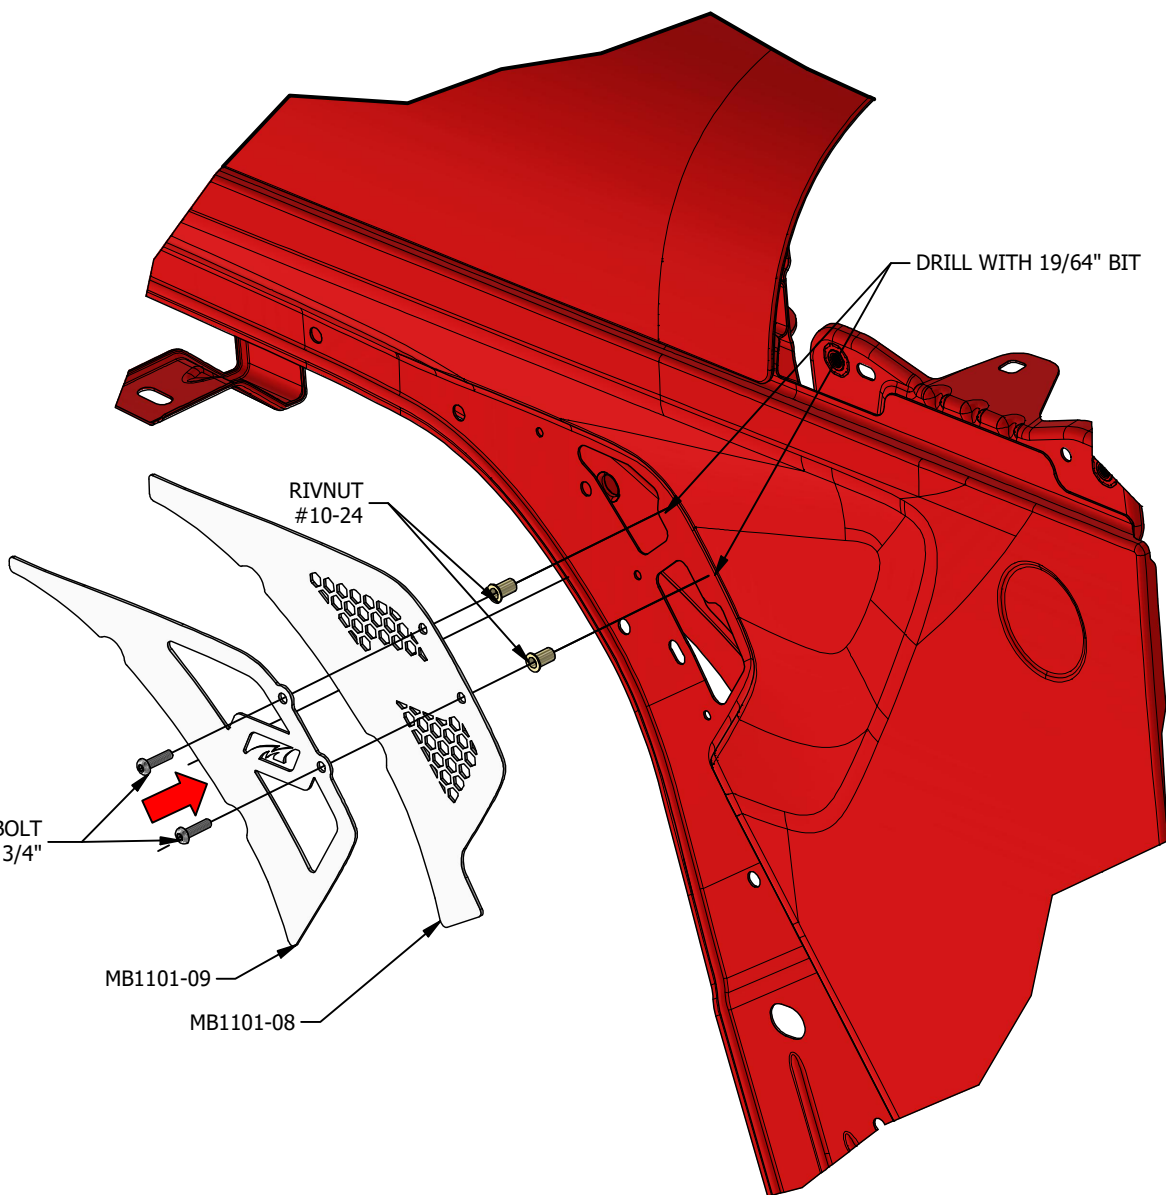




HOLD PLATE MB1101-08 ONTO THE JEEP BODY SO IT SHOWS AN EVEN REVEAL. MARK AND DRILL THE TWO HOLES ON THE JEEP BODY FOR THE RIVNUTS USING A 19/64" BIT.

NOTE THE EVEN REVEAL AROUND THE BODY LINE AND MB1101-08

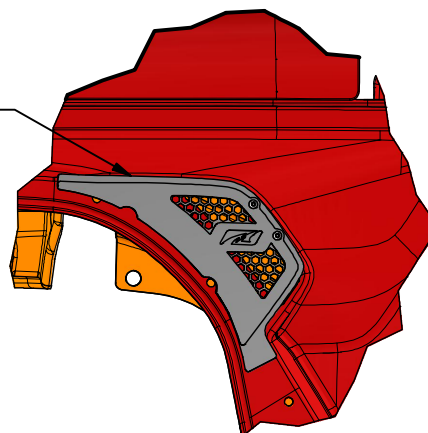

MB1101 - Assembly Instructions Front Fenders - JL/JLU/JT


FENDER PREPARATION

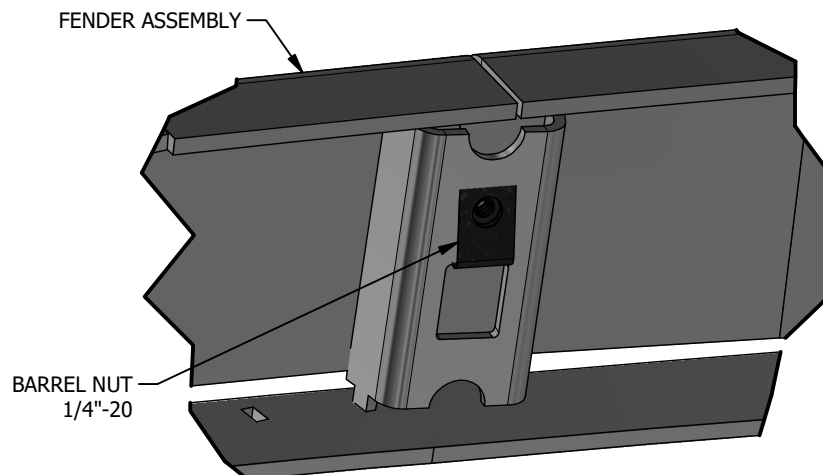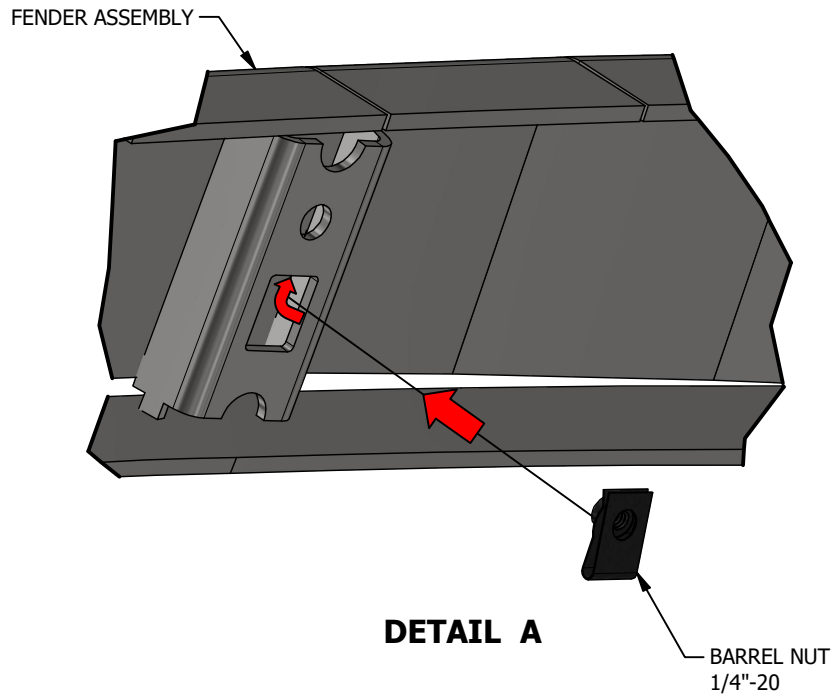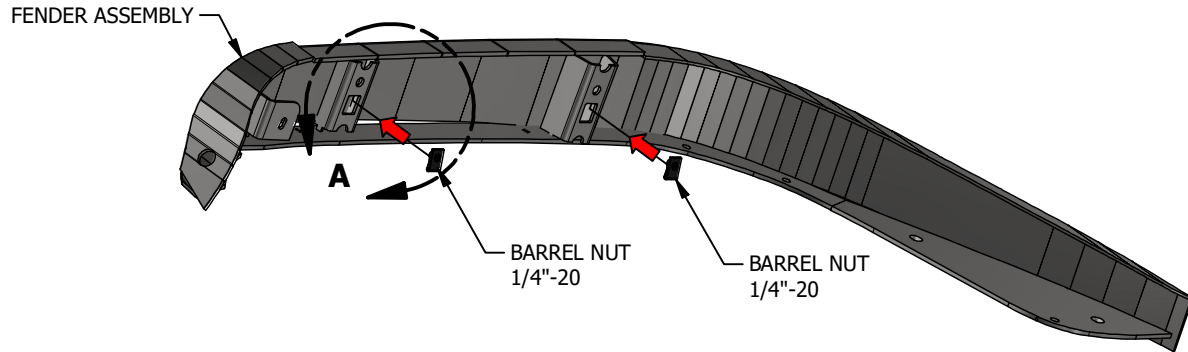

MB1101 - Assembly Instructions Front Fenders - JL/JLU/JT

FENDER PREPARATION


TEMPORARILY MOUNT THE FENDER AND MARK THE FOUR HOLES (CIRCLED IN RED) ONTO THE JEEP BODY. REMOVE THE FENDER THE DRILL THE FOUR MARKS MADE PREVIOUSLY TO CLEARANCE THE 1/4" HARDWARE.

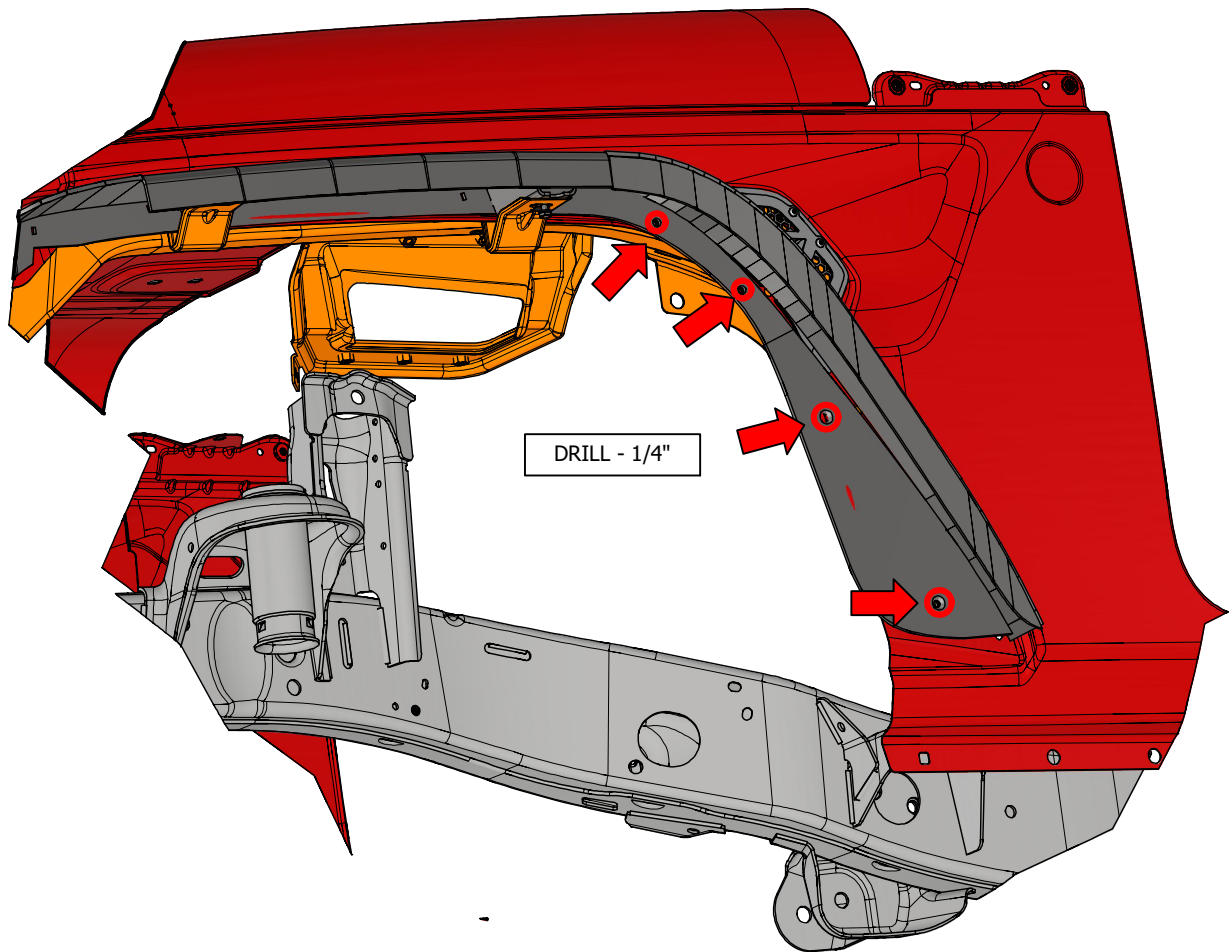

MB1101 - Assembly Instructions Front Fenders - JL/JLU/JT



FENDER INSTALLATION

HARDWARE LIST		
ITEM	PART NUMBER	DESCRIPTION
1	1/4-20 UNC x 0.75	Hexagon Socket Flat Countersunk Head Cap Screw
2	1/4"-20 UNC Barrel Nut	Barrel Nut
3	ANSI B18.2.1 - 1/4-20 UNC - 0.75, HCSI	Hex Cap Screw
4	ANSI B18.22.1 - 1/4 - narrow - Type B	Plain Washer (Inch)Type A and B
5	ANSI B18.2.2 - 1/4 - 20, HNI	Hex Nuts (Inch Series) Hex Nut
6	ANSI B18.3 - 10 - 24 x 3/4, HSBHCSI	Hexagon Socket Button Head Cap Screw
7	ANSI B18.22.1 - 1/4 - narrow - Type A	Plain Washer (Inch)Type A and B
8	ANSI B18.3 - 1/4 - 20 x 3/4, HSBHCSI	Hexagon Socket Button Head Cap Screw

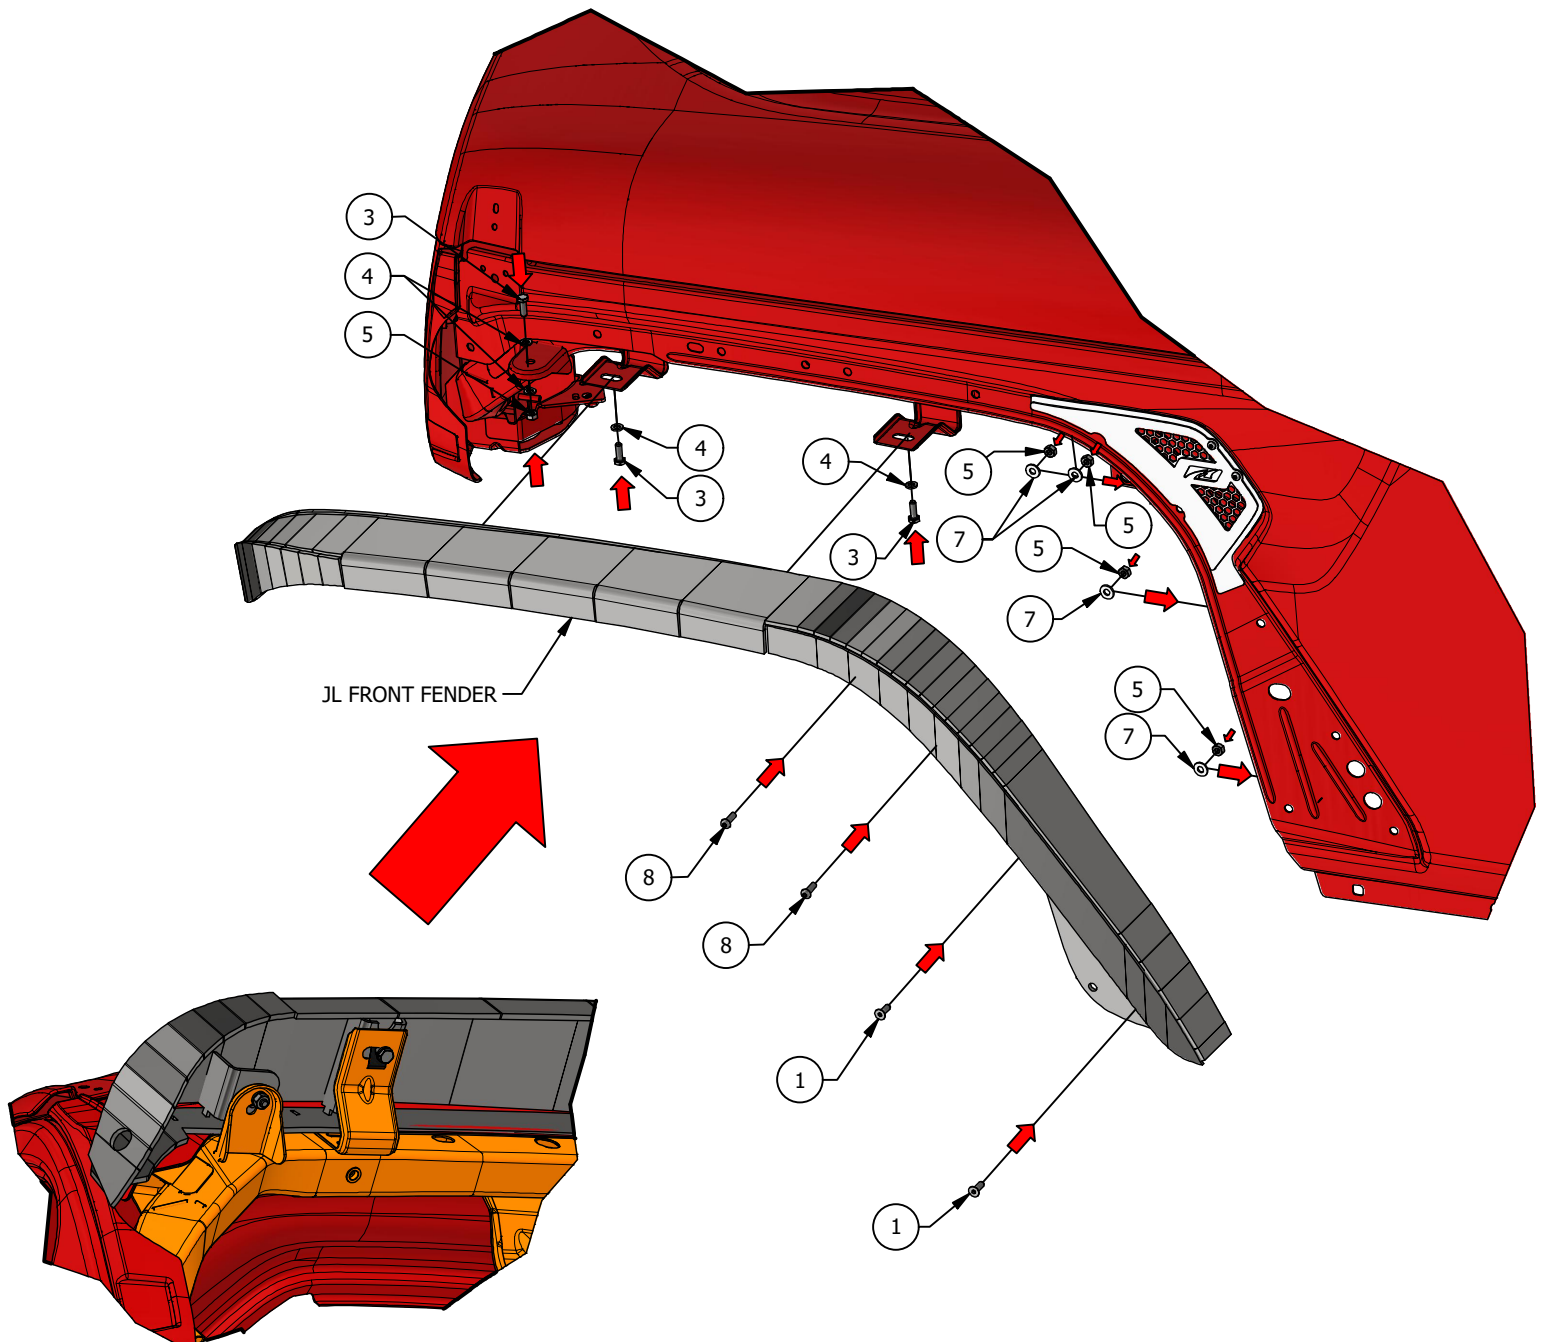

MB1101 - Assembly Instructions Front Fenders - JL/JLU/JT

Wire Insertion Side:

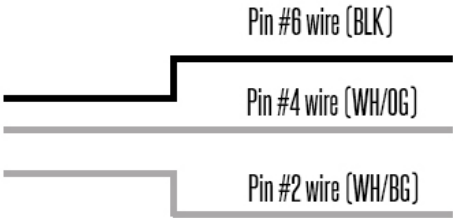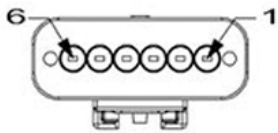

Pin	Circuit	Wire Color	Gauge/Size	Function	Option
1	L552	BG/OG	0.35	RIGHT FRONT LIGHTING FAULT SENSE	PREMIUM
2	L60	WH/BG	0.75	RIGHT FRONT TURN LAMP DRIVER	
3	Z904	BK	0.75	GROUND	
4	L78	WH/OG	0.75	RIGHT FRONT PARK LAMP DRIVER	
5	L59	WH/DB	0.75	RIGHT DRL LAMP DRIVER	
6	Z904	BK	0.75	GROUND	