



JEEP WRANGLER POWER CONTROL MODULE Installation Instructions

IMPORTANT NOTE FOR ALL VEHICLES EQUIPPED WITH
ENTERTAINMENT SYSTEMS, BACK UP CAMERAS, NAVIGATION
SYSTEM, ETC..

Disconnecting the battery requires the system to go through a Reboot process, this process may take up to 1 hour before the systems are working properly again. Don't panic, be patient, they will return to normal. Note that that will happen anytime you disconnect or have a battery go dead.

Jeep Wrangler


**NOTE: Always disconnect negative battery terminal before attempting to install any electrical component

1. Locate and remove the vehicles computer.
2. Place the computer(ECU) on a workbench or table.
3. Install the JET module on the BROWN (top) connector by pulling out the locking handle to line it up with the guides on the PCM and then push down firmly to make sure it is seated all the way into the PCM.
4. Push the locking handle in to lock the module down.
5. Re-install the computer and reconnect both wiring harnesses.
6. Start the vehicle and verify that the Check Engine Light is **NOT** on.


Jeep Wrangler



Jeep Grand Cherokee

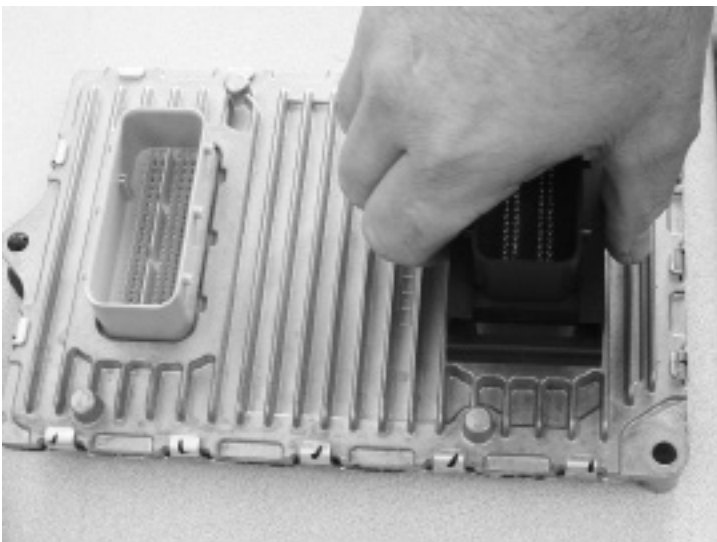

STEP 3

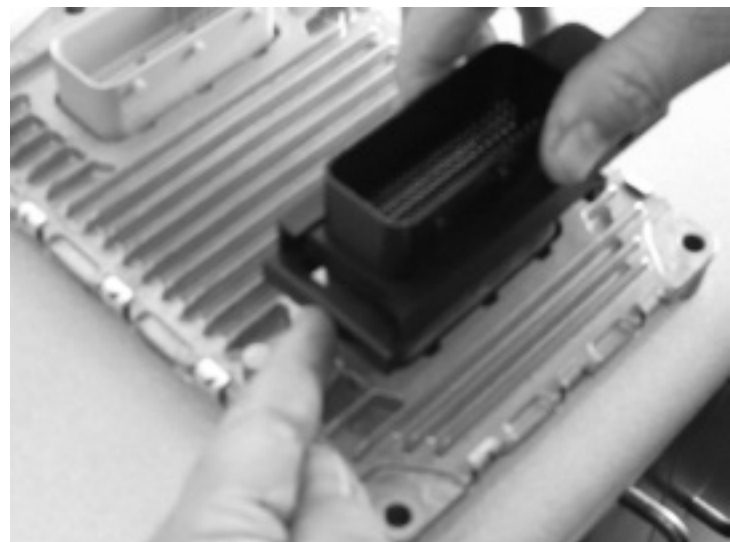

STEP 4



JET Performance Products, Inc.
17491 Apex Circle
Huntington Beach, California 92647
714-848-5515 | www.jetchip.com | 714-847-6290 fax