



Fits: 1997-2006 Wrangler Jeep TJ

Tools Required:

Wrench sizes: 7/16", 8mm
Phillips screwdriver
Silicon Sealer
Drill bits 1/4" and 1/8"
center punch

Parts list:

1. Driver Side Rock Guard
1. Passenger Side Rock Guard


127-Rock Guard

Olympic 4x4 Products are serviced by our factory trained personnel. We provide answers to installation questions. We ship component parts A.S.A.P. Call us before returning Olympic 4x4 Products to your retailer or mail order specialist. May not work with some aftermarket fender flares, modified or trimmed wheel wells

**For assistance please call
800-777-0878**

Included list of hardware : 12X TJ

- | | |
|----|----------------------------|
| 4 | #14 screw |
| 6 | 1/4" x 3/4" phillips screw |
| 16 | 1/4" flat washer |
| 6 | 1/4" lock washer |
| 6 | 1/4" nut |

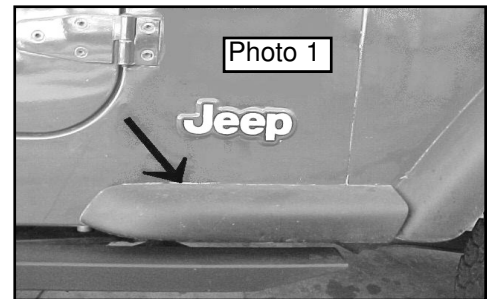

Step 1. Using a 8mm wrench or socket remove the plastic fender extensions, found on some Wrangler model jeeps as shown in Photo 1.

Step 2. Position the Rocker Guard between the fender flairs, then push up on the bottom of Rocker Guard until it seats firmly against the bottom edge of the body tub. **Use the mounting holes in the Olympic Rocker Guards as a template, mark the location of the holes you will need to drill to fasten the Rocker guards to your jeep.**

Step 3. Pull the interior carpeting inside the Jeep away from the interior side wall. Using the center punch mark the location of the holes to be drilled. Drill 1/8" pilot holes and then drill 1/4" hole for only the three center holes.

Note: Use a touch up paint on the drilled holes to cover all bare metal and let dry before applying the clear silicon as described in Step 4.

Step 4. **Place a small amount of clear silicon in the newly drilled holes.** Position the Rocker Guard in place and insert the 1/4" bolts thru a flat washer and then thru the three center mounting holes and fasten by first placing a flat washer then lock washer and secure with 1/4" nut.

Step 5. The #14 screws will be used in the ends of each rocker guard. You will install a flat washer on them before using them to secure the rocker guard. Take care not to over tighten these screws.