



KIT CONTENTS:

- A. Panel x1
- B. Left Door Surround x1
- C. Right Door Surround x1
- D. Door Surround Knob x4
- E. M8 Stainless Steel Button Head Bolt x2
- F. M8 Stainless Steel Button Flat Washer x2

OPTIONAL KIT CONTENTS:

- G. Sunshade x1 (Optional)
- H. Bungee Retainer x2 (Optional)

REQUIRED TOOLS LIST:

- Safety Glasses
- M6 Allen Wrench

A FEW WORDS ABOUT PRODUCT SAFETY:

Your Quadratop® Jeep protection product is intended to enhance the utility and enjoyment of your off road capable vehicle. Follow safety information and installation recommendations. Throughout these instructions is important safety information that is generally preceded by one of three signal words indicating the relative risk of injury, property damage or adverse consequence.

The signal words mean:

! WARNING !

A HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, COULD RESULT IN DEATH OR SERIOUS INJURY. YOU CAN BE KILLED OR SERIOUSLY HURT IF YOU DON'T FOLLOW INSTRUCTIONS.

! CAUTION !

A HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, COULD RESULT IN A MINOR OR MODERATE INJURY. YOU CAN BE MODERATELY HURT AND ALSO MAY SUFFER PROPERTY DAMAGE IF YOU DON'T FOLLOW INSTRUCTIONS.

NOTICE

CAREFUL ATTENTION IS REQUIRED TO THIS INSTRUCTION OR OPERATION BUT DOES GENERALLY NOT RELATE TO PERSONAL INJURY. DAMAGE TO YOUR QUADRATOP® PRODUCT OR OTHER PROPERTY MAY RESULT IF YOU DON'T FOLLOW INSTRUCTIONS.

BEFORE YOU BEGIN INSTALLATION:

Congratulations on your purchase of Quadratop® **product** for your Jeep® vehicle. When unpacking, check to make sure all parts are included and not damaged due to shipping. If any part is missing or broken, please call Customer Service at 800-745-6037 as soon as possible. Thank you again for your purchase and let's start the installation process.

! WARNING !

ALWAYS WEAR SEATBELTS. ALWAYS KEEP HEAD, ARMS AND BODY PARTS WITHIN THE VEHICLE.

! CAUTION !

READ ALL SAFETY MESSAGES AND ALWAYS WEAR SAFETY GLASSES WHEN WORKING WITH TOOLS.

NOTICE

FULLY SECURE THE PANEL AND SUNSHADE BEFORE DRIVING. NEVER TRY TO LATCH OR ADJUST PANEL OR SUNSHADE WHILE DRIVING. DO NOT USE IF SUNSHADE OR PANEL IS DAMAGED OR WORN.

NOTICE


READ AND FOLLOW ALL INSTRUCTIONS AND WARNINGS IN YOUR VEHICLE OWNERS MANUAL.



Looking for a smart way to store your Freedom Panels? Scan the QR code to explore our top-rated MasterTop solution – Part #91109-5000.



STEP 1 - DOOR SURROUND INSTALLATION

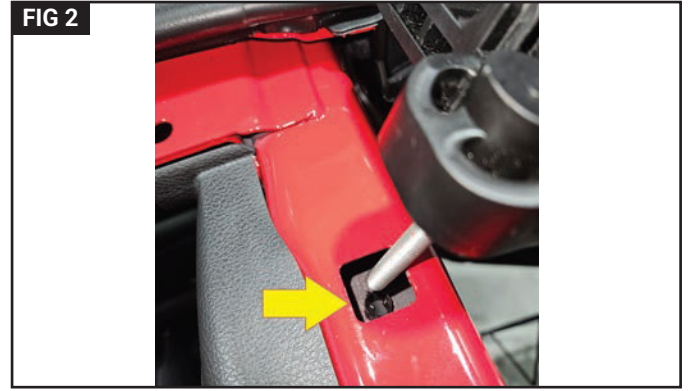

Put on safety glasses. Verify that all components and hardware are included. Following the owner's manual, remove and store the factory front freedom panels. Then, position the door surrounds onto the factory side sport bars (Fig. 1). For 2024 and newer vehicles, ensure that the door surround threaded studs are properly inserted through the retainer clips located within the side sport bar mounting holes (Fig. 2).

STEP 2




With the surround in place, verify that the front windshield rubber seal rests on the outside of the surround (Fig. 3). Thread the door surround knobs onto the threaded studs of the door surround. Hand-tighten the knobs until snug, but do not fully tighten (Fig. 4). Repeat this process on the opposite side.

STEP 3 - INSTALLING SUNSHADE IF SUPPLIED (OPTIONAL) IF NOT INSTALLING SUNSHADE SKIP TO STEP 5



Roll back the sunshade panel as shown. Secure it using the two straps by threading them through the nylon strap loops. Pull Snuggly. (Fig. 5 & 6). **NOTE: Rolling the Sunshade too tightly may result in damaging of the fabric.**

STEP 4 - ATTACHING SKYLITE SUN SHADE TO SKYLITE ROLL BACK TOP

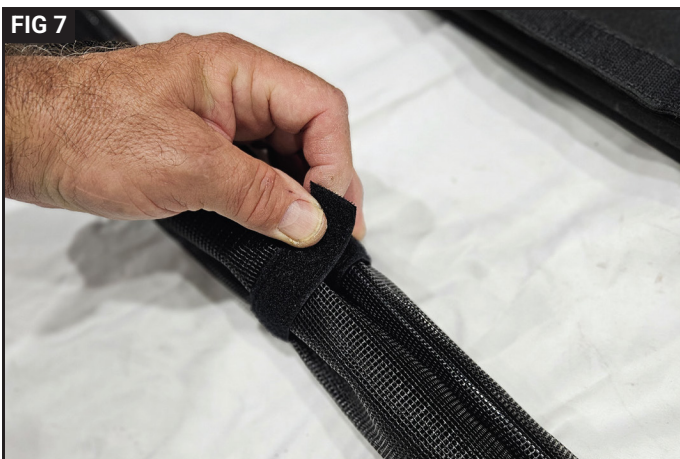

Roll up Skylite Sun Shade panel and secure with hook and loop straps as shown (Fig. 7). Remove Bungee retainer from shade and loop the bungee cords through metal mounting tabs on Skylite Roll Back Top. Pull Bungee cord through Skylite Sun Shade grommet and secure to Bungee ball (Fig. 8).

STEP 5 - INSTALLING PANEL



Position the panel onto the vehicle as shown. Slide it forward, aligning and inserting the threaded mounting tab into the side door surrounds as illustrated (Fig. 9 & 10).

STEP 6





Locate the rear access mounting hole on the underside of the door surround. Insert the M8 stainless steel bolt and M8 stainless steel washer through the access hole and thread them into the mounting tab on the panel frame (Fig. 11 & 12).

STEP 7



Tighten the M8 stainless steel bolt using an M6 Allen wrench (Fig. 13). Then, fully tighten the side Door Surround Knobs (Fig. 14). Repeat the process on the opposite side.

STEP 8 - CLOSING/OPENING OF PANEL

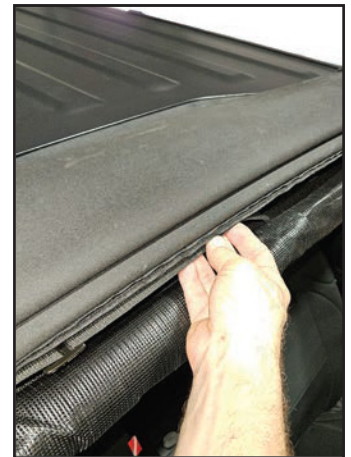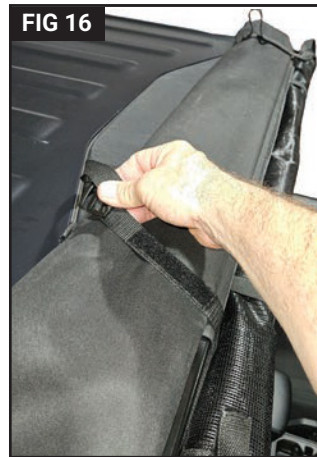

With the panel secured to the door surrounds, rotate the rear securing latches while simultaneously pulling down on the metal frame (Fig. 15). Unroll the panel by loosening and unhooking the straps secured in Step 3 (Fig. 1). Then, fasten the straps to the underside of the panel as shown (Fig. 16)

STEP 9



Roll the panel forward toward the windshield frame. Slide the bow ends of the panel into the side door surrounds as shown. Pull the bow forward to securely lock it into place. (Fig. 17 & 18).

STEP 10



Continue rolling the Skylite Roll Top forward, locking the header's rotating tabs into the corresponding sockets on the side door surrounds. Once the tabs are properly seated in the rotating brackets, pull down on the header and fasten the header latches securely (Fig. 19 & 20).

STEP 11



With the front header secured, pull the side panels down and over the side door surrounds. Fasten the panels in place using the velcro strips (Fig. 21 & 22).

⚠ WARNING ⚠

ROLLING THE SUNSHADE TOO TIGHTLY MAY RESULT IN DAMAGING OF THE FABRIC.

Skylite Header Clamp Adjustment Instructions:

Your QuadratoP Skylite Roll Top header comes equipped with factory-installed header latches. Minor adjustments may be necessary to ensure proper fit. If adjustments are needed, please follow the steps provided to achieve a secure and accurate fit.

STEP 1 - SKYLITE HEADER CLAMP ADJUSTMENT INSTRUCTIONS




Put on safety glasses. With the Quadratop Skylite Roll Top installed, secure and latch the header to the windshield brackets. Once fastened, inspect the exterior fit of the header along the windshield frame. The fit should be tight and even from left to right (Fig.1).

STEP 2




If one side sits high or does not seal fully, adjustment will be required. From inside the vehicle, unlatch the side that needs adjustment (Fig. 2). With the latch released from the windshield bracket, use a 10 mm open-end wrench to loosen the M10 locknut (Fig. 3).

STEP 3

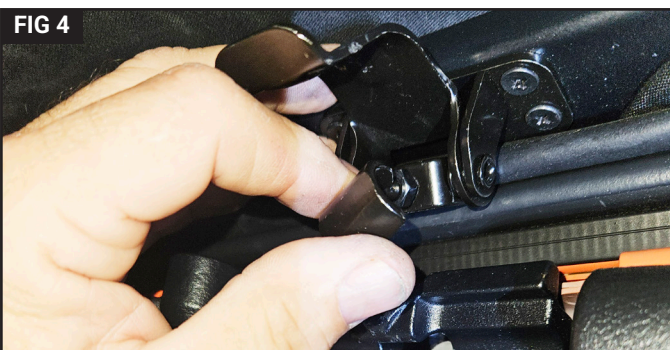

With the M10 locknut loosened, turn the header latch clamp clockwise to increase clamping force against the windshield frame. Turning the clamp counterclockwise will reduce the clamping force (Fig. 4). Before tightening the M10 locknut, re-latch the header and inspect the exterior fit (Fig. 5). Continue adjusting the clamp until a tight, watertight seal is achieved.

STEP 4

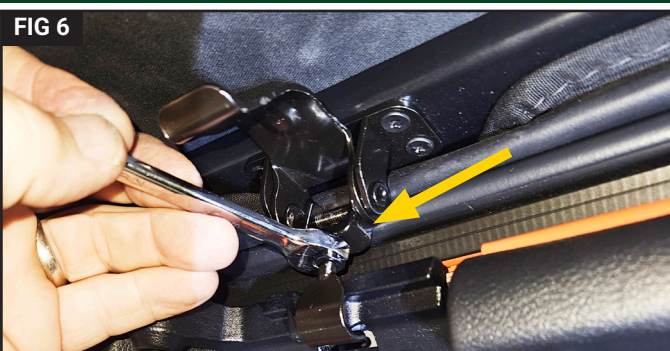

Once the correct latch clamp length is set, unlatch the clamp and tighten the M10 locknut using a 10mm open-end wrench (Fig. 6).

STEP 5 - FINE TUNING CLAMPING FORCE

The clamping force of the Quadratop Skylite Roll Top can be adjusted to make latching and unlatching easier. By following the steps above, each latch clamp can be lengthened or shortened to set the desired clamping force against the windshield frame. This adjustment also affects how easily the latches open and close. Set the clamps tight enough to create a secure hold, while still allowing the latches to be released without excessive effort. Proper adjustment will result in an even, watertight seal along the header and windshield frame. For best results, alternate adjustments between the left and right sides to fine-tune the fit for your vehicle.

QuadraTop® Exclusive Three Year Limited Warranty

Your QuadraTop® branded accessories are covered by the following Limited Warranty provided exclusively by QuadraTop, Inc., 1028 Saunders Lane, West Chester PA 19380.

This Limited Warranty is the only warranty made in connection with your purchase. QuadraTop neither assumes nor authorizes any vendor, retailer or other person or entity to assume for it any other obligation or liability in connection with this product or Limited Warranty. This Limited Warranty does not apply and is not cumulative to any accessory or part distributed by QuadraTop for which the Manufacturer provides a separate written warranty.

What is Covered:

Subject to the terms, exclusions and limitations herein and with respect only to QuadraTop branded accessories first sold in the United States, QuadraTop warrants to the initial retail purchaser only that your QuadraTop accessory shall be free of defects in material and workmanship: for a period of three (3) years from date of retail purchase.

This Limited Warranty is not assignable and shall terminate upon sale of the vehicle upon which the QuadraTop accessory is installed or other transfer to third persons.

All other warranties are hereby disclaimed, except to the extent prohibited by applicable law in which case any implied warranty of merchantability or fitness for a particular purpose on this product is limited to three (3) years from date of initial retail sale. QuadraTop reserves the rights to: (a.) require invoice or other proof your accessory is within the terms of this Limited Warranty as a condition of warranty service and, (b.) make future revisions to this product and Limited Warranty without prior notice or obligation to upgrade your product.

What is Not Covered:

Your QuadraTop Limited Warranty does not cover products or parts QuadraTop determines to have been damaged by or subjected to: (a.) installation damage, alteration, modification, combination with other parts, failure to maintain or improper repair or service, (b.) normal wear & tear, cosmetic damage or damage from moisture or water immersion, (c.) Acts of God, accidents, misuse, negligence, inadequate mounting or impact with vehicle(s), obstacles or other aspects of the environment, (d.) theft, vandalism or other intentional damage.

Remedy Limited to Repair/Replacement:

The exclusive remedy provided hereunder shall, upon QuadraTop inspection and at our option, be either repair or replacement of product or parts (new or refurbished) covered under this Limited Warranty. Customers requesting warranty consideration should first contact QuadraTop to obtain a RGA number (610-701-3336). All labor, removal, shipping and installation costs are customer's responsibility.

Other Limitations - Exclusion of Damages - Your Rights Under State Law:

In consideration of the purchase price paid, neither QuadraTop nor any independent QuadraTop distributor/licensee are responsible for any time loss, rental costs, or for any incidental, consequential, punitive or other damages you may have or incur in connection with any part or product purchased. Your exclusive remedy hereunder for covered parts is repair/replacement as described above.

This Limited Warranty gives you specific rights. You may also have other rights that vary from state to state. For example, some states do not allow limitations of how long an implied warranty lasts and /or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations and exclusions herein may not apply to you.

©QuadraTop, Inc. 2026. All Rights Reserved.

A4 Version 4/13/2026

Instructions Part# 12999-7000

