



This product can expose you to chemicals including vinyl chloride and lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

WARNINR:

MODEL # JW - DSC

rev



P65



DOOR

STORAGE CART

Make sure to put your Windows down and fold your Mirrors in before placing doors on the cart as shown in Picture 1.

Installation Instructions

1. Place the large Base Board bottom side up on a flat surface as shown in picture 2. Measure in 1/4" from both corners as shown in picture 3 and attach the casters to each corner using #8 3/4" phillips wood screws supplied in the kit. Set aside.
2. Place the smaller Top Board on a flat surface bottom side up. Locate the 4 pre-drilled holes. Secure the two Metal Side Braces using the 4- 1/4" hex screws as shown in picture 4.
3. On the edges without the lip, locate the 4 pre-drilled holes in the large Base Board as shown by the 4 circles in picture 2. Using the 4 1/4-20 carriage bolts, flat washer and nylock nuts, attach the Metal Side Braces to the Bottom Board as shown in picture 5. Use the flat washer on the bottom side under the nylock nut.
4. You are now ready to place your doors on the cart. The painted side of the doors will face in. Slightly offset the two doors on the cart to prevent the Mirrors from hitting as shown in picture 1. The cart was designed to be as narrow as possible to take up the least amount of garage space.
5. **Important:** After installing the doors on the cart, make sure you use the supplied Velcro Strap to tie the top of the doors together as shown in picture 1.

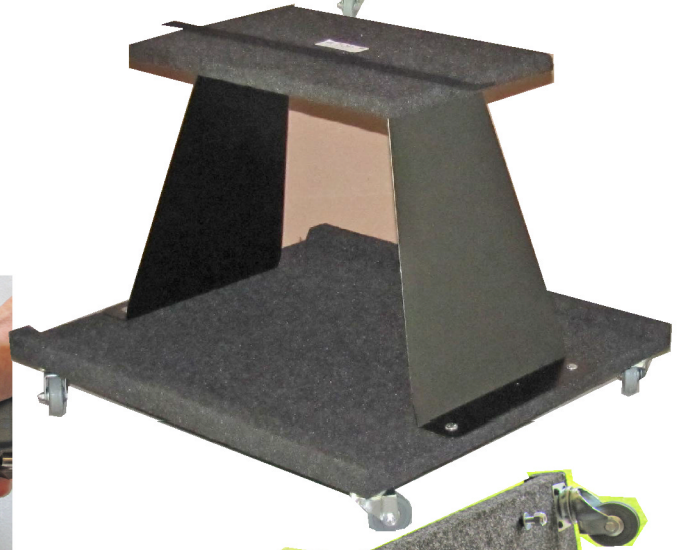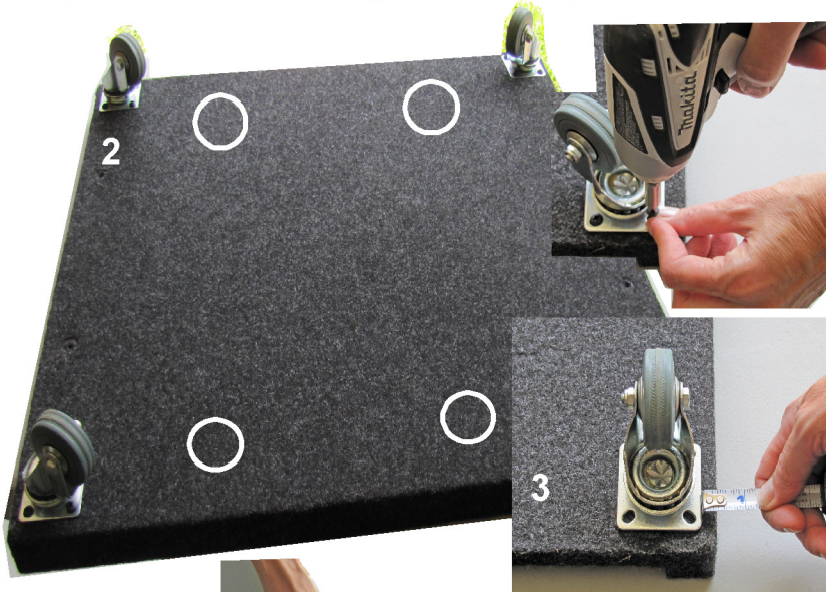

Questions or Comments ? call CFE PRODUCTS @ 610 358 1886 / ASK FOR BOB