



CFE PRODUCTS
 JK CUSTOM LED LIGHT MOUNT
 MODEL #JK- LMLED - 28
 JK / 2007 to 2018




rev
 P65

Fits Lights with Mounting Holes from 16 5/8 " to 29 1/4" On Center



1. Remove the Push Clips that are holding the Grill on (6 locations) using a small flat edge screw driver as shown in pic #1 & #2.
2. Pull the Grill forward then pull out the bottom of the Grill to unsnap the bottom clips as shown in pic #4. ****DO NOT PULL GRILL ALL THE WAY OFF YET...** the Parking Light Wires on each end still need to be unplugged. (next step)
3. Slide back the Red Plug Lock Tab to the **Unlock Position** as shown in pic # 4 and disconnect the cable from the Parking Light on each side as shown in pic # 5.
4. Remove Grill and set aside.
5. Pay close attention and check to see if the BRAKE LINE runs behind your grill as shown in pic # 6. This only affects earlier JK's. **If your brake line is in this location, make sure that you don't pinch the line during installation.**
6. Place 2 pieces of cardboard behind the bumper as shown in pic #7. *You may want to wrap black tape around the Radiator Support Bar to avoid scratching the paint as shown in the white circle in pic #7.*

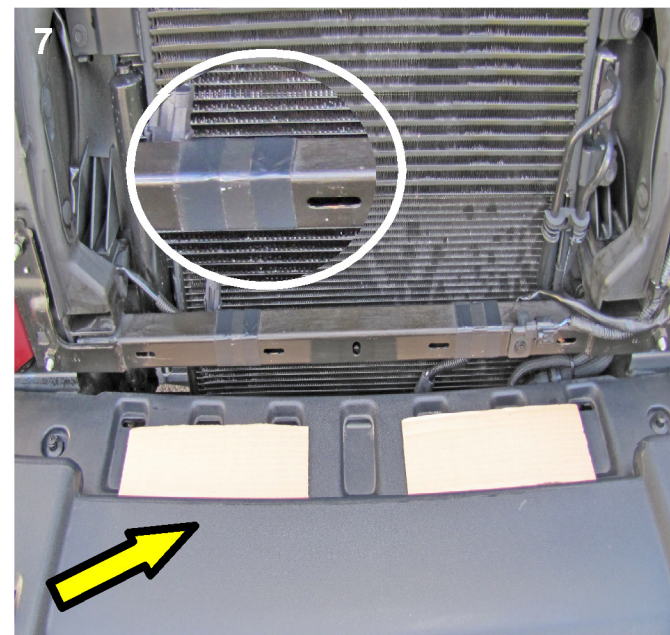



CFE PRODUCTS

MODEL #JK- LMLED - 28



Jeep Wrangler JK / 2007 to 2018



rev
P65



Left Side
(Passenger Side)

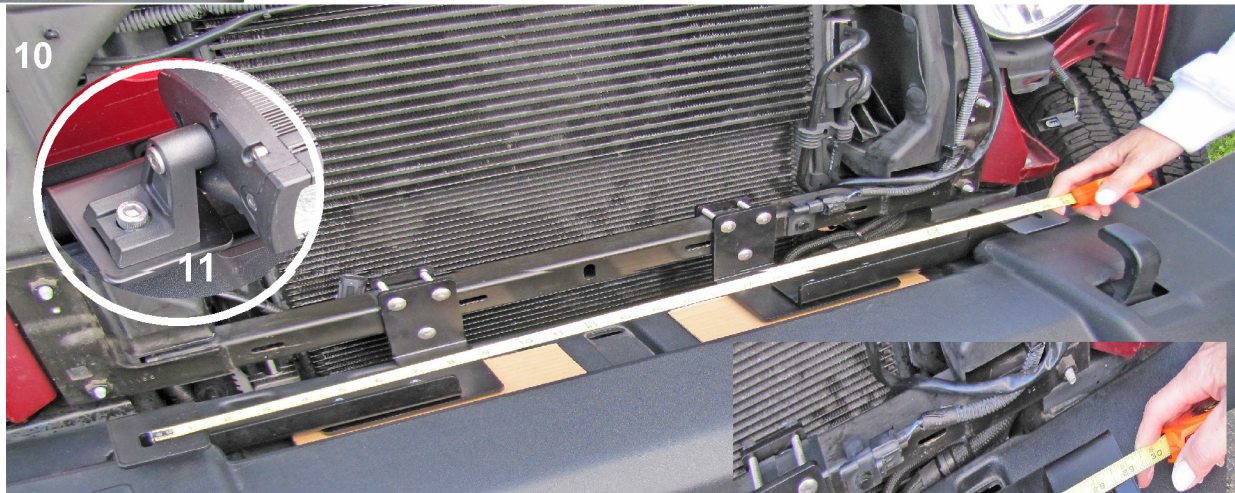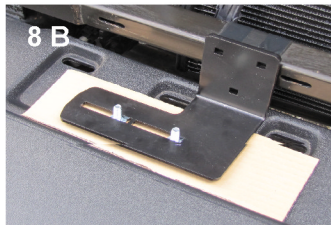

7. Identify the left and right side Mounting Brackets. See pic # 8B (showing left side). Insert the short carriage bolts into the Mounting Bracket and rest it on top of the cardboard as shown in pic #8. This will hold the bolts in place. Attach the Backing Plate to the Mount using the 2" long Carriage Bolts and Lock Nuts as shown in pic # 8 The double holes go toward the top. Loosely install all of the Nuts. Position the Mounts on the Lower Grill Frame making sure not to block the two Horizontal Slots shown in pic #9. Leave 1/4" between the inner edge of the Bracket and the outer edge of the slot as shown in yellow in pic # 9. These slots are used for remounting the grill. Tighten the Nuts with a 7/16" Open End Wrench while applying downward pressure with your thumb as shown in pic #8.

8. Install the Z Brackets to the Mounting Brackets leaving the Bolts loose enough to make adjustments. Set the distance of the Mounting Holes center to center at 28-3/8" as shown in pic #10 and #12 for the 28" Light.







9. Attach the Light to the Mount using the Bolts supplied with the Light at shown in pic #11. Leave the bolts loose enough to make adjustments. After the Light is mounted, make sure everything is centered, then tighten all of the Bolts.

10. Plug in the Parking Lights and reinstall the grill. Pic #12 shows a finished install of the 28" light.





Quadratec J3 LED 17" Light Bar with Flipped Mounting Bracket Addendum

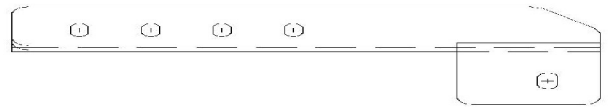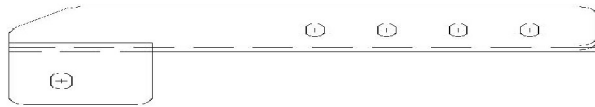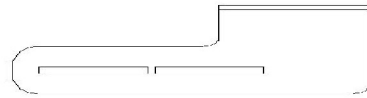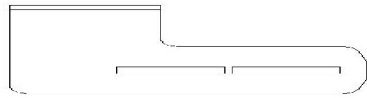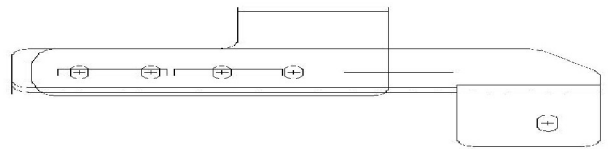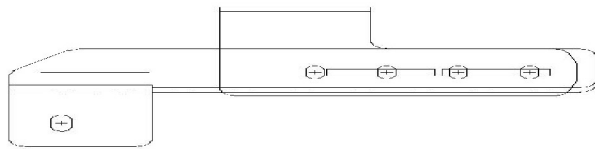

**with mounting brackets
flipped, lights with
mounting holes as small
as 16 5/8 center to
center can be mounted**

