

Rear Shock Bushing & Mount Installation Tips



Parts for Rear Top Mount.
Note Boot On Shock First!



Slide Bushing on Mount.
Make sure the Boot is on the
Shock before pressing.



Use a 13/16" Deep Well Socket
for pressing the Bushing into the
Shock.



Open a 6" bench vise wide enough
to insert Shock and socket.



Note mount end on top of vise jaw,
supporting the Shock, with everything
aligned, start closing the vise.



Stop and remove when Bushing
is through to the opposite side.

Rear Shock Bushing & Mount Installation Tips

Upper Shock Bushing & Mount continued.



Close vise to support the Shock, but not the Bushing.




Use socket and hammer to center Bushing/Mount in Shock. Done!

Lower Shock Bushing & Mount



Insert Steel Sleeve into Bushing.

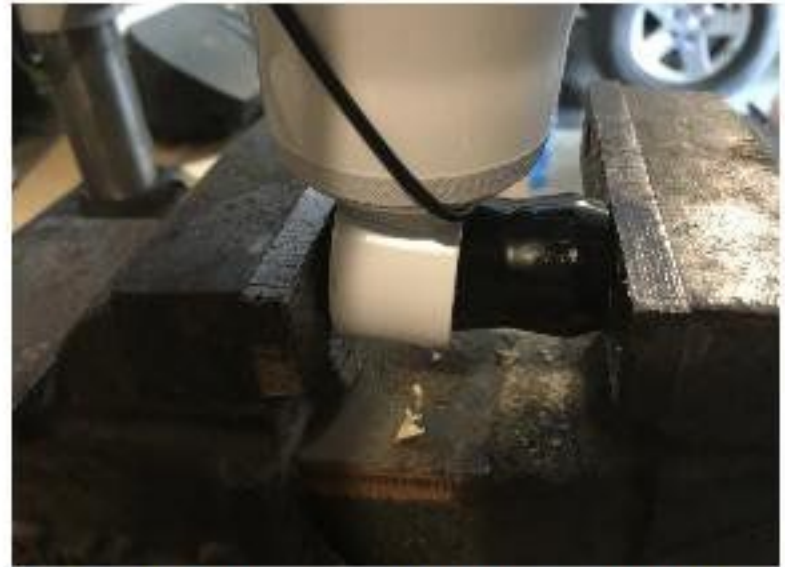

Use vise to press Bushing into the Shock.



When Bushing in through, wiggle Shock to center Bushing.



Shock now ready to install on vehicle!