

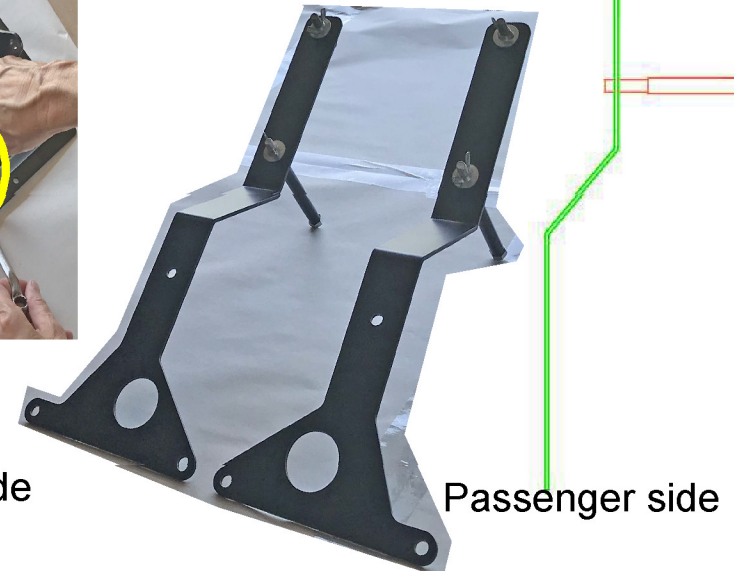
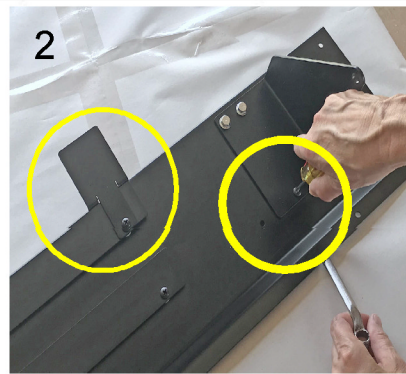
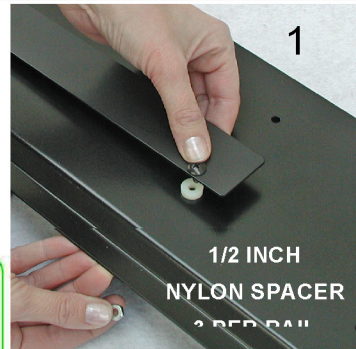


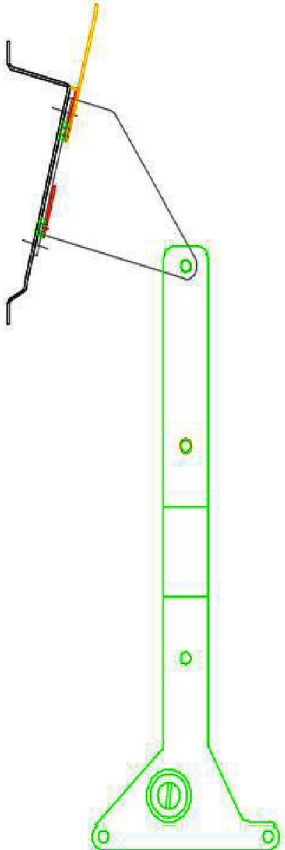

WARNING !

Before Using This Product, Make Sure You Read Your Owners Manual on How to Remove the Soft Top. Pay Particular Attention to the Locking of the Soft Top Bow Assembly Before you Remove the Top. Below is a Link to a Mopar Video on Installing & Removing the Soft Top. The Section on Locking the Bow Assembly is near the End of the Video. Not Locking the Bow Assembly can lead to Serious Injury. It is a 2 Person Job.

<https://www.youtube.com/watch?v=e0u25wlyRwl>

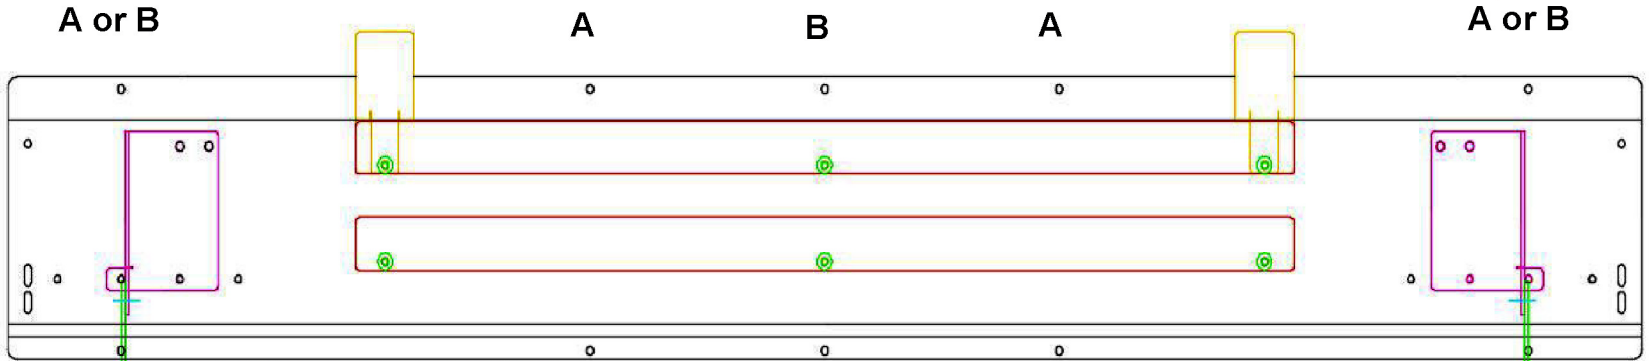

1. Assemble Parts in Photos # 1, 2, with 10/32 Black Screws & 10/32 Nylock Nuts As Shown.
 2. Use the 4 - 1/4 / 20 Silver Nuts & Bolts to attach the Bow Assembly Mounting Brackets shown by the Yellow Circles in Picture #3.
- **There is a Left Side and Right Side.

Wall Mounting:

Use Holes Marked **A** for Mounting w/Studs 16" on Center
Use Holes Marked **B** for Mounting w/ Studs 24" on Center

Fasten Both Top & Bottom Row of Screws
(#12 x 1 1/2" Long Phillips Screws)

Mounting Height: 54" Minimum from Floor to Bottom of Mount



SOFT TOP STORAGE ASSEMBLY VIEW
MODEL # JL - STS4D 2018 & UP

CFE PRODUCTS 1485 WILMINGTON PIKE WEST
CHESTER PA 19382 610-358-1886



This product can expose you to chemicals including vinyl chloride and lead, which is known to the state of California to cause cancer and birth defects or other reproductive

WARNING: harm. For more information go to www.P65Warnings.ca.gov

JEEP JL WRANGLER
SOFT TOP STORAGE SYSTEM
MODEL: JL - STS4D



rev
P65



STEP 1: Locate Studs on Garage Wall and Mark. The Soft Top Storage Hanger Must Be Assembled Before Hanging on the Wall.
(See Assembly Instructions on Page 1)

STEP 2: Mounting Height: At Least **54 INCHES** from the Floor to the Bottom Row of Mounting Screws as shown in picture #2.
Attach the Soft Top Assembly Mount to the Wall with Supplied Screws as shown in picture #3.

STEP 3: First Hang the Side Windows on the Window Rail labeled "B" in picture #1. Refer to picture #6 and the Completed View on Page 3.

STEP 4: Remove the Metal Window Rod from the Rear Window. Hang the Rear Window on the Center of the Window Rail labeled "A" in picture #1. Refer to picture #6 and the Completed View on Page 3.

STEP 5: Install the Hanger Brackets onto the Bow Assembly.

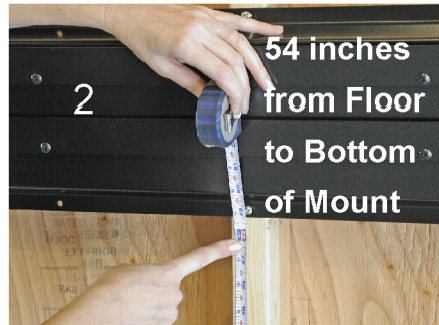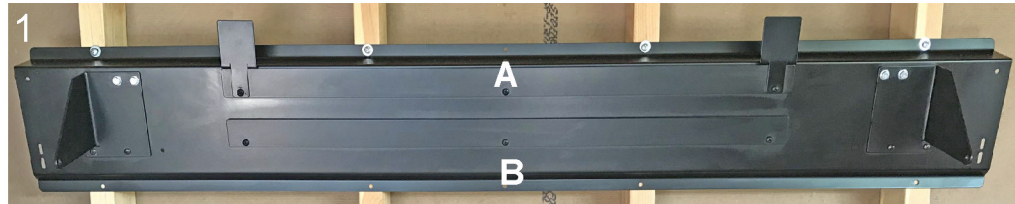


Before Using This Product, Make Sure You Read Your Owners Manual on How to Remove the Soft Top. Pay Particular Attention to the Locking of the Soft Top Bow Assembly Before you Remove the Top. Below is a Link to a Mopar Video on Installing & Removing the Soft Top. The Section on Locking the Bow Assembly is near the End of the Video. Not Locking the Bow Assembly can lead to Serious Injury. It is a 2 Person Job.

<https://www.youtube.com/watch?v=e0u25wlyRwl>

The Soft Top must be Folded Down and the Locking Spring Assembly must be in the **Locked Position** and Disconnected from the Jeep. (Do NOT Remove the Soft Top from the Jeep) Attach the Soft Top Hanger Brackets to the Soft Top Bow Assembly using the 5/16th Thumb Bolts & Wing Nuts included in the Kit. There is a Driver Side and a Passenger Side as shown in pictures 4 & 5. Pictures 4A and 5A show the Orientation of the Brackets. The Long Vinyl covered Bolt that are attached to the Hanger Brackets will be positioned so that they go through the Bow Assembly as shown by the Yellow Circles in pictures 4 A & 5 A.



Driver Side

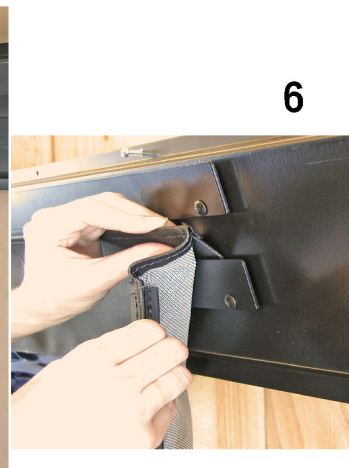

Passenger Side



4 A




5 A

STEP 6: With 2 People, carry the Soft Top to Wall Hanger and Attach the Bow Assembly to the Wall Mount using the Two 5/16ths Thumb Screws & Wing Nuts as shown by the Yellow Circles in picture #7. The Soft Top Windshield Latches should Face Out when the Bow Assembly is Attached to the Mount as shown by the White Circles in picture # 7. **THIS IS A 2 PERSON JOB!**

STEP 7: Lay the Rear Window Bar on top of the Wall Mount as shown by the Arrow in picture #7.

7

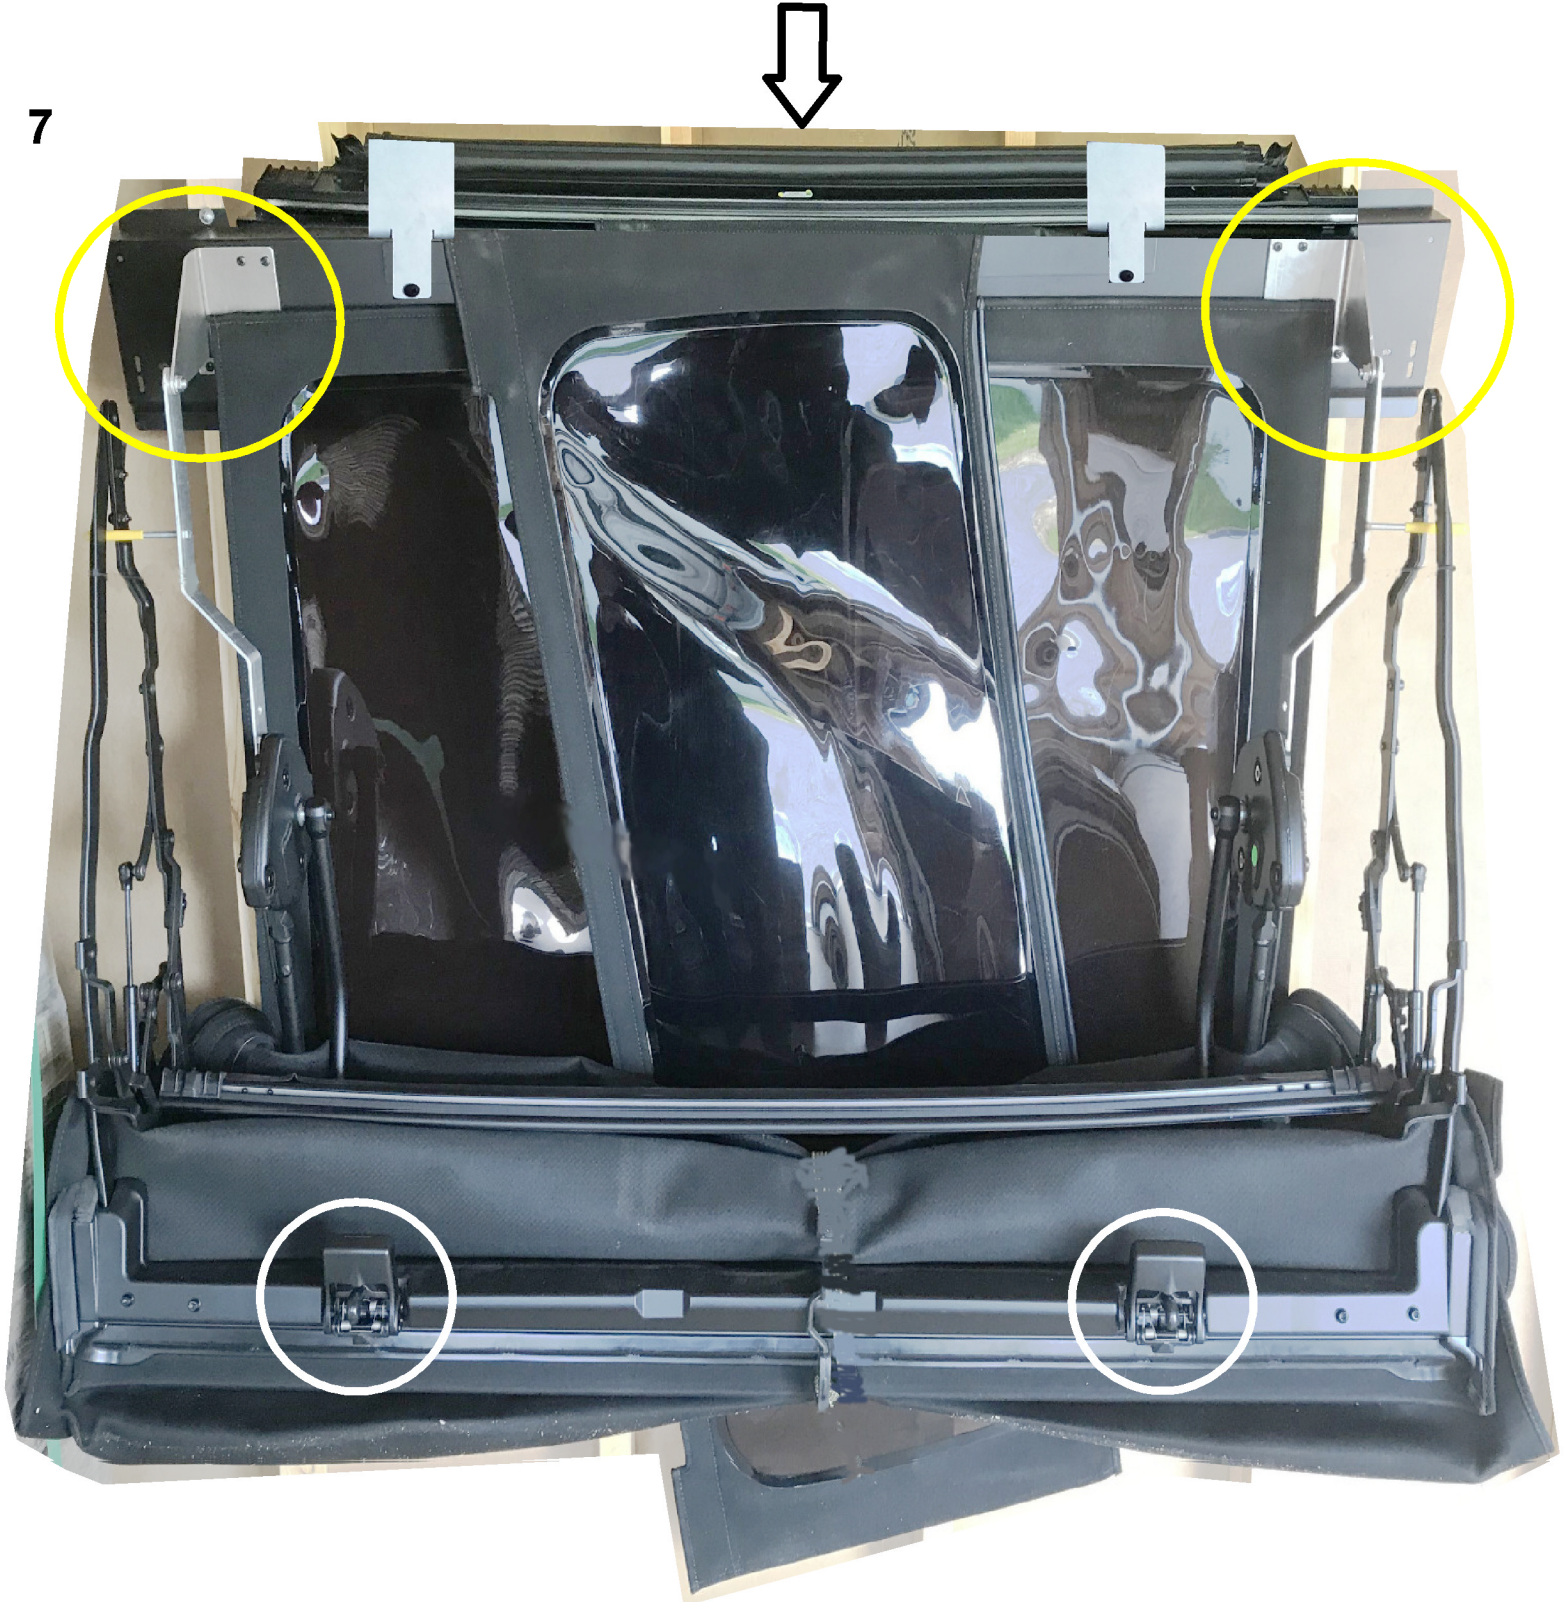

Questions or Comments call Bob 610-358-1886

JL - STS4D Parts Included

1 - Hardware Bag


2 - Bow Assembly Mounting
Brackets w/ Hardware as shown

2 - Soft Top Bow Assembly
Adapters w/ Hardware as shown
(Driver Side/Passenger Side)

2 - Rear Window Bar Tabs

2 - Window Hanger Strips



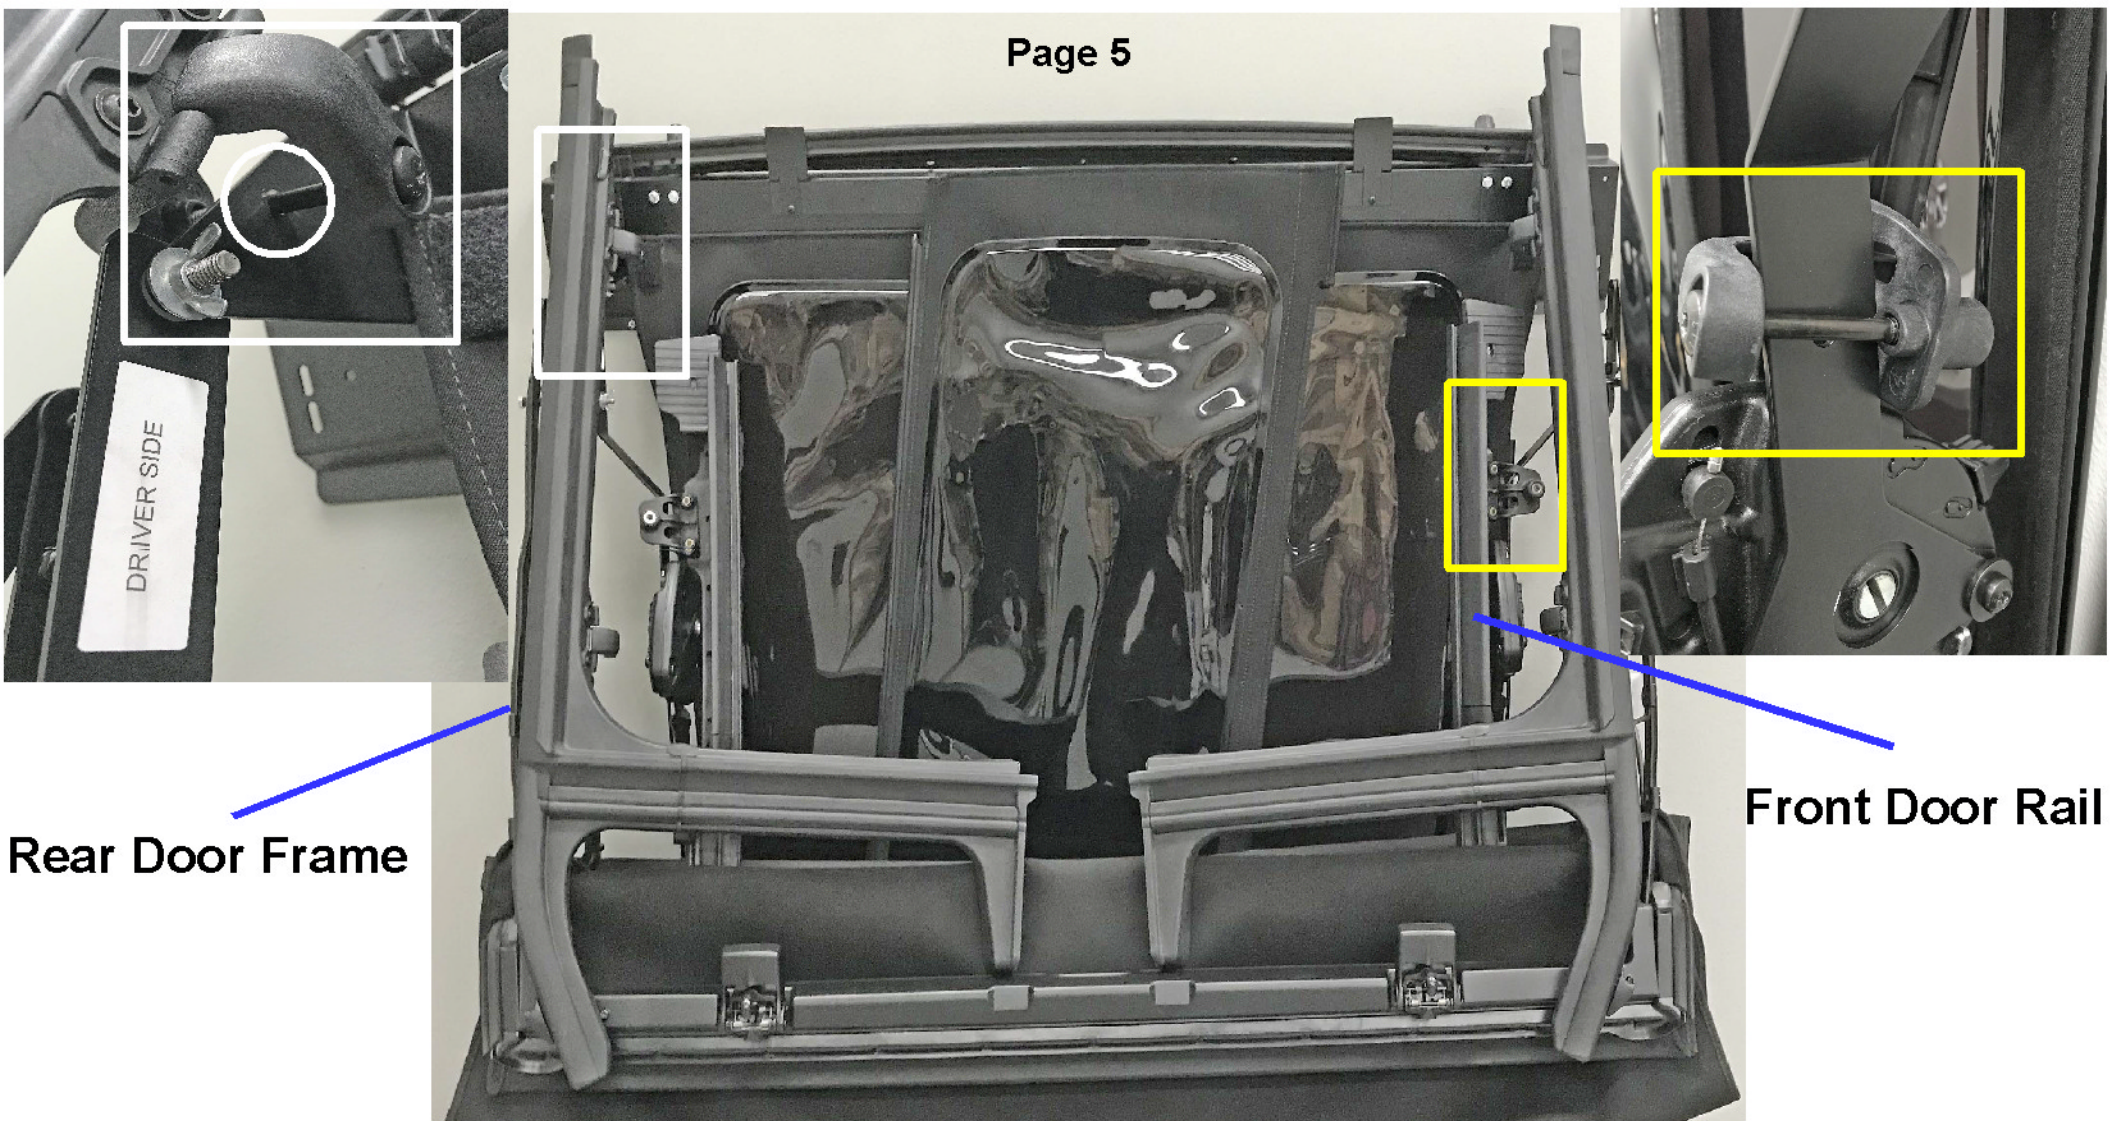

Rear Door Frame

Front Door Rail

After Hanging the Soft Top Bow Assembly on the Storage Hanger, attach the Front Door Rails and Rear Door Frames on the Hanger.

1. Attach and position the Front Door Rail to the Bow Hanger Bracket labeled Passenger Side by using the one of the Door Rail Screw as shown by the Yellow Boxes in the picture above. Repeat for the Driver Side.
(The extra Door Rail Screws can be reattached to the Door Rails for storage)
2. Attach the Rear Door Frames to the remaining hole in the Door Hanger Brackets using a Door Hanger Screw as shown by the White Boxes in the picture above.
(Store the extra Door Hanger Screw in the Rear Door Frame)