






This product can expose you to chemicals including vinyl chloride and lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



rev  
P65

USE HOLES MARKED **A** FOR MOUNTING WITH STUDS 16" ON CENTER  
 USE HOLES MARKED **B** FOR MOUNTING WITH STUDS 24" ON CENTER  
 FASTEN BOTH TOP & BOTTOM ROW OF SCREWS [ #12 X 1 1/2" LONG PHILLIPS SCREWS ]  
 MOUNTING HEIGHT : 48 INCHES MINIMUM FROM FLOOR TO BOTTOM OF MOUNT.

**WARNING:**

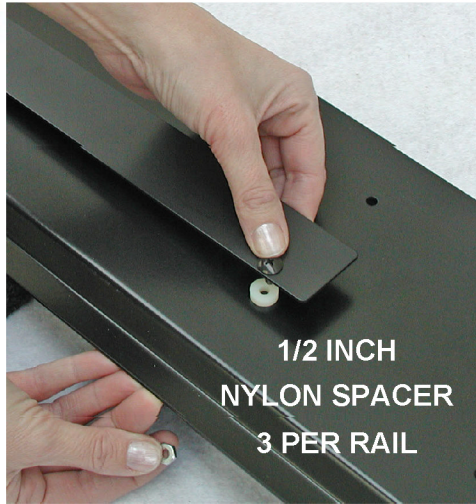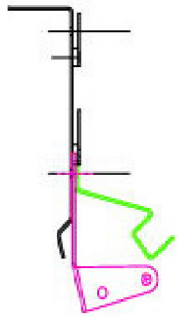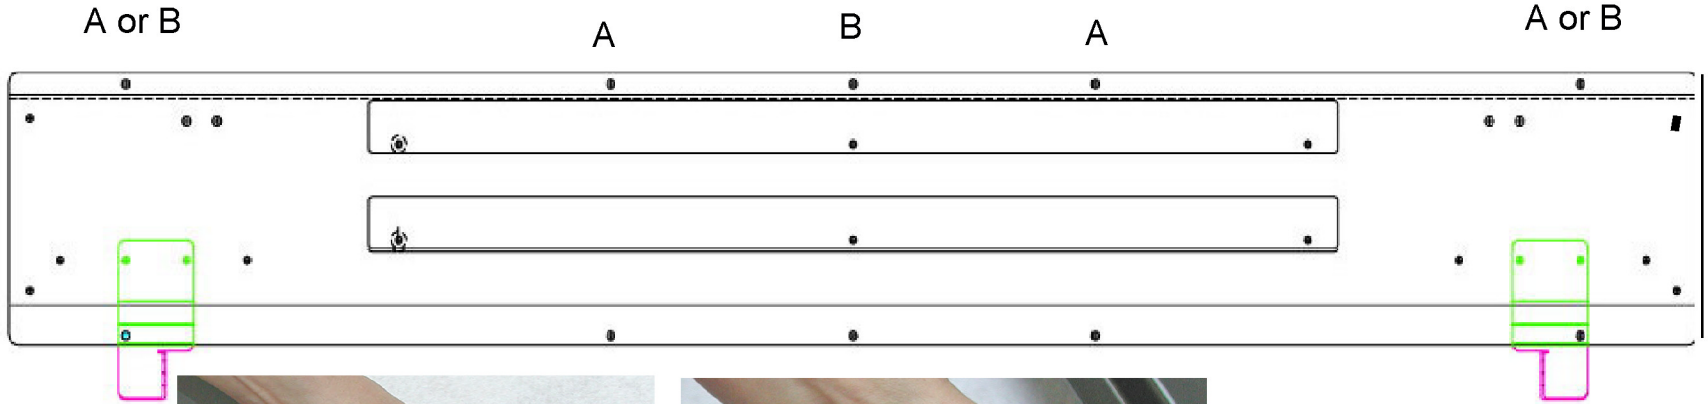

ASSEMBLE PARTS IN PHOTOS # 1, 2, 3, WITH 10/32 BLACK SCREWS & 10/32 NYLOCK NUTS AS SHOWN

**SOFT TOP STORAGE ASSEMBLY VIEW**  
**MODEL # STS JK 4D13**  
**2013 to 2018 JK 4 Door**

\*\*BE AWARE THAT THERE IS A LEFT SIDE AND RIGHT SIDE FOR THE SOFT TOP BOW HANGER BRACKET. THE PHOTO IS SHOWING THE RIGHT SIDE BRACKET.



**JEEP JK WRANGLER  
SOFT TOP STORAGE SYSTEM  
MODEL: STS - JK 4 DOOR 2013 to 2018 JK**



rev  
P65

**STEP 1:** Locate studs on garage wall and mark. The Soft Top Storage Hanger must be assembled before hanging on the wall. ( See Assembly Instructions on page 1)

**STEP 2:** Mounting Height: At least 48 inches from the floor to the bottom row of mounting screws as shown in picture #1. Attach the Soft Top Assembly Mount to the wall with supplied screws as shown in picture #2.



**STEP 3:** After mounting Soft Top Storage System to the wall, you are ready to hang the Soft Top Bow Assembly. (refer to page 3 for preparation of the Soft Top Bow Assembly before proceeding)




**STEP 4:** Hang the prepared Bow Assembly to the Soft Top Storage Hanger as shown in pictures 3 &4.


Follow the procedure outlined on page 3.

\*\*It helps to have 2 people to hang the Soft Top Bow Assembly to the Hanger

**STEP 5:** Hang the Side Windows as shown in picture # 5. Hang the Lower Window on the Mount first.

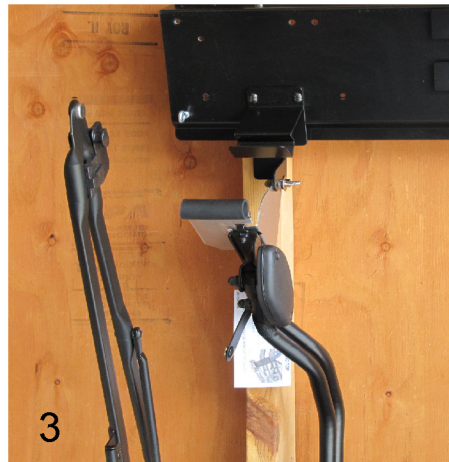


**STEP 6:** Hang the Rear Window next by sliding the Window Tailgate Bar into the Brackets as shown in picture 6 & 7. The zipper side of the window faces out.

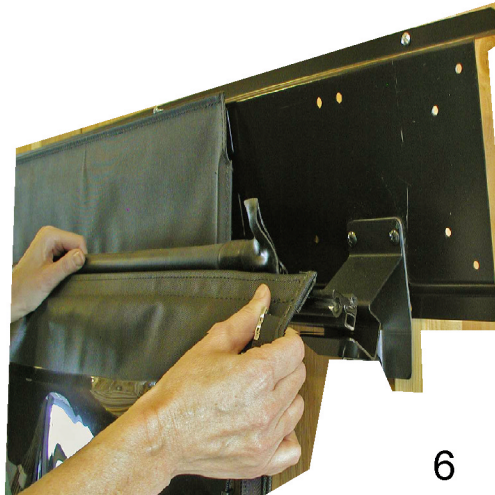

**ANY COMMENTS OR QUESTIONS ? CALL BOB 610-358-1886**



1. Follow opening & closing instructions for your Soft Top, both in the owners manual & on the white tag on your Top as shown in pictures 1 & 2.
2. After folding your Top down, and securing it as shown in pictures 1 & 2 remove the 10 mm Bolts on each side of the Bow Assembly.
3. Remove the Top from the Jeep, and set it on the floor. Attach the 2 Top Adapters to the Top as shown in pictures 3, 4 & 5 using the 10 mm Bolts you just removed. Pay attention to their orientation, this is very important!
4. Hang the Soft Top on the Hanger as shown in picture 4, 5, 6 & 7.
5. Using the supplied Bungee Cords, secure the Soft Top Bow Arms as shown in picture 5 inside the white circle.

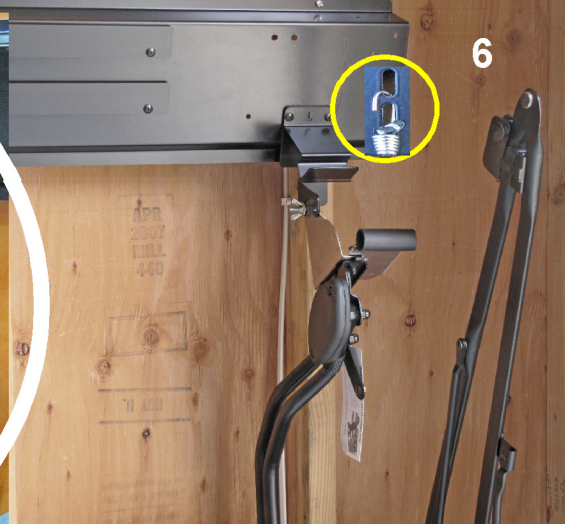

ANY COMMENTS OR QUESTIONS ? CALL BOB 610-358-1886

CFE PRODUCTS 1485 WILMINGTON PIKE WEST CHESTER , PA 19382