







**WARNING !**

Before Using This Product, Make Sure You Read Your Owners Manual on How to Remove the Soft Top. Pay Particular Attention to the Locking of the Soft Top Bow Assembly Before you Remove the Top. Below is a Link to a Mopar Video on Installing & Removing the Soft Top. The Section on Locking the Bow Assembly is near the End of the Video. Not Locking the Bow Assembly can lead to Serious Injury. It is a 2 Person Job.



<https://www.youtube.com/watch?v=e0u25wlyRwl>

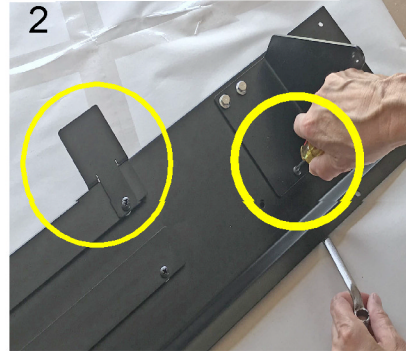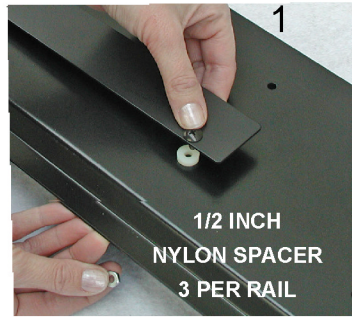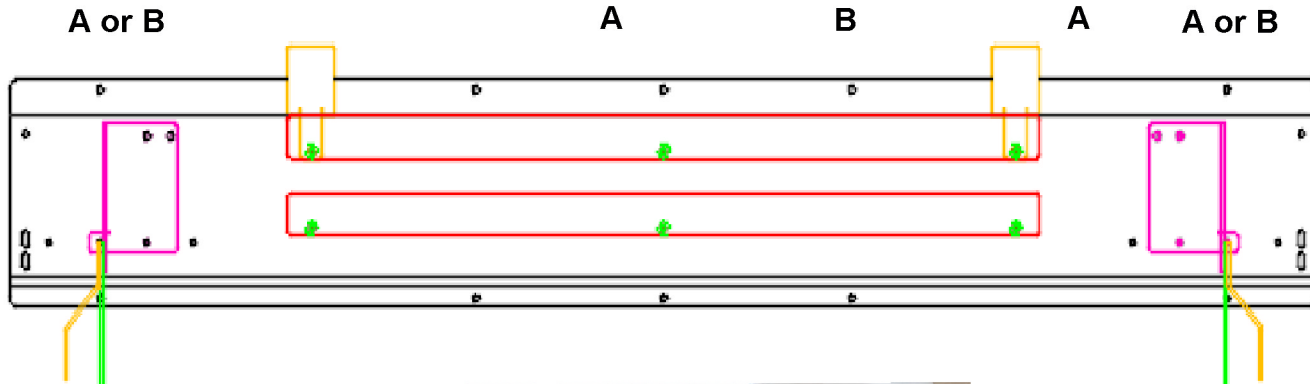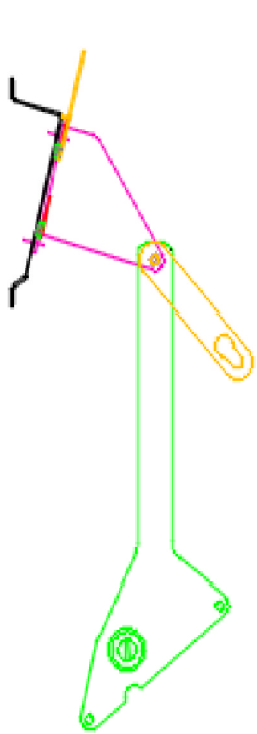

Driver Side

Passenger Side

1. Assemble Parts in Photos # 1, 2, with 10/32 Black Screws & 10/32 Nylock Nuts As Shown.
  2. Use the 4 - 1/4" / 20 Silver Nuts & Bolts to attach the Bow Assembly Mounting Brackets shown by the Yellow Circles in Picture #3.
- \*\*There is a Left Side and Right Side.

**Wall Mounting:**

Use Holes Marked **A** for Mounting w/Studs 16" on Center  
Use Holes Marked **B** for Mounting w/ Studs 24" on Center

Fasten Both Top & Bottom Row of Screws  
( #12 x 1 1/2" Long Phillips Screws)

Mounting Height: 54" Minimum from Floor to Bottom of Mount



**SOFT TOP STORAGE ASSEMBLY VIEW**  
**MODEL # JL - STS2D 2018 & UP**

CFE PRODUCTS 1485 WILMINGTON PIKE WEST  
CHESTER PA 19382 610-358-1886  
Questions or comments / Call Bob

**STEP 1:** Locate Studs on Garage Wall and Mark. The Soft Top Storage Hanger Must Be Assembled Before Hanging on the Wall.

( See Assembly Instructions on Page 1)

**STEP 2:** Mounting Height: At Least **54 INCHES** from the Floor to the Bottom Row of Mounting Screws as shown in picture #2.

Attach the Soft Top Assembly Mount to the Wall with Supplied Screws as shown in picture #3.

**STEP 3:** First Hang the Side Windows on the Window Rail labeled "B" in picture #1& 1b.

Refer to picture # 7 and the Completed View Page 3.

**STEP 4:** Remove the Metal Window Rod from the Rear Window. Hang the Rear Window on the Center of the Window Rail labeled "A" in picture # 1. Hang the Window Rod. Refer to the Yellow Arrow on picture # 7 on Page 3.




**Before Using This Product, Make Sure You Read Your Owners Manual on How to Remove the Soft Top. Pay Particular Attention to the Locking of the Soft Top Bow Assembly Before you Remove the Top. Below is a Link to a Mopar Video on Installing & Removing the Soft Top. The Section on Locking the Bow Assembly is near the End of the Video. Not Locking the Bow Assembly can lead to Serious Injury. It is a 2 Person Job.**

<https://www.youtube.com/watch?v=e0u25wlyRwI>

**STEP 5:**The Soft Top must be Folded Down and the Locking Spring Assembly must be in the **Locked Position** and Disconnected from the Jeep. (Do NOT Remove the Soft Top from the Jeep at this time) The Screws you removed to disconnect the Soft Top Bow Assembly from the Jeep are not used to hang the Bow Assembly on the Wall. Use the supplied bolts to attach the Hanger Brackets to the Bow Assembly. ( Store the Screws you removed from the Jeep in the Rear Storage Compartment)


**STEP 6:** Attach the Soft Top Hanger Brackets and the Bow Assembly Straps to the Soft Top Bow Assembly using the 5/16th Thumb Bolts & Wing Nuts included in the Kit. (Pictures 4, 5 & 6) There is a Driver Side and a Passenger Side as shown in pictures 5 thru 9.

**STEP 7:** Hang the Bow Assembly on the Wall. This is a **2 Man Job**. Refer to picture 7 on page 3.

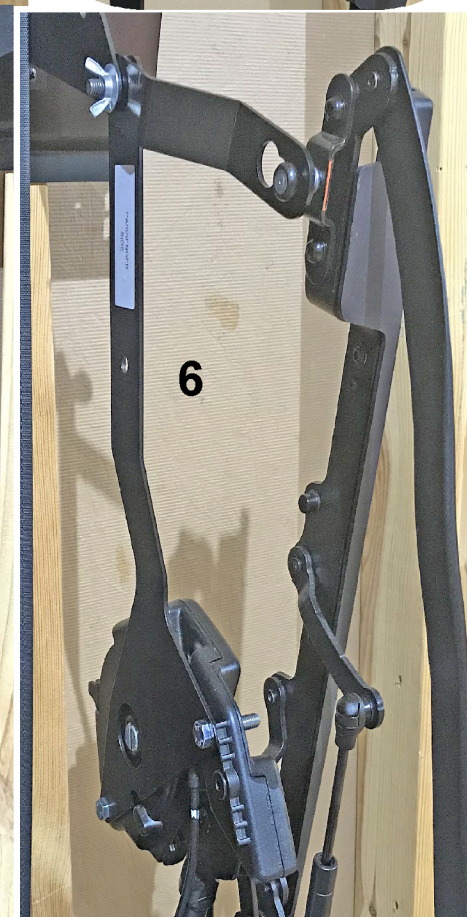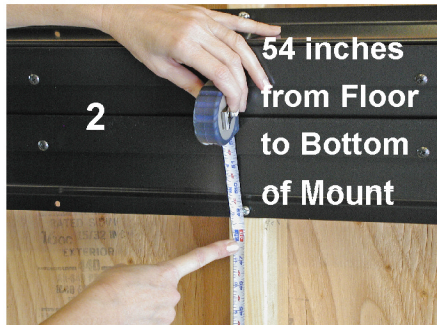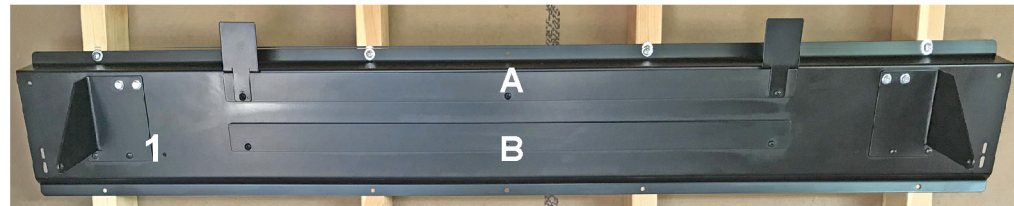

\*\* The Soft Top Windshield Latches should Face Out when the Bow Assembly is Attached to the Mount as shown by the White Circles in picture # 7.

\*\* Lay the Rear Window Bar on top of the Wall Mount as shown by the Yellow Arrow in picture #7.

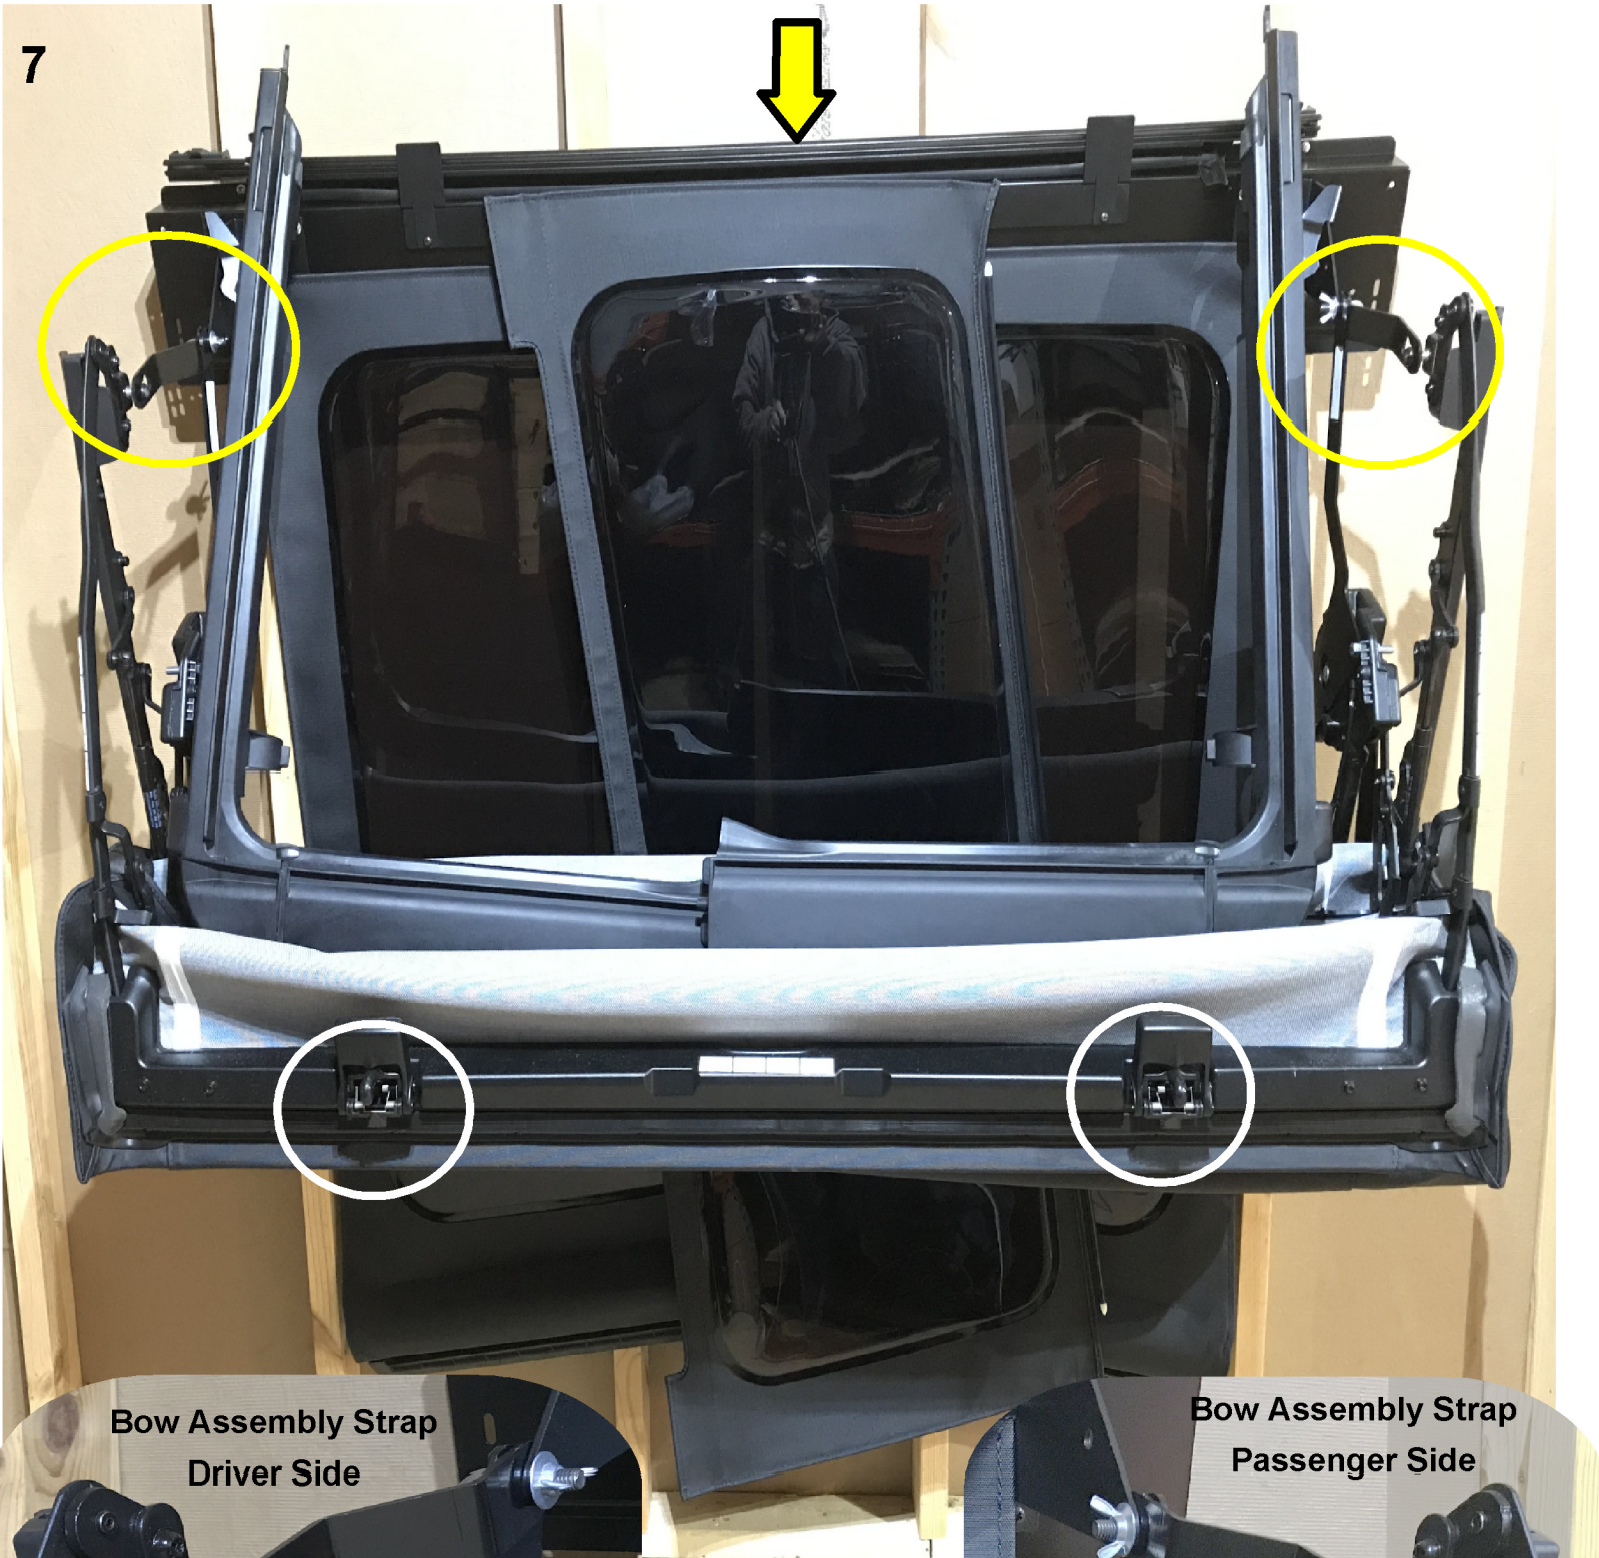

**Bow Assembly Strap  
Driver Side**



**Bow Assembly Strap  
Passenger Side**

