



This product can expose you to chemicals including vinyl chloride and lead, which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

WARNING:

CFE PRODUCTS

MODEL # RCMHD / rev U





Jeep Wrangler Heavy Duty Camera

Mount 2007 & up

INSTALLATION INSTRUCTIONS



1. Choose the Camera Mounting Plate that will work with your application. Plate shown in picture #1b is powder coated aluminum which makes it easy to drill a hole if needed. Picture #6 shows mounting options for one possible camera type that can be used with this plate.
2. Mount the Camera to the Camera Mounting Plate shown in pictures #1 & 2. Identify whether your wheel opening is centered or off-set. Picture #4 shows centered, picture #5 shows off-set.
2. If your wheel is off-set, use the off-set plate shown in picture #1a and assemble as shown in pictures # 5 & 5b.
3. Mount the Bracket to the Spare Tire Carrier using the Nut Washers shown in picture #3. This will hold the Mount in Place.
4. The Camera position can be adjusted forward and back in the tire opening as needed by adjusting the position of the Nuts shown in picture #2.

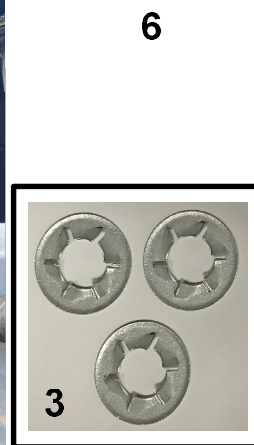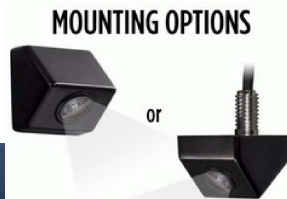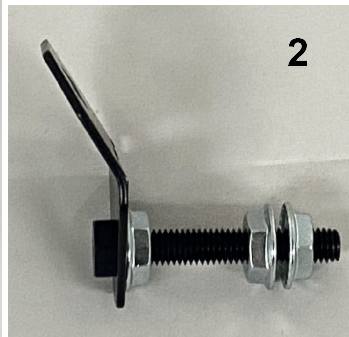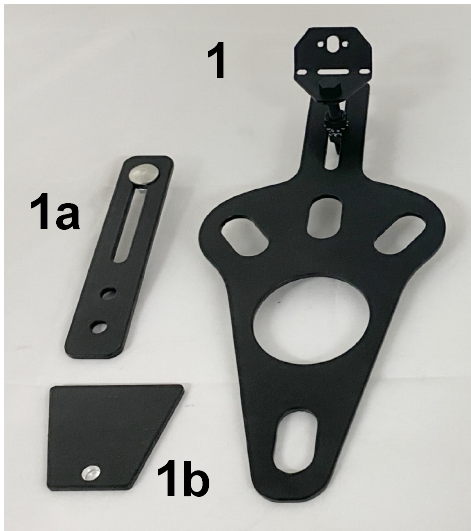

Nut Washers



Questions or Comments ? call CFE PRODUCTS @ 610
358 1886 / ASK FOR BOB