




RHINO-RACK

31112 Rhino-Rack FOXWING Tapered Extension

Important: Please read these instructions carefully prior to installation.
Check the contents of kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.

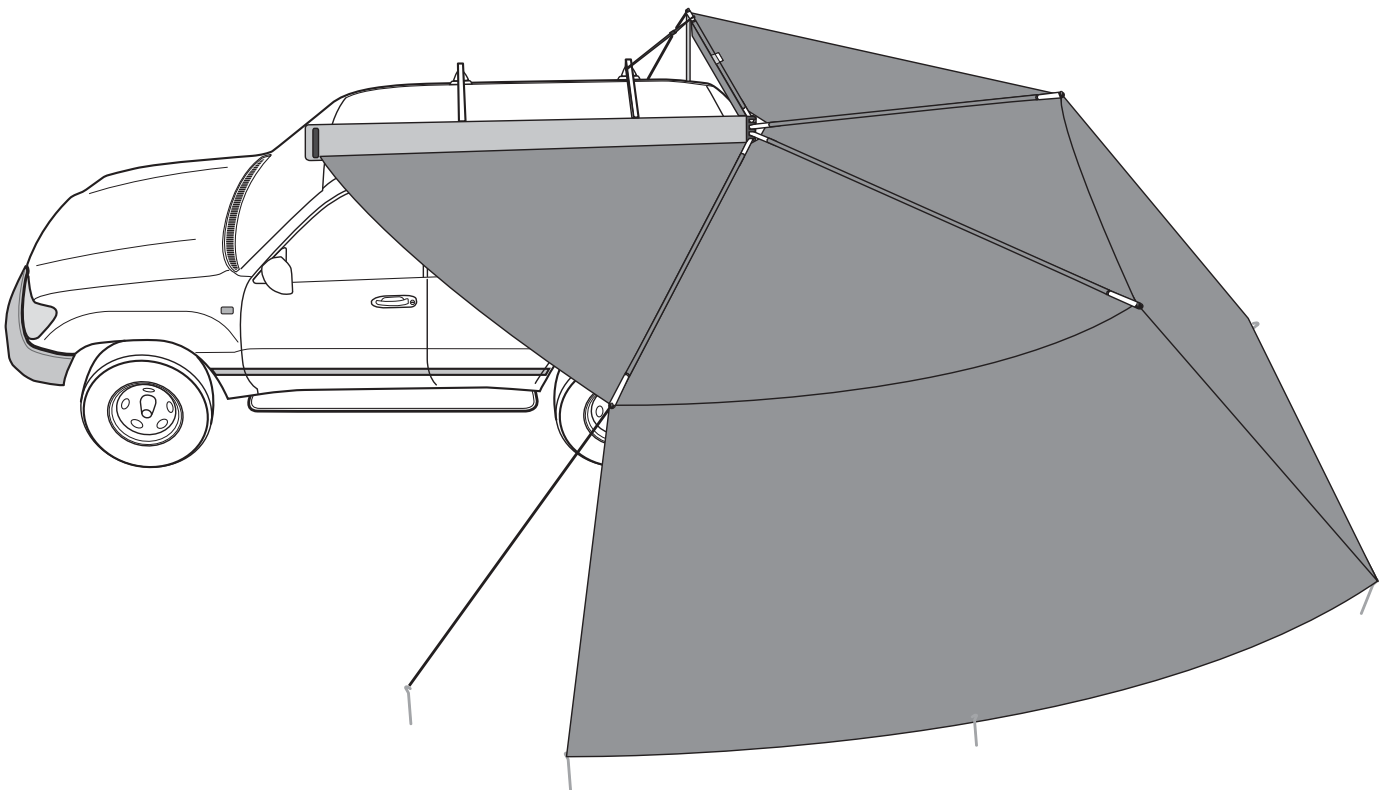

Note : The poles and ropes must always be used when the FOXWING awning is open

This kit is to be used in conjunction with the Rhino-Rack Foxwing Awning

Important Information

Please remove FOXWING Awning and crossbars when putting vehicle through an automatic car wash.

Note for Dealers and Fitters

It is your responsibility to ensure that this fitting instruction is given to the end user or client.

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744
(Fax) (02) 9638 4822

Document No: R189
Prepared By: Kayle Everett
Authorised By: Chris Murty

Fit Time: 3-5min
Issue No: 03
Issue Date: 09/05/2017

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.




31112 Rhino-Rack FOXWING Tapered Extension

Parts List


Item	Component	Qty	Part No.
1	Foxwing Zippered Extension	1	31112
2	Poles	2	C915
3	Guy Rope	2	C910
4	Metal Peg	3	C909
5	Fitting Instruction	1	R189

Tools Required:
Mallet.

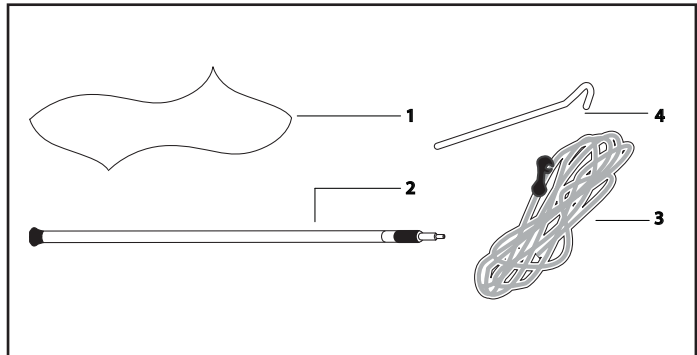

Fitting Instructions

1

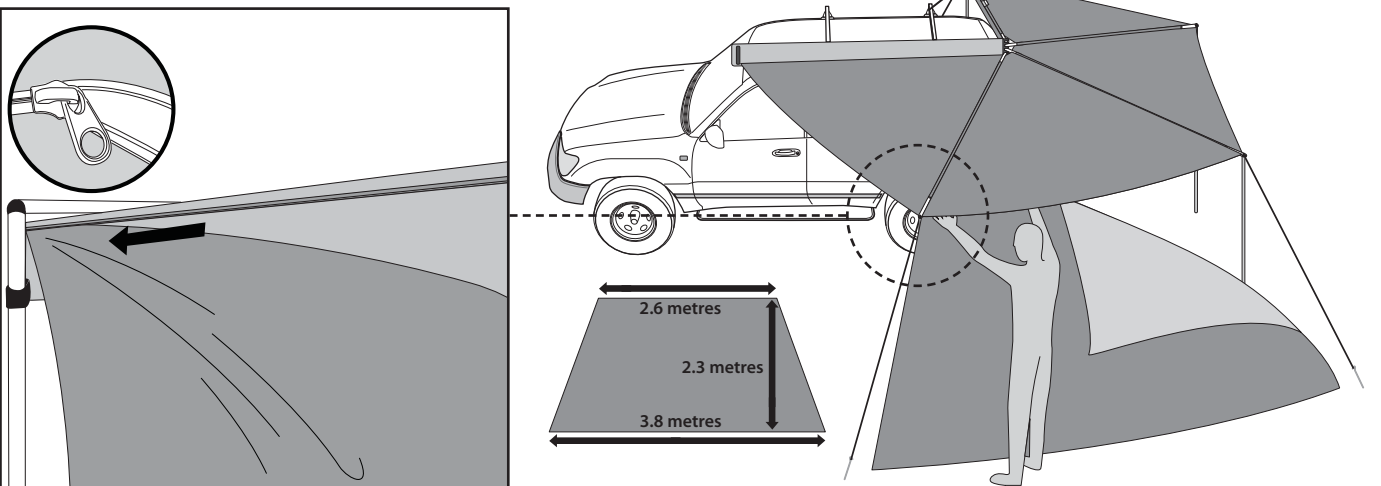

2

The extension can be attached to any of the four sides of the awning. 2 or more extensions can be zipped together to create a wind shield.

