



## TJ ROCK GUARDS

Thank you for choosing Rough Country

Please read instructions before beginning installation. Check the kit hardware against the Kit Contents list and product layout. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

If questions exist we will be happy to answer any questions concerning the design, function, and correct use of this product. Rough Country phone number 1-800-222-7023

### Kit Contents

- 1- Drivers Side Rock Guard
- 1- Pass Side Rock Guard
- 1- Kit Bag
- 16- 3/8" x1" Self Thread Bolts


### Tools Needed

- Drill
- 5/16" Drill Bit
- 14mm Socket
- Center Punch

### INSTALLATION INSTRUCTIONS


1. Remove rock guards from box, lay them out on the floor to distinguish driver side from passengers side. Driver side will be stamped with part # 94001033. Passenger side will be stamped part # 94001034.
2. Place rock guard where the front of the guard is in front of the body mount as shown, and the rear is behind the body mount. **See Figure 1 & 2.** Clamp the front and rear mounting plate in place.

Figure 1

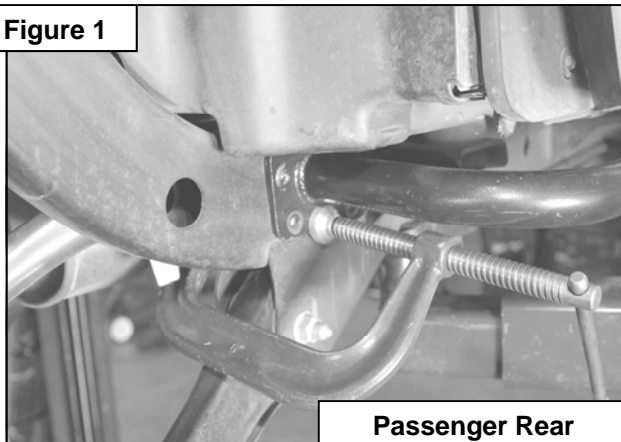

Passenger Rear

Figure 2

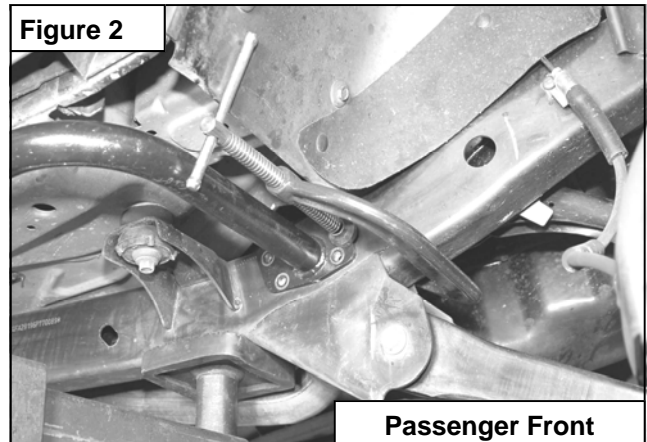

Passenger Front

### PASSENGER SIDE INSTALLATION SHOWN

3. When rock guards are in the desired location and are level, mark holes to be drilled using a center punch. **See Figure 3.** Unclamp the rock guards from the frame rail and remove the rock guards.
4. Using a 5/16" drill bit drill the 8 holes in the frame rail, making sure to keep the drill level when drilling the holes. **See Figure 4.**

5. Clamp the rock guard back in position and using a 14mm socket, bolt the supplied 3/8" x 1" self tapping bolts in place. Torque to 30 ft. lbs Do not over-tighten. **See Figure 5**
6. Repeat on opposite side of the vehicle.

