



# JEEP JK Vertical 8" LED Grille Mount

Thank you for choosing Rough Country for all your suspension needs.

### ▲ NOTICE

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

### KIT CONTENTS


- Upper Dr & Pass Brackets(1 of each)
- Lower Dr & Pass Brackets(1 of each)
- Upper Center Bracket (1)
- Lower Center Bracket(1)
- 1 into 2 Wiring Adapters(2)
- 1/4+x 3/4+Bolts (10)
- 1/4+Nylock Nut(10)
- 1/4+Flat Washer (20)

### TOOLS NEEDED



- 7/16 Wrench
- 7/16 Socket
- Flat Screwdriver
- Pliers
- Drill
- 9/32 Drill Bit

### INSTALLATION INSTRUCTIONS

1. Open the hood and locate the (6) push pins from the top of the grill. **See Photo 1.**
2. Using a screwdriver, remove the push pins and retain for reuse. **See Photo 2.**

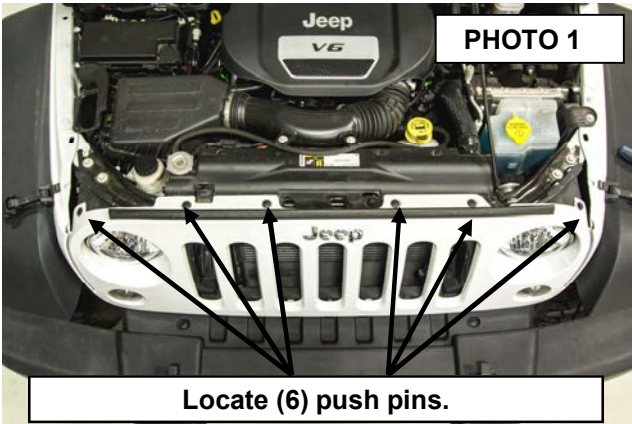

3. Unplug the turn signals from the rear of the grille. **See Photo 3.**
4. Carefully pull the lower part of the grille away from the Jeep to release the clips. **See Photo 4.**

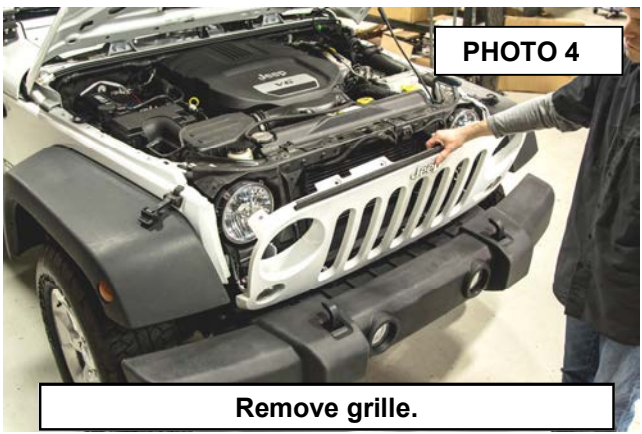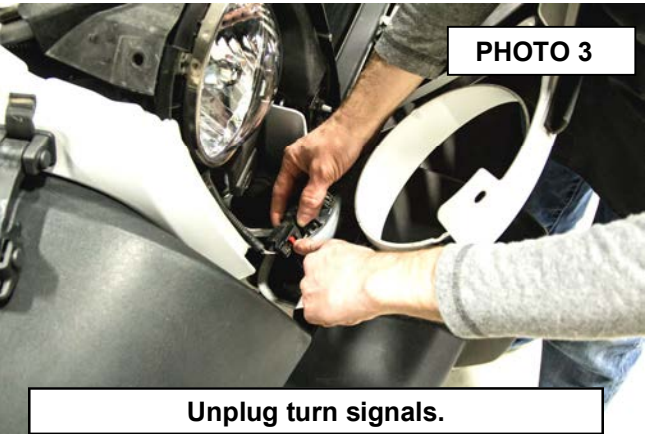


- Using supplied 1/4+bolts, nuts, and washers, install lower end brackets onto the lower center bracket. **See Photo 5. Do not tighten at this time.**
- Place onto lower grille support. **See Photo 6.**



- Measure 5/8+from the inside edge of the grille support to the edge of the bracket and mark the center of the hole. **See Photo 7.**
- Using a 9/32+drill, drill the lower mounting holes in the lower radiator support. **See Photo 8.**



- Attach the assembled brackets to the lower radiator support with the supplied 1/4+hardware. **See Photo 9. Do not tighten at this time.**
- Remove the wire loom from the upper radiator support. **See Photo 10.**

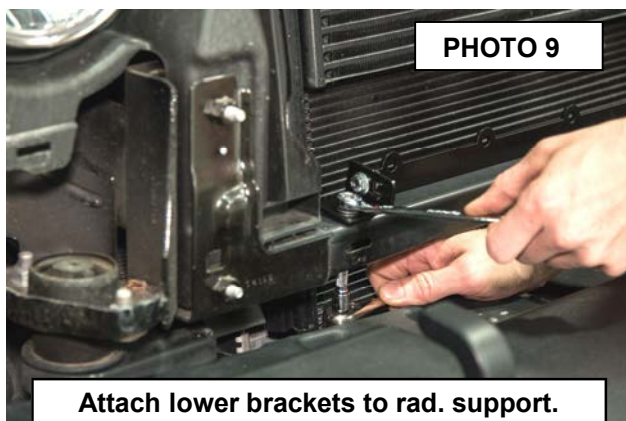

11. Using a 9/32+drill **carefully** drill out existing holes in upper radiator support on both sides. **See Photo 11.**

**▲ NOTICE Do not drill into radiator.**

12. Install the upper dr and pass side brackets with the supplied 1/4+hardware. **See Photo 12. Do not tighten at this time.**



13. Install upper center bracket into dr and pass side brackets using the supplied 1/4+hardware. Clip factory wiring harness into holes in Rough Country brackets. **See Photo 13. Do not tighten at this time.**

14. Install the Rough Country 8+LED lights into desired mounting tabs on the upper and lower brackets, using the supplied light hardware. **See Photo 14.**



15. Tighten the light with the supplied Allen wrench. **See Photo 15.**



16. Tighten all 1/4+hardware using a 7/16+wrench and socket.

17. Wire lights according to instructions included with the light. **If more than 2 or 3 lights are desired, use 94700012 wiring harnesses supplied with the mounting bracket kit.**


18. Plug turn signals back in and align the lower grille clips. **See Photo 16.**



19. Carefully push grille back into place and secure with the (6) push pins in the top of the grille. **See Photos 17 & 18.**

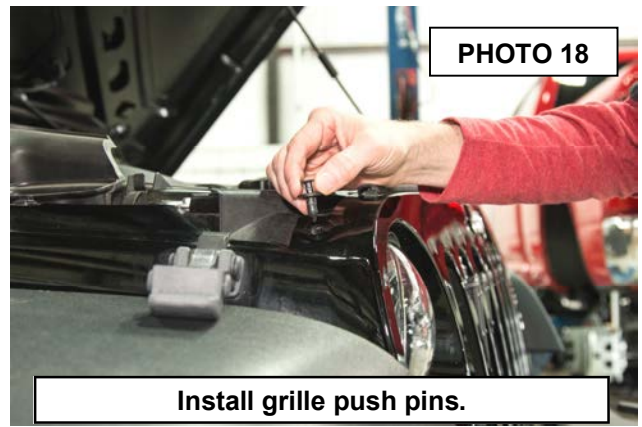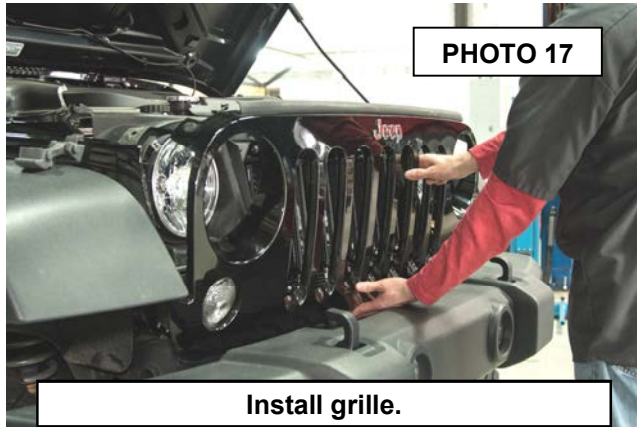

Shown with (5) Rough Country 8" Black Series Single Row lights.

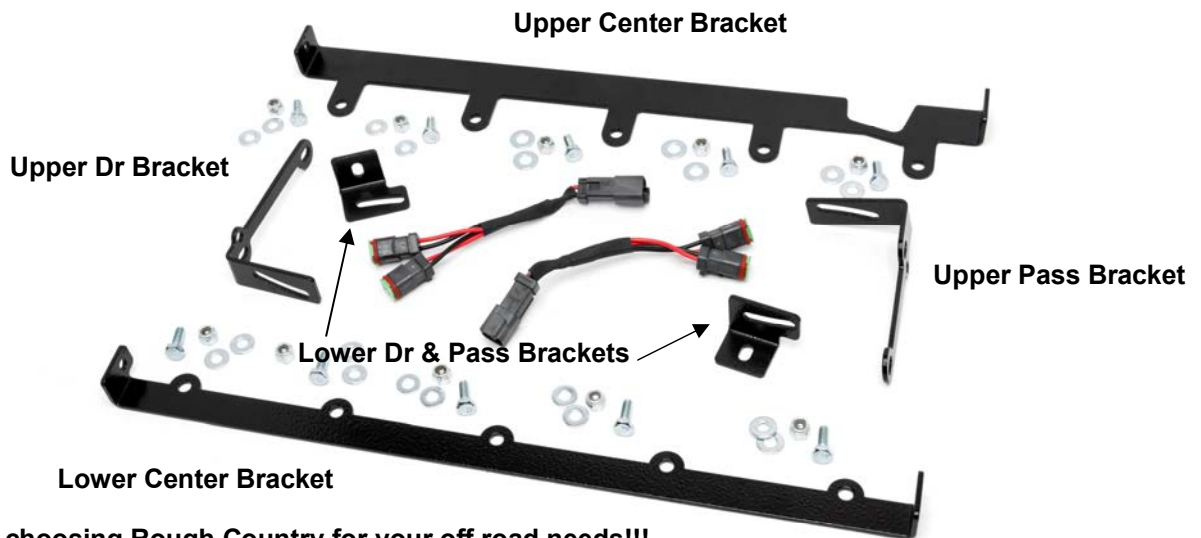

**Thank You for choosing Rough Country for your off road needs!!!**

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

