




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Part #13579.50

# Eclipse Front Tube Door Covers

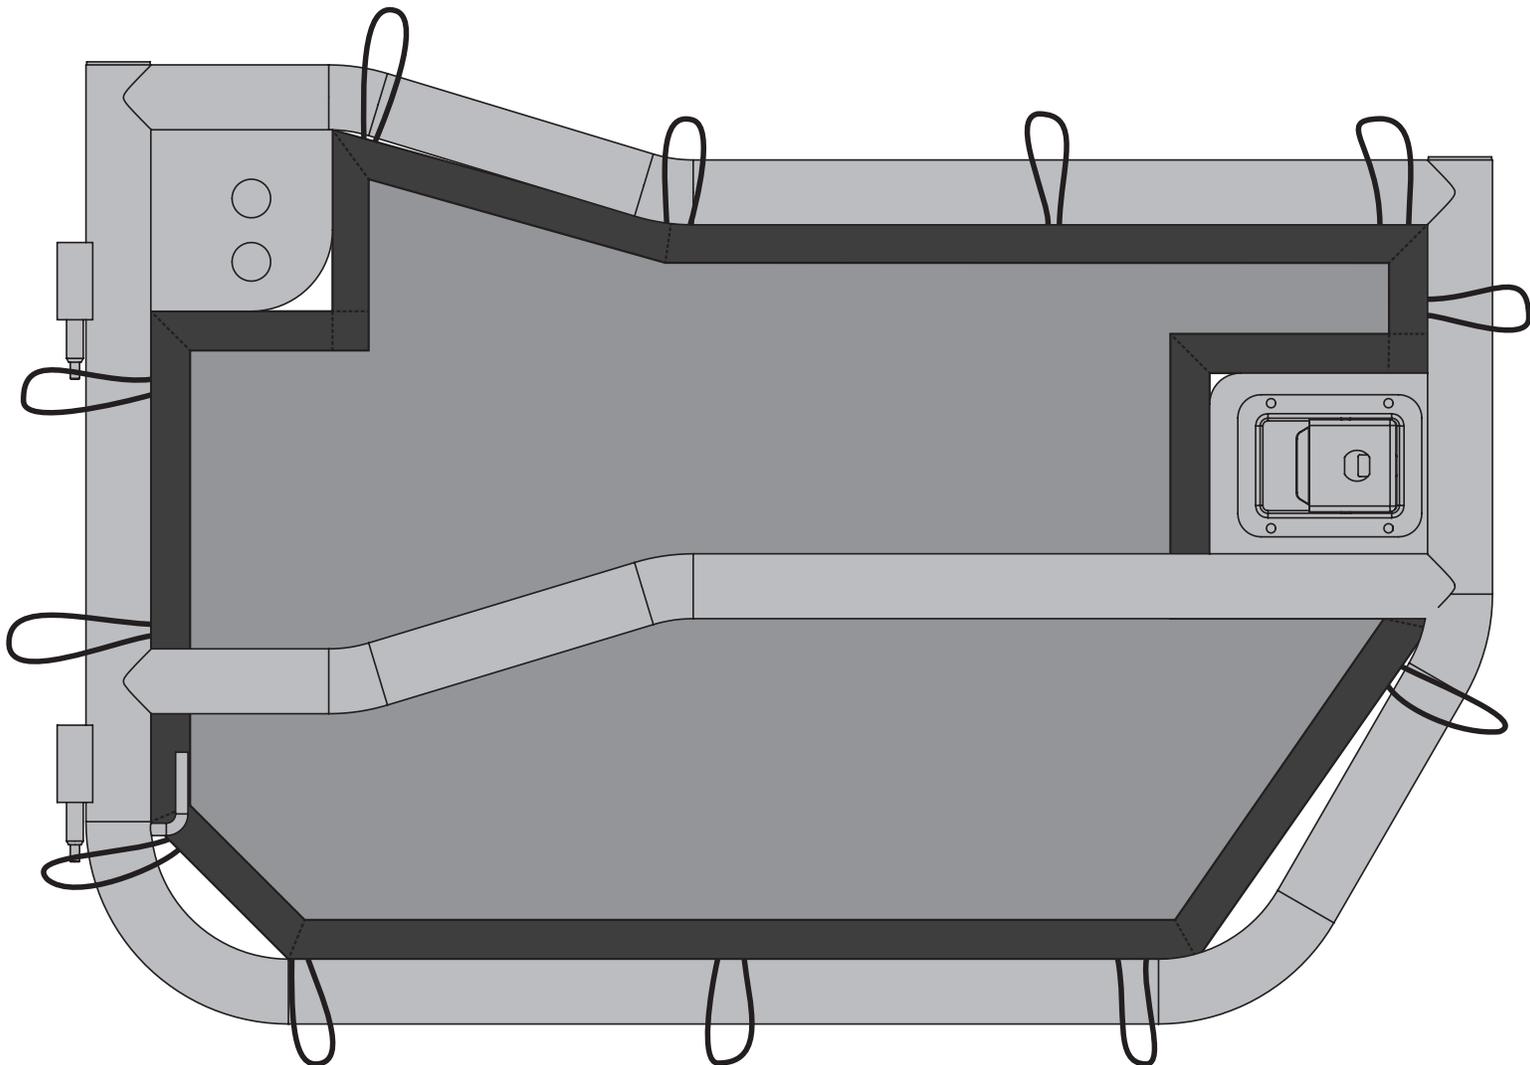

### Installation Instructions:

1. From inside of door, wrap and secure bungees around perimeter of Front Tube Door as shown above.
2. Adjust position of toggle closures as necessary to center Eclipse Tube Door Cover on Tube Door.
3. Repeat for second side.

**OMIX-ADA® TECHNICAL SUPPORT**

**PHONE:** M-F 8am - 5pm EST 1-800-449-6649 | **EMAIL:** techsupport@omix-ada.com

**FOR WARRANTY INFORMATION VISIT:** [www.Omix-Ada.com](http://www.Omix-Ada.com)