

FRONT SKID PLATE

07-18 JEEP JK

SPJK-01



TOOLS REQUIRED

- #6 Allen Tool
- 13mm, 16mm sockets
- 7/16" Drill Bit or Step Bit
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hour

Time to install this should only take about one hour and half hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- | | |
|-----------------------------------|----------------------|
| (2) M10x35 Hex Bolts | (2) M8x25 Hex Bolts |
| (2) M10 Split Washers | (2) M8x18 Nutserts |
| (2) M10 Flat washers | (2) M8 Split Washers |
| (2) M10 Nut-Clips | (2) M8 Flat washers |
| (4) M10x25 Countersunk Head Bolts | |



STEP 1 | Remove the factory skid plate if equipped.

Using a 7/16 drill bit, drill out the crash bar crossbar hole on each side.


Note: A step bit can be used as well, ensure the hole drilled out no larger than 7/16"



INSTALLATION MANUAL

STEP 2 | Replace the factory nut clips on each end of the cross bar with the provided M10 nutclips as shown.

Remove all center factory nut clips.

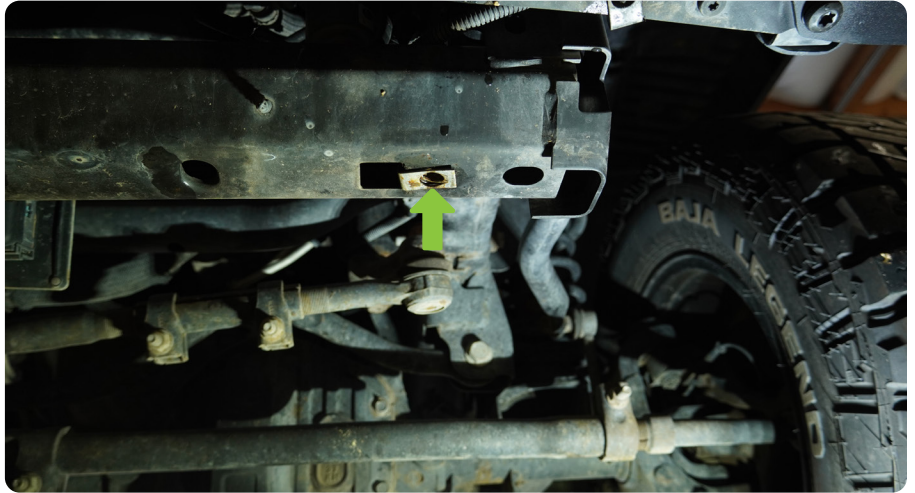

STEP 3 | Using your chosen nutsert tool, install the provided M8 nutserts in to the previously drilled out 7/16" hole.



INSTALLATION MANUAL

STEP 4 | Using a 13mm and 16mm socket, mount the provided skid plate bracket using the provided M8 and M10 hex bolts with (1) split washer and (1) flat washer per M8 and M10 bolt.





STEP 5 | Mount the skid plate to the skid plate brackets using the provided M10 countersunk allen head bolts using a #6 allen tool.



STEP 6 | Double check that all hardware is secured.

Congratulations, you are done with installation of the DV8 JK skid plate.

