



JL4D Install Instructions:

*patent pending design

Welcome to the SPIDERWEBSHADE JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep and SPIDERWEBSHADE provide everything you will need to make this install a breeze.

1

Use the socket in the Jeep® toolkit provided to remove your windshield wipers. (refer to your owner's manual)



2

Use the ratchet in the Jeep® toolkit provided to remove the (4) T40 windshield bolts and carefully lower the windshield onto the hood pads.





3

Attach the (4) header clips to the header rail and then reconnect your windshield and wipers.



4

Locate the correct (10) factory T25 screws to remove and add the custom Spider-Nubs then replace the (10) factory T25 screws. 5 per side

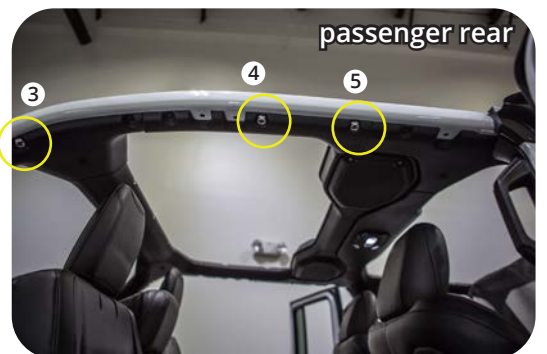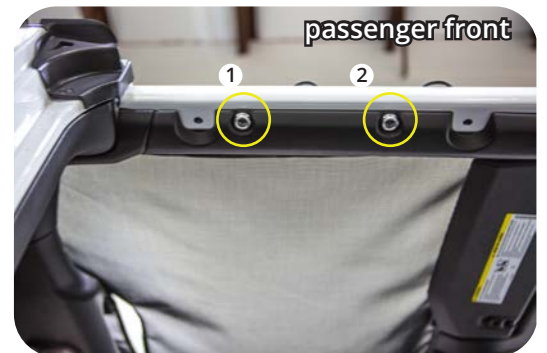

5

Attach the (10) shock cord loops to the new SpiderNub mounting locations and your install is complete.





SPIDERWEBSHADE.COM  **BUY AMERICAN**