

Savvy Off Road License Plate Relocator TJ/LJ 1997-2006

Thank you for the purchase of our License Plate Relocator Bracket. The slim profile of the Savvy Tail Lights requires the OEM license plate mount to be lowered and the license plate relocator bracket is the solution.

The license plate relocator bracket is made of stainless steel for maximum rust prevent. It has such a small footprint making it difficult to notice that its installed. Should you choose to install license plate lighting there are four oversized washers that provide additional clearance for license plate wiring.

Enclosed you will find a set of instructions that will enable you to install the License Plate Relocator with a minimum of fuss and little more than basic hand tools. If you attempt the install and find yourself not understanding what needs to be done, please contact Savvy Off Road with your technical issue.

Please take the time to read these instruction and familiarize yourself with the hardware parts list before attempting your installation. The instructions are detailed, but are written to provide you with a step-by-step guide to install the Savvy License Plate Relocator with minimal issues.

Parts and tools needed for installation- Outside of the parts supplied in the kit, you will need personal safety equipment, assorted hand tools and allen bits to complete the installation.




Hardware Parts List

| <u>Hardware</u> | <u>Quantity</u> |
|--|------------------------|
| License Plate Relocator Bracket (A) | 2 |
| 10-32 Nylon-Insert Hex Locknuts (B) | 8 |
| 10 - 32 x 1" Stainless Steel Button Head Socket Cap Screws (C) | 4 |
| #10 Stainless Steel Washers (D) | 8 |
| #10 Stainless Steel Oversized Washers (E) | 4 |




Step 1

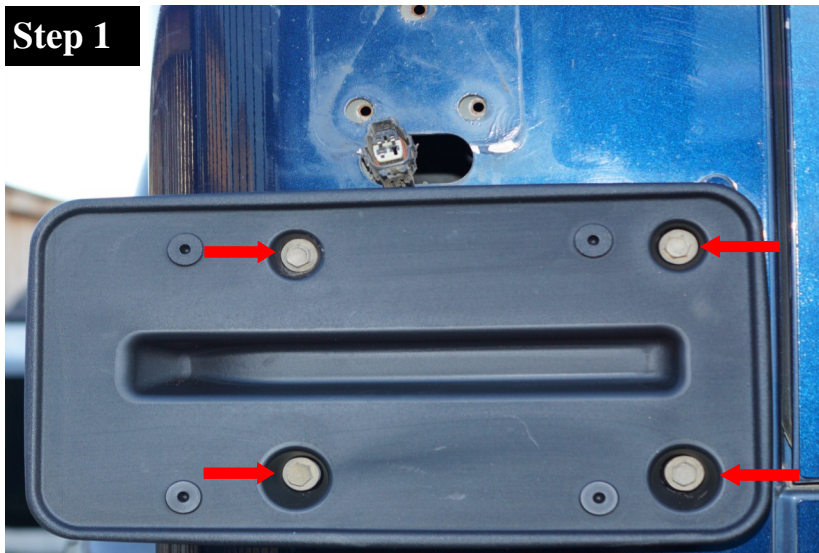

Remove the four screws that hold the license plate mount (**red arrows**).

Step 2

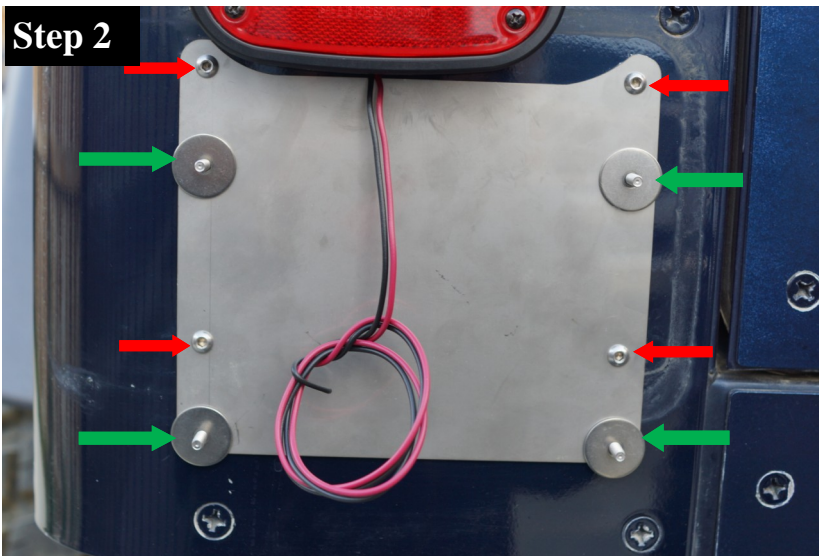


Install the License Plate Relocator (A) as shown with studs facing outwards.

Install the (4) 10 - 32 x 1" Button Head Socket Cap Screws (C) as shown by the (**red arrows**) with (4) #10 Stainless Steel Washers (D) and (4) 10-32 Nylon-Insert Hex Locknuts (B) behind the tub.

Install the (4) #10 Stainless Steel Oversized Washers (E) on the threaded studs (**green arrows**) to allow room for license plate light wiring if needed.

Step 3

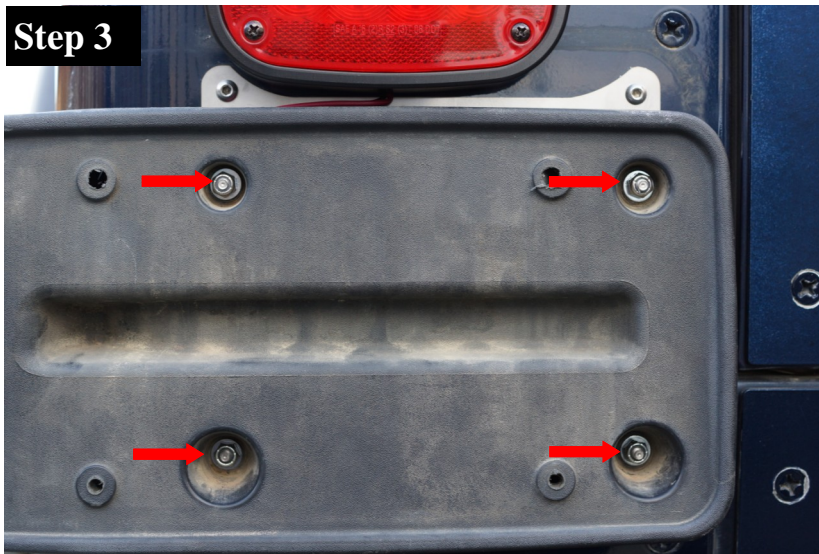

Reinstall the OEM Stock License Plate Holder using (4) #10 Stainless Steel Washers (D) and (4) 10-32 Nylon-Insert Hex Locknuts (B) (**red arrows**). Snug only to prevent the studs from spinning.

Using the stock screws to reinstall your License Plate.